



# Long Range Walkie Talkies™

Talk to fellow agents up to 2 miles (3.2km) away!

Ages 6 and up  
10521

Requires 3 AAA (LR03)  
Batteries, not included.

**Important: Please save this instruction sheet. It contains valuable product information.**

## FUNCTION DESCRIPTION:

- POWER / DOWN BUTTON:** Press and hold the button to turn your unit on/off Press the button to decrease the speaker volume.
- MENU/UP BUTTON:** Press and hold the MENU button to activate the Channel and function selector. Press the MENU button to increase the speaker volume.
- PTT/CALL button:** Press and hold PTT/CALL button to transmit.  
**PTT/CALL:** Press PTT/CALL button twice to Call

## LCD PANEL ICON DESCRIPTIONS

- Receiving Icon- Displayed when receiving a signal
- Transmitting Icon-displayed when transmitting a signal
- Display of current volume
- SCAN** Displayed during the Channel Scan mode
- Display of the Current Battery level
- Channel number

## OPERATION

### Turning the unit ON

- Press and hold the button. The unit will beep and the LCD display will display the current channel.

### Turning the unit OFF

- Press and hold the button The unit will beep and the LCD display will turn blank.

### Adjusting speaker volume

- Press the MENU button to increase the speaker volume. Press the button to decrease the speaker volume. The speaker volume level is indicated by the number of bars displayed in the lower left corner of the LCD display.

## RECEIVING COMMUNICATION

- When the unit is switched on and not being used for speech or calling it is always in the receiving mode.
- Pressing the PTT/CALL button automatically overrides and turns off the receiving mode.

### Calling another walkie talkie

- Turn the volume up to an audible level
- Set both units to the same channel.
- Press PTT/CALL button twice to Call. The receiving unit will make a 2 second call tone.

### Changing channels

The Long Range walkie talkie has 22 channels.

To change channels:

1. Press and hold the MENU button until the current channel number and (ch) ICON flash on the LCD display
2. While the channel number is flashing:
  - Press the MENU button to move to a higher channel.
  - Press the button to move to a lower channel.
3. Press and hold the MENU button to choose the desired channel and return to normal mode OR press the PTT/CALL button


## MONITOR

This feature helps in receiving signals at maximum range, but will pick up loud static signals too.

- Press the on and MENU buttons at the same time to activate the MONITOR.
- Press the on or MENU button to change the speaker volume.
- Press the PTT/CALL button to restore to normal.

## CHANNEL SCAN

- Your Long Range Walkie Talkie can scan across 22 channels allowing it to search for other walkie talkies without changing channels. To Scan:
  - Press and hold the MENU button until the current channel number and (ch) ICON flash on the LCD display.
  - Press the PTT/CALL button to select the SCAN feature.
  - Press the MENU button to ON to activate the channel scan. The channel numbers will run through rapidly on the display. When a signal is detected, the channel scan pauses keeping the active signal broadcasted. Press the button to search for another active channel.
  - To stop the scanning operation, press the PTT/CALL button again,

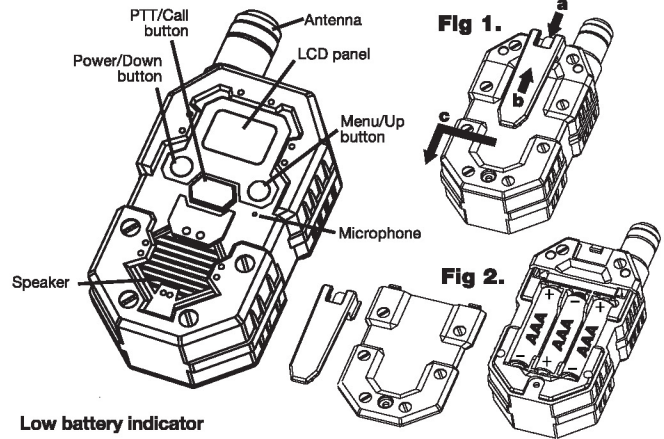

## Low battery indicator

When the batteries need to be changed, the battery level icon will flash. To ensure uninterrupted communication, replace the batteries as soon as possible.

## Attention Adults- to Replace Batteries

The Long Range Walkie- Talkies require three AAA batteries (LR03), not included.

1. Remove the Belt clip (a) pinch tab inside the top of the clip (b). Slide clip up to release and (c) slide battery cover down and off (Fig.1)
2. Use a small Phillips screwdriver to loosen the screw in the BATTERY COVER. NOTE: screws will not detach from battery compartment cover
3. Remove the cover
4. Place Batteries in the compartment as shown in (Fig. 2)
5. REPLACE the BATTERY COVER and tighten screws

## BATTERY SAFETY INFORMATION

- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short circuited.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel- cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type recommended to be used.
- Do not dispose of batteries in a fire; they may explode.
- Dispose of batteries safely.

FCC ID:2AB4XAMP10521

## GMRS LICENSE:

USE OF THIS RADIO WITHIN THE UNITED STATES REQUIRES AN FCC GMRS LICENSE. AN INDIVIDUAL 18 YEARS OF AGE OR OLDER, WHO IS NOT A REPRESENTATIVE OF A FOREIGN GOVERNMENT, IS ELIGIBLE TO APPLY FOR A GMRS SYSTEM LICENSE. YOU WILL NEED TWO FORMS FROM THE FCC: FCC FORM 159, AND FCC FORM 605 (MAIN FORM AND SCHEDULE F). YOU CAN FIND THE FORMS ONLINE AT: [HTTP://WWW.FCC.GOV/FORMPAGE.HTML](http://www.fcc.gov/formpage.html), OR CALL 1-800-418-3676.

## SAFETY INFORMATION

Your wireless hand-held portable transceiver contains a low power transmitter. When the PTT button is pushed (or the VOX mode is enable) it sends out radio frequency (RF) signals. The device is authorized to operate at a duty factor not to exceeds 50%. In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless devices.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Important:

To maintain compliance with the FCC's RF exposure guidelines hold the transmitter at least 1 inch (2.5 centimeters) from your face and speak in a normal voice, with the antenna pointed up and away.

Do not use your transceiver with a damaged antenna. Unauthorized antennas, modifications or attachments could damaged the transmitter and may violate FCC regulations.

This device is supplied by power source of (3) three 1.5V AAA (LR03) batteries. Please remove the batteries if the device is not used for a long time.

## WARNING!

Do not hold close to the ear. Misuse may damage hearing.

Product specifications subject to change.

Long Range Walkie Talkies 10521-IS-US



**IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT**  
[www.atomicmonkeyproducts.com/help](http://www.atomicmonkeyproducts.com/help)

**WARNING:**  
CHOKING HAZARD-Small parts.  
Not for children under 3 years.