

# User's Guide



Portable

WiFi Speaker  
Model: DiDa  
Brand: COWIN

FC  CE  RoHS 

## **1. Introduction**

---

Thank you for purchasing the DiDa - WiFi speaker, the entirely new concept. It is totally different with Bluetooth speaker and traditional speaker: One or more pieces speaker can be connected with your smart device via router to play same music or different music at the same time.

## **Specification**

### **DiDa**

Output Power:	15W
S/N:	>75dB
Frequency range:	80Hz-20KHz
Power supply:	Lithium battery or USB cable
Function Spec:	WiFi, Bluetooth, Microphone, Line-in
Supported Device:	iPhone, iPad, iPod touch, Android Smartphone and Tablet, Window PC etc.
Support Mode:	Network Connection, Direct Connection, Bluetooth Connection, Cable connection
Size:	6.04x3.67x3.67 inches

 
 
 
Rechargeable battery with charging option from USB cable

### **Operating Range:**

Bluetooth Mode: operating range up to 33 ft

## 2. Function Profile

---

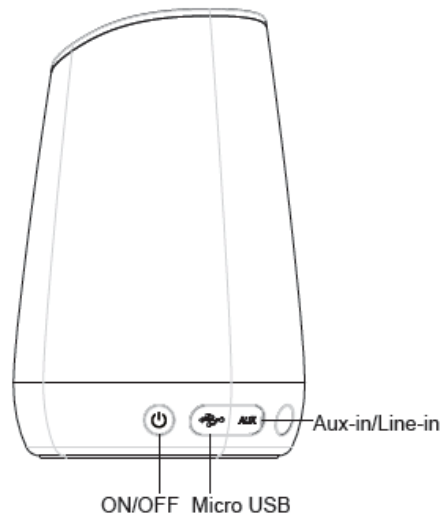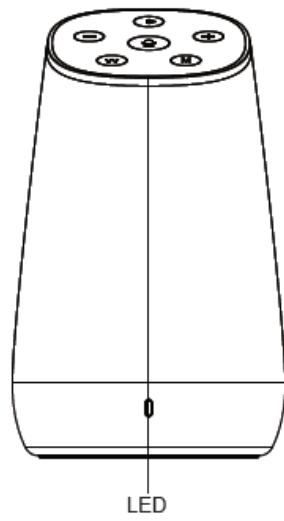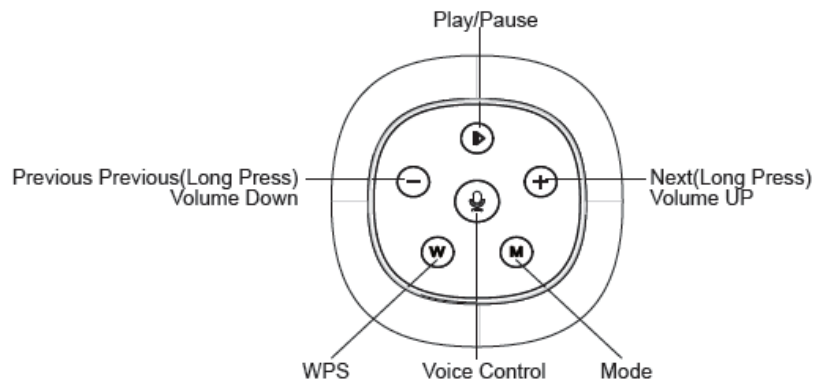

### 3. GETTING STARTED ---

Download the COWIN app in the App Store or Google Play store, then install the app on your device.



 
**Alternate download address**

**iOS app:** <https://dln.bz/i/cowin/2.8.4223>

**Android app:** <https://dln.bz/a/kayo/2.8.0.170321>

## CONNECTING TO WIFI


1.Ensure your device is connected to a wireless network, then open the COWIN app.On the home screen, press "Wi-Fi Setup Wizard" button. You will be prompted to choose your network.Choose "YOUR WIRELESS\_2.4G" from the network list. Please note: only 2.4GHz networks are supported.

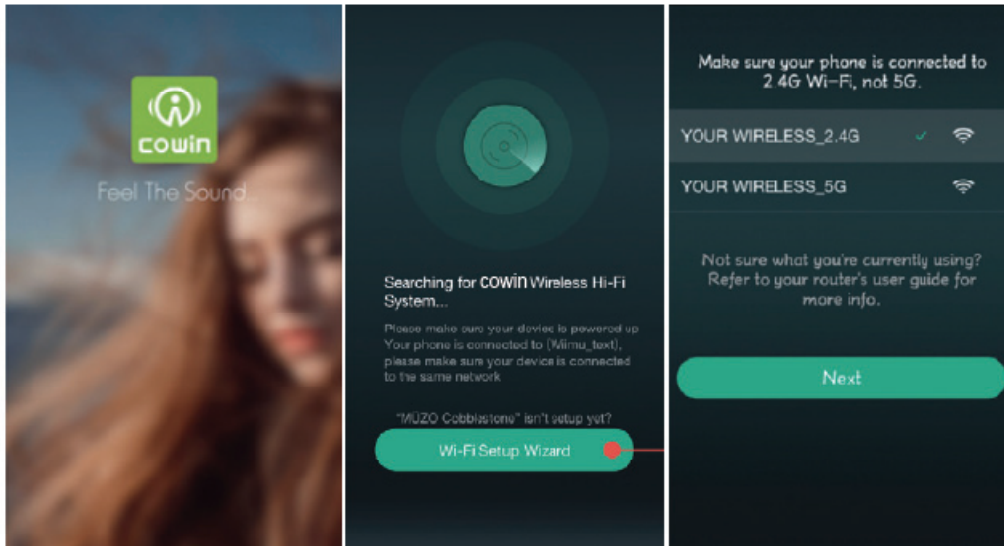


2.Power on your COWIN DiDa by pressing and holding the power button for 3 seconds. The mode indicator will flash white when ready to pair to your network.



 
3.Type the password of your wifinetwork and press next.

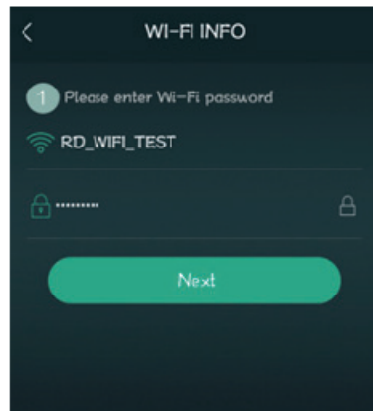

 
4. Long Press the WPS button till it turns Red.

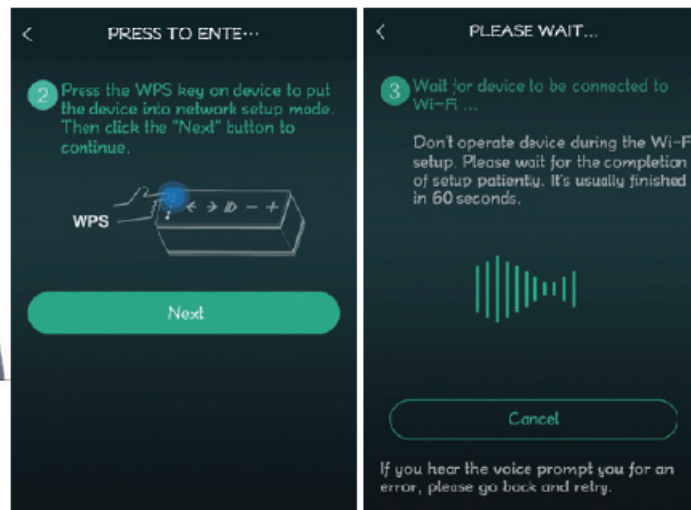

 
5. The App searches the speaker and automatically adds it to your network.

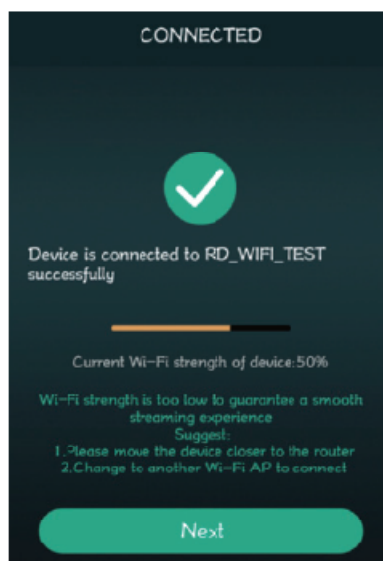

 
6. You can now select the speaker's name or set a customized one.

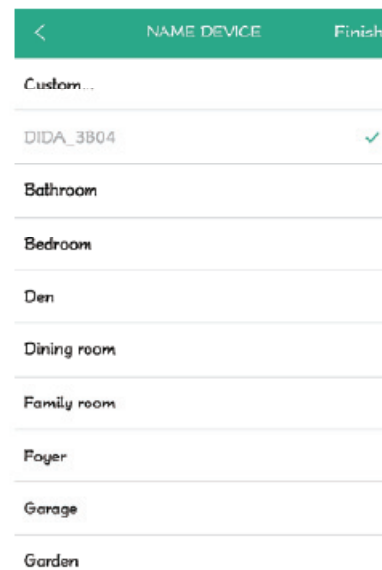

 
7. To add more speakers, press+ on the top right and repeat steps 2-6.

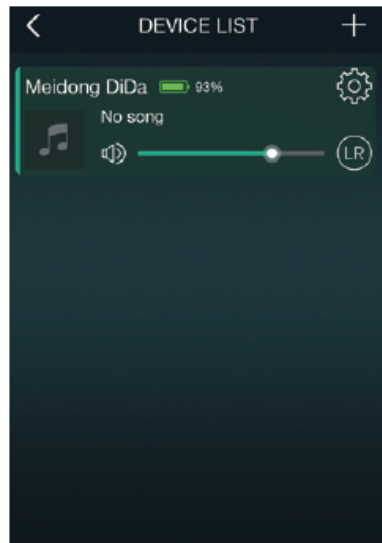

 8. Add your local music service provider to enjoy more music. Click the "Add More Services" button.


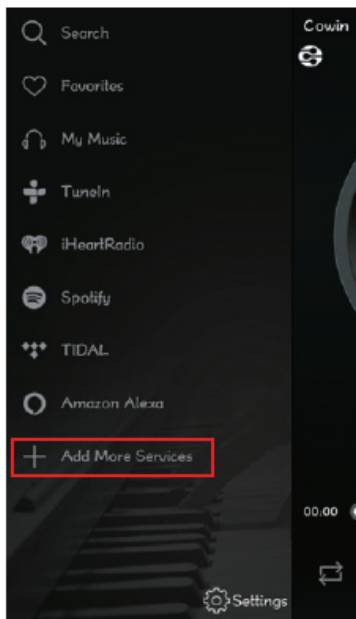


 9. Increase the source service providers, need to open the source service providers behind the button.


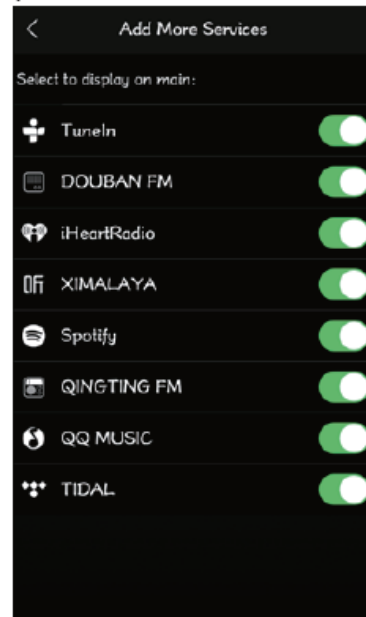


## LOGGING INTO YOUR AMAZON ACCOUNT

  Once connected to your network, press the Login button to log in to your Amazon account, or skip this step. Note: You cannot utilize Alexa Voice Service if you are not logged in to an Amazon account.

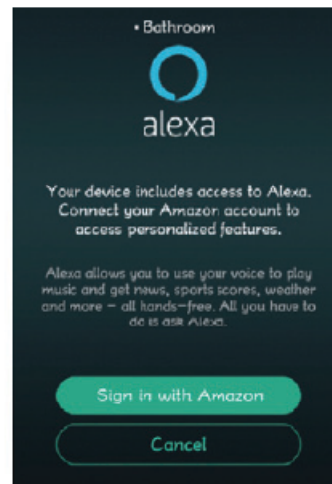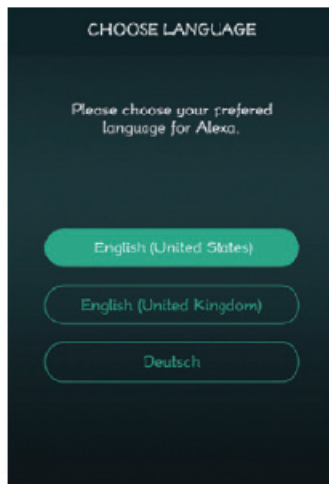


  Sign in to your Amazon account. If you do not already have an Amazon account, choose "Create a new Amazon account." It may take a few seconds for your account to load. Once logged in, the app will confirm your login successful. Note: You will be prompted to agree to Amazon's terms when logging in.

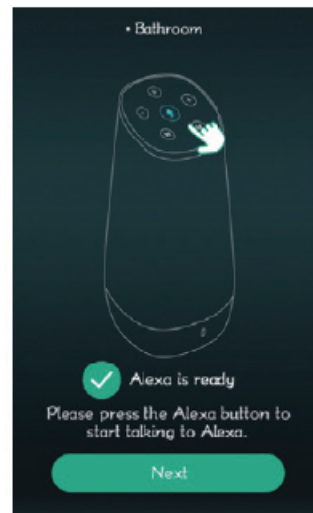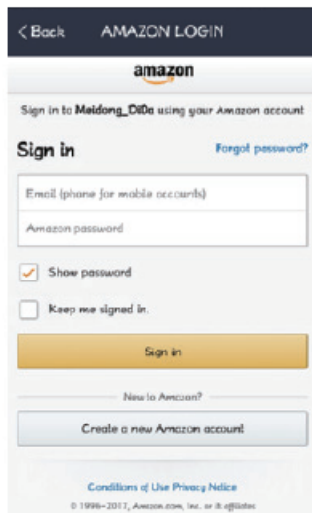



 To activate Alexa, tap the microphone button on the top of your speaker. You will hear a short tone. Next, ask Alexa a question, such as, "Alexa, what is the weather today in New York?" Or you can tell Alexa to do something, like, "Alexa, add milk to my shopping list."

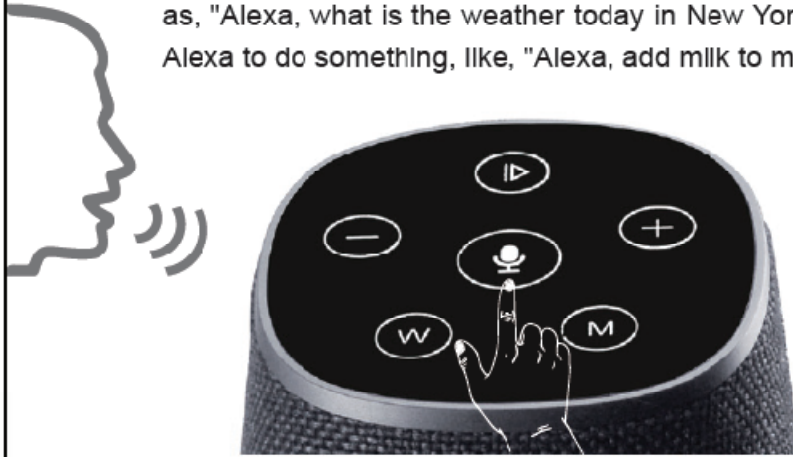


**Note:** After Network Connection, the password of speaker is always the password of the last router you connect, which will be used when Direct Connection.

If you forget the password of speaker, just use the router you have to Network Connection, then password will be this router's.

#### **Resetting your DiDa speaker**

 To reset the DiDa insert either a toothpick, straightened paper or Insulation object clip into the AUX IN jack until all touch button lights flash. You are successful complete resetting after all light off.

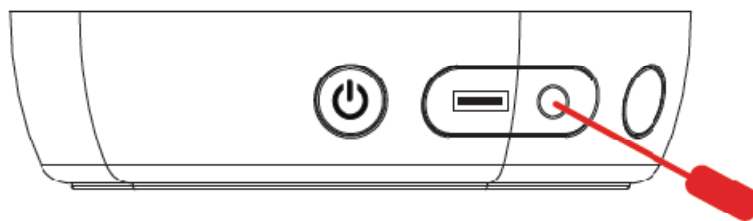

## **Direct Connection**

(This is used when there is no network, such as outdoor activity)

- Turn on the speaker. The mode indicator will flash white **M**.
- Enter WLAN setting of your device and turn on WLAN
- Search the WiFi name of speaker "DiDa\_XXXX", connect.
- Enter APP, play music or add more speakers

Remarks: The first speaker you connected just like the router, if you turn off the speaker, other speakers will be disconnected. If you turn off other speakers, the rest ones remain work.

## **The possible reasons of failure of adding devices:**

1. The most possible reason is that your smartphone connect with the WiFi router which is 5G, then device can't receive the request of connection sent from smartphone.
2. If you have a dualband router (5G + 2.4G), please set the 2.4G password same as the 5G, then maybe connectable, maybe not, depends on the routers.
3. If the router set Enterprise WPA will fail to connect, as we don't support Enterprise WPA.
4. Belows setting on router will also result in failing to add device:
  - a) If the IP address is assigned statically
  - b) If there is MAC address limitation, only specific MAC address could connect
  - c) The router is hide
5. Some routers has maximum connection, when exceed the maximum, will fail to add device.
6. Network is too bad, may be successful after trying many times.

## **4. Mode Switch**\_\_\_\_\_

When turn on speaker, it will be WiFi Mode automatically

1. Long time press "M" turn to Bluetooth mode
2. Long time press "M" again, it will turn back to WiFi mode

## **5. Bluetooth Connection**\_\_\_\_\_

Long Press mode switch key "M" to change the mode from WiFi to Bluetooth . Then will see blue light "M" flash . The speaker is in Bluetooth mode and waiting for connection.

1. Navigate the Bluetooth function of your device (Select "Set Up" Bluetooth or turn "ON" Bluetooth)
2. Select "Search" or "Discover" devices
3. Select Bluetooth "DiDa"
4. After completing the steps above, a message on your device will appear confirming that your device is now paired/connected.  
In case of unsuccessful pairing, turn off the speaker and restart it.

## **6. 1 Microphone Usage**\_\_\_\_\_

 
When a phone call comes in, you could talk through the microphone on speaker.

Tips:

When you make a call from your mobile phone the call will (subject to phone settings) automatically transfer to the speaker.

## 7. Cable connection (Line-in) \_\_\_\_\_


Use provided audio cable as below to connect with speaker:

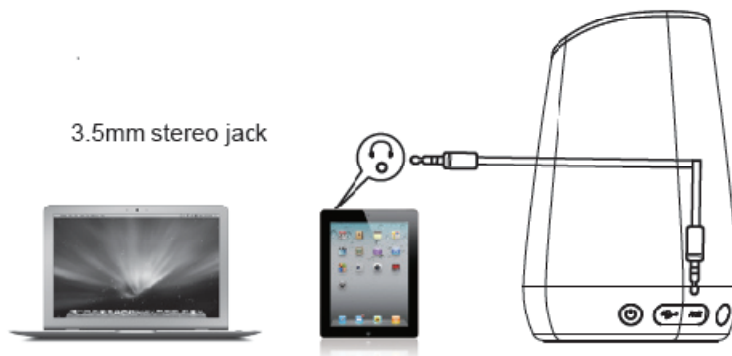

Insert a stick into the audio plug to Reset the speaker.

## 8. Charging and LED Indicator Light \_\_\_\_\_

 Built-in lithium battery can be charged by Micro USB cable, see below picture:

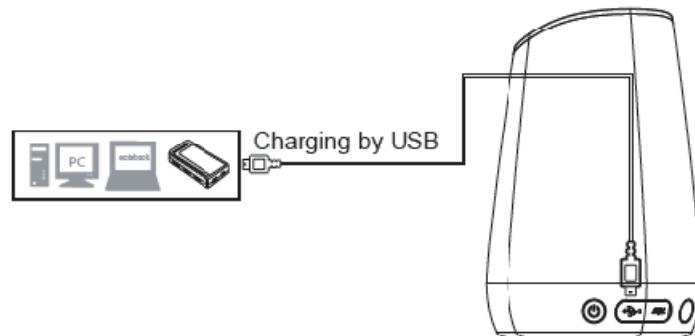

## 9. Product Care ---

Your device is designed to be durable, but as an electronic device, it must be treated carefully. Putting unnecessary pressure on it or striking the device against other objects may cause damage:

- Do not drop, crush, bend or apply excessive force to the device.
- Do not expose your device to moisture, extreme or prolonged heat, cold, humidity, or other adverse conditions. Avoid storing it in damp, humid or wet places. It is not waterproof.
- Clean the unit with a soft cloth or damp chamois leather. Never use solvents.
- The unit can only be opened by qualified person.
- This device contains magnets. Keep magnetic field sensitive products such as credit cards and video screen away from this device to avoid damage or malfunction

## 10. Things to try ---

### Play Music

Play some Prime Music  
Shuffle my dinner party playlist.  
Play my Miles Davis station  
Play my party playlist from Pandora  
Add this to my library

### Discover&Buy Music

What song is this?  
Buy this song.

## Shows, Podcasts&Radio

Play the program Radiolab.

Play ESPN radio.

Play NPR.

## Question&Answers

Tell me a joke.

Wikipedia: Abraham Lincoln.

What is the time in Moscow?

## Sports

What is the score of the Cubs game?

What is the score of the Raiders game?

## Shop Amazon

Order laundry detergent

Buy more paper towels.

## News, Weather&Traffic

Customize these features in the Alexa App

Play my Flash Briefing.

What's the weather?

How is my commute looking?

## Alarms&Timers

Set an alarm for 7a.m.

Set a timer for 45 minutes.

Snooze.

## Use These Anytime

Pair my Bluetooth.

Volume five.(1-10)

What's your battery level?

**FCC Caution**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.