

# User's Guide



# Contents

---

|                                 |   |
|---------------------------------|---|
| 1. Introduction .....           | 2 |
| 2. Battery Precautions .....    | 3 |
| 3. Getting Started .....        | 4 |
| 4. Installation Operation ..... | 5 |
| 5. Cable Connection .....       | 6 |
| 6. Bluetooth Connection .....   | 6 |
| 7. Function Guidance .....      | 7 |
| 8. LED Display Status .....     | 8 |
| 9. Battery Charging .....       | 8 |
| 10. Product care .....          | 8 |

Please read the following safety warnings and precaution before using your device.

# Specification

## E-2

|                  |   |
|------------------|---|
| Load impedance:  | 32Ω   |
| S/N:             | ≥85dB   |
| Frequency range: | 20Hz-20KHz  |
| Power supply:    | Lithium battery or USB cable                      |
| Audio source:    | iPhone, iPad, Smartphone, Notebook, MP3, MP4, etc |
| Function spec:   | Bluetooth, Microphone,                            |
| Size:            | 156x73x97mm                                       |

Operating range up to 10 meters.

## 1. Introduction

---

Thank you for purchasing our Bluetooth headphone: E-2. This device can be easily connected with Smartphone, tablet PC and other devices via Bluetooth during your traveling and daily usage. It will bring you an easy lifestyle.

 
 
## 2. Battery Precaution ---

The device is powered by a built-in rechargeable lithium battery. If the device is not used for a long period, the battery may be out of power. Please charge the battery before using.

- Rechargeable batteries are only to be charged under adult supervision.
- Use only the supplied cable to charge the battery. Improper charging may damage the battery and the device.
- Do not attempt to open the rechargeable battery or battery pack. There are no serviceable parts inside.
- Should a battery leak, the device may become damaged. Clean the battery compartment immediately, avoiding touching your skin.
- Keep the battery out of reach from children. If swallowed, consult a physician immediately.
- Don't dispose battery in fire as it may explode. Battery may also explode if damaged. Please dispose it according to local regulation, don't dispose it as household waste.

### 3. Getting Started \_\_\_\_\_

#### General controls

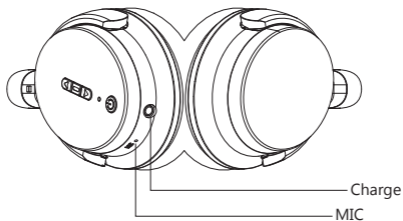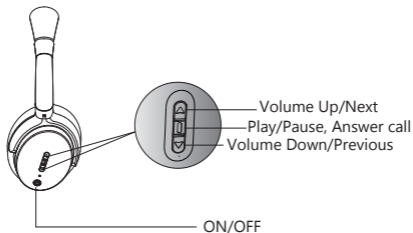


## 4. Installation Operation \_\_\_\_\_

### Step . 1



put on this headphone
 
### Step . 2

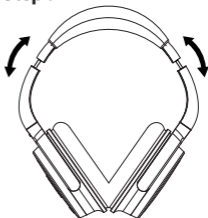

Adjustable length

### Step . 3

 


Adjustable angle

It can be adjusted To be fit by twisting the left and right ear muffs.

## 5. Cable Connection

---

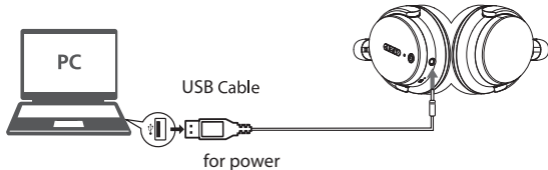

## 6. Bluetooth Connection

---

Pairing headphone to your Smart device (Smart device should be within 10 meters of your headphone).

1. Activate pairing mode on headphone by long pressing "ON/OFF" button until you hear two kinds of short music. The LED will flash in blue and red.
2. Turn on your device, navigate to the Bluetooth function (refer to the device owner's manual to locate Bluetooth function).
3. Select "Set Up" Bluetooth or turn "ON" Bluetooth.
4. Select "Search" or "Discover" devices.
5. Select "Bluetooth".
6. If requested, type the password or PIN 0000
7. Press the Enter key.

After completing the steps above, a message on your Smart device will appear confirming that your device is now paired/ connected.

In case of unsuccessful pairing, turn off it and restart it, then do as steps above. If you turn off the device, but the Bluetooth on your tablet remains open, when you restart the device, the Bluetooth will be connected automatically.

## 7. Function Guidance

---

### Play music from your phone

| Button | Operation   | Function                      |
|--------|-------------|-------------------------------|
| ▲      | Long Press  | Volume up                     |
| ▲      | Short Press | Next song                     |
| ▼      | Long Press  | Volume down                   |
| ▼      | Short Press | Previous song                 |
| ■      | Short Press | Play/Pause, Answer/End a call |
| ■      | Long press  | Ready for pairing             |

Answer /end a call

Press “■” (the middle button) to answer or end a call.

## 8. LED Display Status

---

|            | LED Display   | Light indication    |
|------------|---------------|---------------------|
| Blue Light | Flash quickly | Power ON            |
|            | Flash twice   | Paired              |
| Blue/Red   | Alternatively | Ready to pair       |
| Red Light  | Stay solid    | Charging in process |
|            | OFF           | Fully charged       |



## 9. Battery Charging

---

The device has a built-in rechargeable battery. This can be charged by USB cable connected with your computer. When it's charging, the light below the left button will turn to red

After charging, the device can be used without the power connection. Charge the device again when you hear the headphone make successive beep sound.

## 10. Product care

---

Your device is designed to be light, compact and durable. As an electronic device it must be treated carefully. Putting unnecessary pressure on it or striking the device against other objects may cause damage. To avoid damage to your device, please

- Do not drop, crush, bend or apply excessive force to the device.
- Do not expose your device to moisture, extreme or prolonged heat, cold, humidity, or other adverse conditions. Avoid storing it in damp, humid or wet places, as it is not waterproof.
- Clean the unit with a soft cloth or damp chamois leather. Never use solvents.
- The Unit can only be opened by qualified personnel.
- This device contains magnets. Keep magnetic field sensitive products such as credit cards and video screen away from this device to avoid damage or malfunction.

FCC NOTE :

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS OR CHANGE TO THIS EQUIPMENT. SUCH MODIFICATIONS OR CHANGE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.