

Welcome Guide

SoundSync Drive

Bedienungsanleitung | 取扱説明書
Guide d'Utilisation | Manuale dell'Utente
Manual de Instrucciones | 使用说明书

Using Your SoundSync

Ihren SoundSync verwenden | SoundSyncの使用方法
Utilisation de Votre SoundSync | Utilizzare il tuo SoundSync
Usar Tu SoundSync | 使用你的SoundSync

1. Plug it in

Einstecken | 差し込みます | Branchez-le
Collegalo all'alimentazione | Enchufar a la corriente
连接SoundSync

▶ 1

2. Turn it on

Schalten Sie ihn ein | 電源を入れる | Allumez-le
Accendilo | Encender | 打开蓝牙接收器

3. Pair it with your device

Pairen Sie ihn mit Ihrem Gerät | お使いの機器とペアリング
Connectez-le à votre appareil | Connettilo con il tuo dispositivo
Emparejar con tu dispositivo | 和你的设备配对

▶ 2

If no device is connected for 10 minutes, SoundSync will automatically turn off.

Der SoundSync wird sich automatisch abschalten, wenn kein Gerät für 10min verbunden wurde.

10分間どの機器とも接続がされなかった場合、SoundSyncの電源は自動的にオフになります。

Si aucun appareil n'est connecté pendant 10 minutes, le récepteur SoundSync s'éteindra automatiquement.

Se nessun dispositivo sarà connesso per 10 minuti, SoundSync si spegnerà automaticamente.

Si no se conecta ningún dispositivo luego de 10 minutos, SoundSync se apagará automáticamente.

如果10分钟内没有设备接入, SoundSync将会自动关闭。

▶ 3

Controls

Steuerung | 操作方法 | Commandes | Comandi
Controles | 操作方法

Play / Pause

Play / Pause | 再生 / 一時停止 | Lecture / Pause
Play / Pausa | Reproducir / Pausa | 播放/暂停

Answer / end call

Anruf annehmen / beenden | 電話に出る / 終了
Décrocher / Raccrocher | Rispondi / chiudi la chiamata
Responder / terminar llamada | 接听 / 挂断

Wake up Siri / other voice control software

Siri / andere Sprachkontrolle aktivieren
Siriや音声認識ソフトの起動
Activer Siri / autres commandes vocales
Attiva Siri / altri controlli vocali
Activar Siri / otros mandos de voz
打开Siri或其他声控软件

Hold

Gedrückt halten
長押し
Maintenez appuyé
Tieni premuto
Mantener presionado
按住

Hold simultaneously

Gleichzeitig gedrückt halten | 同時押し
Appuyez simultanément
Tenere premuto contemporaneamente
Presionar al mismo tiempo | 同时按住

▶ 4

Skip forward

Nächster Titel | 次の曲 | Saut Avant
Branco successivo | Próxima pista | 下一曲

Skip back

Vorheriger Titel | 前の曲 | Saut Arrière
Branco precedente | Pista anterior | 上一曲

Re-enter pairing mode

Erneut in den Pairing Modus eintreten
ペアリングを再実施
Entrer à nouveau en mode jumelage
Entra di nuovo in modalità ricerca
Volver a modo emparejamiento
重新进入配对模式

▶ 5

LED Indicator Guide

LED-Indikator Erklärung | LED表示の説明
Guide de l'indicateur LED | Guida segnali dell'indicatore LED
Guía de Indicador LED | LED指示灯说明

Steady blue

Durchgehend blau | 青の点灯
Voyant bleu fixe | Blu fisso
Azul fijo | 蓝色LED常亮

Powered on / Connected to a device

Eingeschaltet / Mit Gerät verbunden
電源オン / 機器と接続
Allumé / Connecté à un appareil
Acceso / Connesso ad un dispositivo
Encendido / Conectado a un dispositivo
开机 / 设备配对成功

▶ 6



Rapidly flashing blue

Schnell blau blinkend | 青の早い点滅
Voyant bleu clignotant rapidement
Blu lampeggiante (rapido)
Azul intermitente rápido | 蓝色LED快速闪烁

Pairing mode

Pairing Modus | ペアリングモード
Mode jumelage | Modalità sincronizzazione
Modo emparejamiento | 配对模式

Flashing blue

Blau blinkend | 青の点滅
Voyant bleu clignotant | Blu lampeggiante
Azul intermitente | 蓝色LED闪烁

Incoming call

Eingehender Anruf | 着信 | Appel entrant
Chiamata in arrivo | Llamada entrante | 来电

▶ 7

Having connection problems? Remove SoundSync from your device's Bluetooth history, ensure it is less than 3 feet away then try pairing again.

Bitte löschen Sie bei Verbindungsproblemen SoundSync aus den Pairinginträgen auf Ihrem Gerät. Stellen Sie sicher, dass es weniger als 90 cm von Ihrem Gerät entfernt ist und wiederholen Sie den Pairingvorgang.

ペアリングが出来ない場合、ペアリングの履歴を一度削除し、お使いの機器とSoundSyncの距離が90cm以内であることを確認した上で、再度ペアリングを行って下さい。

Problemi di connessione? Rimuovi SoundSync dalla cronologia bluetooth del dispositivo. Assicurati che esso sia a meno di un metro di distanza dal dispositivo e riprova.

▶ 8

¿Problemas de conexión? Elimina tu SoundSync del registro de conexión Bluetooth de tu dispositivo, acerca el dispositivo a menos de 90 cm y empareja de nuevo.

连接不上?删除SoundSync的配对记录, 确保蓝牙接收器和设备距离不超过1米再尝试配对。

Specifications

Spezifikationen | 製品の仕様 | Spécifications | Specifiche
Especificaciones | 产品参数

Input	5 V / 0,3 A
Range	10 m / 33 ft
Weight	26 g / 0,9 oz
Size	45 × 45 × 10 mm 1,8 × 1,8 × 0,4 in

▶ 9

Attention

Achtung | 注意 | Attention | Attenzione
Atención | 注意

Don't expose to liquids

Setzen Sie das Gerät keinen Flüssigkeiten aus
水分に触れないようにして下さい
Ne pas exposer à des liquides
Evitare il contatto con liquidi
Evitar el contacto con líquidos
请勿接触液体

Don't disassemble

Nehmen Sie das Gerät nicht auseinander
危険ですので分解しないで下さい
Ne pas désassembler
Non smontare
No desarmar
请勿拆卸

▶ 10

Avoid dropping

Lassen Sie das Gerät nicht fallen
過度な衝撃を与えないで下さい
Eviter de le faire tomber
Non farlo cadere
Evitar caídas
避免跌落产品

Avoid extreme temperatures

Vermeiden Sie extreme Temperaturen
極端な温度下では使用しないで下さい
Eviter les températures extrêmes
Tenere lontano da temperature estreme
Mantener alejado de temperaturas extremas
避免在过高或过低温环境使用

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by

▶ 11

the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna, (2) Increase the separation between the equipment and receiver, (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected, (4) Consult the dealer or an experienced radio / TV technician for help.

RF Warning Statement

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

▶ 12

Customer Service

Kundenservice | カスタマーサポート | Service Client
Servizio ai Clienti | Atención al Cliente | 客服支持

18-month limited warranty

18 Monate beschränkte Herstellergarantie
18ヶ月保証 | Garantie de 18 mois
Garanzia limitata 18 mesi
Garantía limitada de 18 meses
18个月质保期

Lifetime technical support

Lebenslanger technischer Support
テクニカルサポート | Support technique à vie
Supporto tecnico a vita
Asistencia técnica de por vida
终身客服支持

support@anker.com

1-800-988-7973 | Mon-Fri 9:00-5:00 PST (US)
03-4455-7823 | Mon-Fri 9:00-17:00 (日本)
069-9579-7960 | Mon-Fri 6:00-11:00 (DE)
400-0550-036 | Mon-Fri 9:00-17:30 (中国)

▶ 13

For FAQs and more information, please visit:

[anker.com/support](https://www.anker.com/support)

@Anker Official
@Anker Japan
@Anker Deutschland

@AnkerOfficial
@Anker_JP

@Anker

▶ 14

尺寸: 52×74mm