

75mm

DO NOT PRINT RED LINE! **DO NOT PRINT GREEN LINE! DO NOT PRINT MAGENTA LINE!**

Remarks

Material: 120 GSM White Paper

Printing: B/W **Double-side Printing

Dieline **Fold**

90mm



Package Contents


Application Download & Installation

 
This device can support iOS and Android.


- 1. Please download the official application from app stores before operation. 2. Please follow app instructions to register and login for proper operation.
- 3. For any questions, please contact the official application developer or solution



No light status

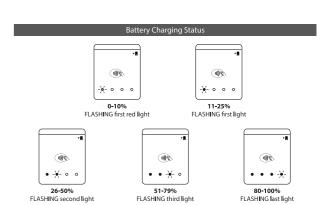



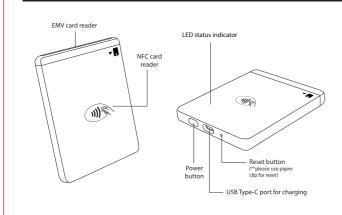

Quick Start Procedures

Connect the USB Type-C charging cable to charge the

Download the official application from APP Store or Google

** WiseCube is powered by an internal Lithium Polymer rechargeable battery pack that cannot be removed or replaced.**



 
11) 11) FLASHING second and FLASHING first

Show battery level for 4 seconds

third light alternatively

1119 First and last

118






• • • •

80-100% A**ll l**ights ON

LED Status Indicators





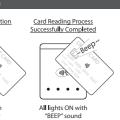

Cautions & Important Notes

- Please ensure the EMV chip of the card is facing the right direction when inserting card.
- Don't drop, disassemble, tear, open, crush, bend, deform, puncture, shred, microwave, incinerate,
- Don't immerse the device into water and place near washbasins or any wet locations. Don't spill
- Don't use any sharp tools to probe the internal components, connectors or contacts, doing which may lead to device malfunction and void the Warranty simultaneously.

Product Specifications

Functions	EMV chip card reader (ISO 7816 compliant class A, B, C card)
	NFC Card Reader (EMV contactless, ISO 14443A/B)
	Over-the-air firmware update
	Over-the-air key update
Communication Interface	USB
Power & Battery	Lithium polymer rechargeable battery 520mAh, 3.7V
Charging	Via USB Type-C
Key Management	DUKPT, MK/SK
Encryption Algorithm	TDES, AES
Support Operating System	Android 4.2 or above, iOS (iPhone 6s or above, iPad Air 2 above,
	iPad Mini 5 or above, iPad Pro except 2016 version)
Product Size	82.5 x 69.0 x 10.5mm (approx.)
Product Weight	75g (approx.)
Operating Temperature	0°C – 45°C (32°F – 113°F)
Operating Humidity	Max 95%
Storage Temperature	-20°C - 55°C (-4°F - 131°F)

Any damage or defects caused by a failure to follow the instructions which relate to this device or as the result of an accident, abuse, misuse, misapplication, product modification, improper voltage

We are not under any obligation to support the device for all operating environments, including but not limited to, interoperability with all current and/ or future versions of software or hardware.

Please contact the dealer for any warranty or customer support services. Any repair of the device by yourself will void the Warranty.

or current, acts of God, shipping damages or loss, or damage caused by service performed by anyone other than our company are expressly excluded from the warranty stated below.

FCC Caution Statements

FCC Supplier's Declaration of Conformity

BBPOS / WiseCube (CHB60)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must operation.

970 Reserve Drive, Suite 132 Roseville, CA 95678

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following $\,$ measures:

- Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver - Consult the dealer or an experienced radio/TV technician for help.

This transmitter must not be co-located or operating in conjunction with any other antenna

ISED Statement

Warranty

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

This device may not cause interference.
 This device must accept any interference, including interference that may cause

aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux condition

L'appareil ne doit pas produire de brouillage;
 L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est


CE E: sales@bbpos.com | T: +852 3158 2585




Need Help?

Room 1903-04, 19/F, Tower 2, Nina Tower, No. 8 Yeung Uk Road, Tsuen Wan, Hong Kong

©2018 BBPOS Limited. All rights reserved. BBPOS are either trademark or registered trademarks of BBPOS Limited. IOS is the trademark of Apple Inc. Android[®] is a trademark of Google Inc. Windows[®] is registered trademark of Microsoft Corporation in the United States and/or other countries. The Bluetooth[®] word mark and bgos are registered trademarks owned by Bluetooth SIG, inc. and any use of such marks by BBPOS Limited is under license. Other trademarks and trade names are those of their respective owners. All details are subject to then per without prior notice.

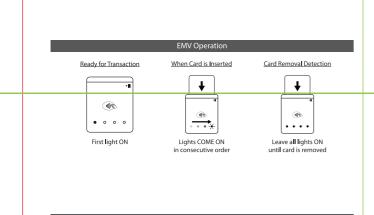

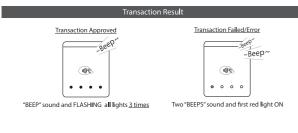

- Ensure the device is fully charged before use.
- The NFC card or mobile wallet should be tapped within 4 cm range on top of the reader mark.
- paint or insert foreign object into the device. Doing any of which will damage the device and
- food or liquid on the devices. Don't attempt to dry the device with external heat sources, such as microwave or hair dryer. Don't use any corrosive solvent or water to clean the device. We recommend using dry cloth to clean the surface only.

Troubleshooting

Device does not work with your phone or tablet	Please check the version of your operating system is supported for this device's operation.	
Device cannot read your card successfully	Please press the power on button to turn on the device again. The device will automatically connect with your smartphone or tablet again. The device may be at lower battery level, please use the USB cable to	
	recharge it, then retry. • Please ensure the device or smartphone/tablet is within the reception range. Inserting card • Please check if the device has power when operating and ensure devices are connected. • Please follow the application instruction to insert or tap card. • Please ensure that there is no obstacle in the card slots. • Please check if the chip of the card is facing the right direction when inserting card. • Please ensure that your phone/ tablet is a supported model for this device's operation. • Please insert card with a more constant speed. † Tap Card/Mobile Wallet • Please check if your card is placed within 4 cm range on top of the NFC marking. • Please take out your NFC payment card from wallet or purse for payment to avoid any interference.	
Device has no response	Please use a paper clip to press the reset button at the bottom for reboot.	

undesired operation of the device. L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme

susceptible d'en compromettre le fonctionnement