


R1803-CR2025

REMOTE USER MANUAL

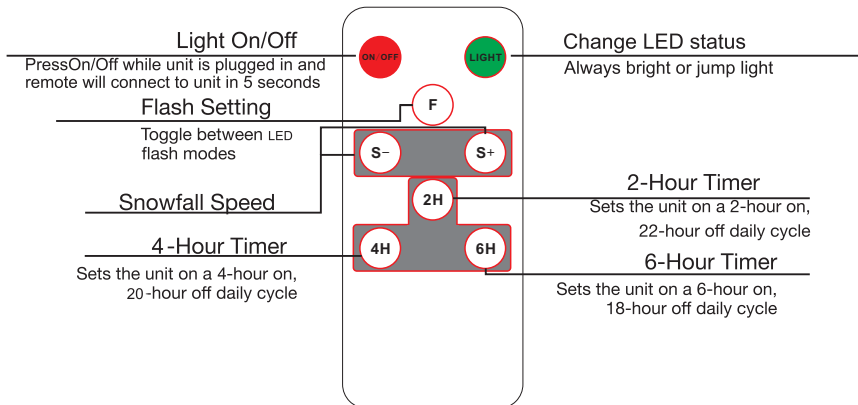

IF REMOTE IS NOT CONTROLLING THE LED while you are within remote control range, and if the remote LED comes on when you press the buttons, your remote may not be synced with the LED light. In this case, follow these syncing instructions:

Syncing the Remote:

Be sure you are within 5 ft. of LED to sync. Do not use an extension cord during syncing process.

1. Remove the battery from the remote, then reinstall battery. This resets the remote.

2. With remote in hand, plug LED into wall outlet. QUICKLY, BEFORE 3 SECONDS PASS, press the ON/OFF button on remote AFTER plugging the LED in. DO NOT press the ON/OFF button at the same time you plug in, it must be done within 3 seconds AFTER plugging in. DO NOT hold the button down.

Do not use an extension cord during syncing process. Once the LED is synced, it may be unplugged and used with an extension cord. Occasionally, re-syncing the remote with the LED may be necessary. In this case, repeat the steps above. To sync two or more lights to the same remote, unplug them all, then plug them back in at the same time. AFTER plugging them in, press the ON/OFF button within 3 seconds. Remove remote battery before long-term storage.

FCC Notice:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable condition without restriction.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.