

### CHARGING THE BLUETOOTH DEVICE

1. Open the cover seal on the side of the device.
2. Connect the Device's Micro USB socket (1) with the Power Source's USB port through USB cable.
3. Disconnect the USB cable, and close the Plastic Cover seal when it is fully charged. A full charge will take 4-6 hours.

### PAIRING / RECONNECTING THE DEVICE

 
 
 
1. Press the Power button (5) for 3 seconds; the device is now turned ON and into searching / pairing / reconnect mode will begin.
2. Now, turn ON the Bluetooth function of your device.
3. Search for "SP2858" and select it to pair. (for the first time pairing or pairing a new mobile device)
4. The Bluetooth Speaker will reconnect automatically if your mobile phone has been paired. (Depending on the device's type and configuration, manually reconnect may be required on some devices)
5. If pairing is successful, your device will make a tone to confirm.
6. Press the Power button (5) for 3 seconds to turn OFF the Speaker. (Note: If you cannot search for the Speaker, this means the last device is reconnecting automatically. Press the Power button (5) for 2 seconds to pair.)

### SPEAKER CONTROLS AND FUNCTIONS

- When playing music, press Play button (3) to pause music, press it once again to play.
- Press and hold the Volume Up button (6) to increase the volume.
- Press and hold the Volume Down button (4) to decrease the volume.
- Press the Volume Up button (6) to play next track.
- Press the Volume down button (4) to play previous track.

### FEATURES

1. Micro USB Port
2. Auxiliary Port
3. Call Button & Play/Pause
4. Volume Down & Last Track
5. Power Button
6. Volume Up & Next Track

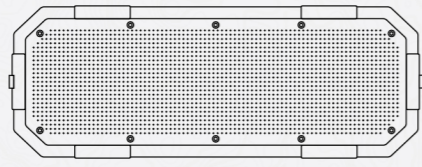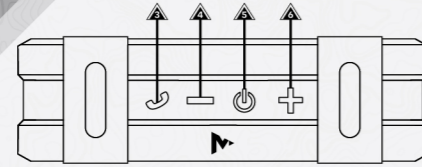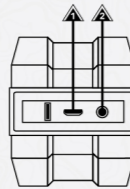

### HANDS FREE DIALING AND REDIALING FUNCTIONS

- Press the Call button (3) to pick up the call, the playing music will automatically be paused.
- Long press Call button (3) to reject the call.
- Press Call button (3) again to hang up the call when finished. The paused music will resume playing automatically. (Tip: speak within a foot of the device to get the best speaker phone Performance when necessary.)

### AUXILIARY-IN FUNCTION

1. With the device powered on, connect the included Auxiliary cable into the devices Auxiliary port (2) and plug the other end into your phones auxiliary port.
2. The device will switch to "AUX IN" mode automatically from Bluetooth mode.
3. Disconnect the Auxiliary cable when finished. (Notice: If there is no sound while auxiliary cable is connected to bluetooth device, ensure all other bluetooth devices are not paired and repeat step one. If the problem persists replace auxiliary cable)

### TROUBLE SHOOTING

#### No power

- Recharge your speaker using the micro USB cable. If the problem persists try using another micro USB cable

#### No Response From the Unit

- Ensure your bluetooth device has an A2DP profile
- Check if both devices are paired and connected to each other.
- Restart the device and try to reconnect.

#### Bluetooth device will not reconnect with the Speaker

- From your Devices bluetooth menu select the "SP2858" Ear-buds and choose "Forget". Now repeat the steps to pair with the speaker with your device.

#### I can't find the device name on the bluetooth menu of my phone

- Ensure the Bluetooth function is activated on your Bluetooth device.
- Ensure you have paired the unit with your Bluetooth device.

### SPECIFICATIONS:

- Model No.: SP2858 Traverse
- Driver Unit size: DIA 2" X 2"
- DC Power Input : DC 5V 1A
- Bluetooth: A2DP, AVRCP Function
- Output power: RMS 5w x 2
- Frequency: 90Hz-20KHz
- Working distance: 30ft (Distance may vary)
- Rechargeable Battery: 2200 mAh, 6-9 hrs playback
- Power Supply: Lithium battery/ USB charge

### WATERPROOF SAFETY & INFORMATION

**Important: DO NOT submerge the Ear-buds in water. This device is not intended to function properly after being under water.**

- Ensure the cover for the auxiliary and charging ports is covered before bringing the Traverse Speaker into wet environments. If water gets into either port the device may not function correctly.
- The device is sweat-proof which means it can be splashed with water or exposed to rain ( but not submerged in water) for a brief time.
- When the device is exposed to water it is recommended that you dry the speaker completely before next use.
- While the device has a silicon sleeve around the outside it does not mean that it is indestructible or drop-proof. The speaker may receive damage when dropped from any height.
- All actions done with this device are done at the users own discretion. While the device is weather resistant and has a protective cover, this does not guarantee complete damage resistance.

#### Limitation of Liability

In no event, under any cause of action of theory of liability, shall Sicura Media Inc., its distributors or suppliers be liable to you or any third party for indirect, incidental, consequential, special, exemplary or punitive damages, or any and all nature whatsoever, arising out of use of or inability to use a product. This includes without limitation, property damage, loss of value of the product or any third party products that are used in or with the MVMT products, even if the MVMT product has been advised of the possibility of such damages that one may encounter. Without limiting the foregoing, you understand and agree that MVMT has no liability for any damages or destruction to the consumer electronics devices or other personal property that are contained inside or outside of the MVMT products. This includes without limitation, laptops, Cellular phones, or other handheld devices, or any loss of data contained in the foreign device. Notwithstanding any damages that you might incur for any reason whatsoever (including without limitation, all damages referenced herein and all direct or general damages in contract, tort (including negligence) or otherwise), the entire aggregate liability of MVMT and any of its distributors and/or suppliers shall be limited to the amount actually paid by you for the MVMT product giving rise to liability. Some states and/or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. The limitations of liability set forth above shall apply to the maximum extent permitted under the applicable law.



MVMT and the MVMT logo are registered trademarks of Wave Sicura Media, Inc. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by is under license. All other trademarks and trade names are those of their respective owners. ©2015

New York NY 10018  
Support@waveaudio.com  
www.waveaudio.com

Made in China exclusively for Wave Sicura Media, Inc.

This product is not a toy.

#### ⚠ Warning:

Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.

#### Fire and Electric Shock Hazard

- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in to the speaker. Such actions could result in electric shock.
- Do not expose your speaker to extremely high or low temperatures it can cause malfunction.
- Do not leave your speaker in direct sunlight for extended periods of time.
- Do not leave your speaker near open flames such as cooking burners, candles, or fireplaces.
- Do not block any ventilation openings.

#### Fall Hazard

- Do not place the speaker on high surfaces such as shelves. During music playback the speaker may move which could cause the speaker to shift and fall off of the edge.

#### Warning:

To reduce the risk of electric shock, do not remove cover (or back). Refer servicing to qualified service personnel.

#### ⚠ CAUTION:

- Do not use abrasive cleaners to clean your speaker. It could cause scratches and damage.
- Do not bring your speaker in to contact with any sharp objects. It could cause scratches and damage.
- Do not insert anything into your speaker unless otherwise specified in the user instructions. This may damage the units internal components.
- Do not attempt to repair, modify, or disassemble your speaker yourself. It does not contain any user-serviceable components.
- Do not attempt to replace your speaker battery. It is built-in and is not changeable.
- Use only the manufacturer supplied charger to charge your speaker. Other chargers may look similar, but using them could result in electric shock and could damage your speaker.
- Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
- Turn off your speaker prior to boarding an aircraft. Do not use the speaker inside an aircraft unless allowed by your airline.
- Dispose of the speaker and its battery in accordance with local regulations. Do not dispose of the battery with regular household waste.

#### FCC Disclaimer:

This device Complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1- This device may not cause harmful interference, and
- 2- This device must accept any interference received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help or assistance.

This device complies with Part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1- This device may not cause harmful interference, and
- 2- This device must accept any interference received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce the potential for radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.



User Manual for SP2858

# TRAVERSE

PORTABLE WIRELESS STEREO SPEAKER



- PACKAGE INCLUDES:**
- 1 X BLUETOOTH SPEAKER
  - 1 X USB TO MICRO USB CABLE
  - 1 X 3.5 MM AUXILIARY CABLE
  - 1 X CARABINER CLIP

**IMPORTANT PLEASE READ BEFORE USING THIS PRODUCT**