 


Internet Tablet

Instruction Manual




1.0 Product basics
1.1 Buttons and connections

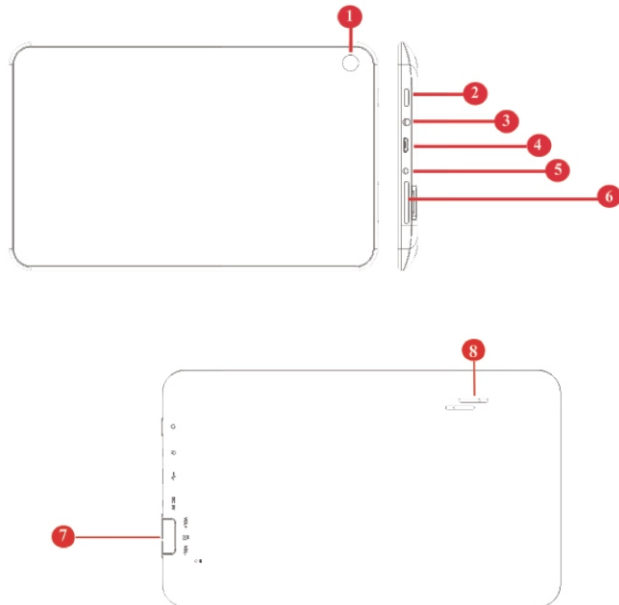


1	Camera web	7	TF Card
2	Power	8	Speaker
3	Headphone		
4	Micro USB		
5	Power jack		
6	HDMI		

1.2 Start up and shut down

 
To start your device, press and hold the "Power button" until the screen lights up.
To shut down your device, press and hold the "Power button" until the following dialogue popup appears.

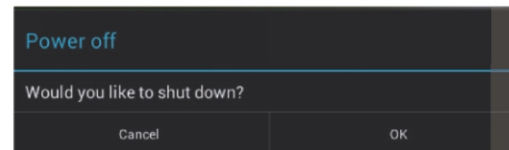

 2.0 Introduction to Google Android 4.0

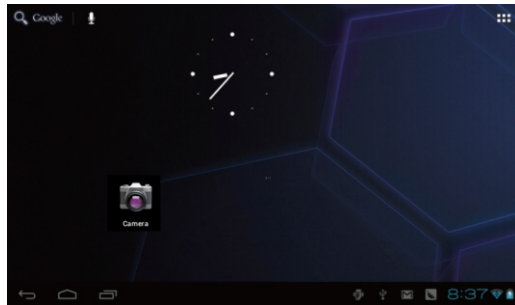


2.1 The Desktop

The main area of interest will be the desktop. Here you will place shortcuts to apps or widgets, a visual application that can display real-time information. There may be some pre-installed icons and widgets on your tablet. To change the desktop background image of your tablet, return to your desktop by pressing the “HOME”  icon. Press and hold an open space on the desktop (do not press an icon) until the popup “Select wallpaper from” appears.


The list may have options to select an image or animated image of choice. The “Live Wallpaper” option will show pre-installed animated desktop images. Other options such as “Super-HD Player”, “Gallery” or “Wallpapers” allow you to select (Widescreen) photos, downloaded images or other images; depending on the features of that specific application.

To place a widget or app shortcut on the desktop, touch and hold the icon until the App drawer fades and the desktop appears. Move your finger to the location where you want to place the icon and release your touch to place the icon.

 
To move or delete icons and widgets from your desktop, touch and hold the icon until a grid appears. Move the icon to the new location or drag it to the “remove” bar on the top of the screen to remove it. Releasing the touch screen will confirm your action.

2.2 The App drawer-right top corner
Press the  icon in the top right of the screen to open the App drawer. Here you have access to two tabs; “APPS” and

“WIDGETS”. The “APPS” tab displays all applications that are available on the tablet. The “WIDGETS” tablet contains the optional widgets that can be added to the desktop. To place widget or app shortcuts on the desktop, touch and hold the icon until the App drawer fades and the desktop appears. Move your finger to the location where you want to place the icon and release your touch to place the icon.

When using apps or other parts of the operating system you will often see the “Extra options” icon  .

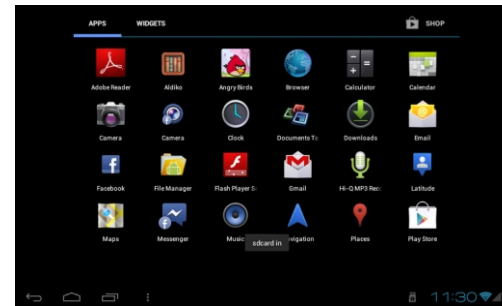

Pressing this icon will open a secondary menu with more options. Functions like opening an advanced settings menu, switching to a different account or refreshing the displayed information are often “hidden” behind this icon.




2.3 Google Search / Voice Search: Left top corner

By clicking the “Google search”/microphone you can type or say the key words of your search. The search application will automatically determine whether the key word(s) apply to an application or a web search. In the latter case a web browser will be opened and the results of your query will be displayed on the Google search engine. Note that both the “Google search” function as well as the “Voice search” requires the tablet to have access to the internet (by WIFI).




2.4 Navigation Icons: Bottom left of the screen
 On the left side you will find three icons. Use the navigation icons "HOME"  or "RETURN"  to close the App drawer and return to your desktop. The "RECENT

ACTIVITY" icon  will show an overview of the active and recently opened applications. Click on the small preview display to open that application.




Recent activity preview


2.5 Status Information Area: right bottom of the screen
 The bottom icon bar will show some system information (i.e. ) in the bottom right corner. The contents of this area may change if installed applications place additional information here. Pressing it will open a small

overlay tablet displaying the date/time information, the tablets current network status, the battery status and a shortcut icon to another quick menu where other options such as “Airplane mode” “WIFI ON/OFF” and screen brightness can be set or toggled. This quick menu also contains a shortcut to the “Setting” menu. Simply clicking elsewhere on the screen will close this menu.


3.0 General Operation

3.1 Battery Status / Charging your tablet

The current battery status will always be displayed in the lower right of the screen in the system information bar. The battery icon  will change according to the battery status.


When connected to the DC charger, the status area on the bottom bar will display the  charging icon. Note the lightning symbol inside the battery icon.

 
3.2 Installing Apps

You can install your own Apps by opening the Apps shop. This button can be found in the  “App drawer”. The Apps shop is located on the

top right of the screen. Note that not all applications may function properly on your tablet as some apps are made especially for small screen devices such as phones.

3.3 Administer / Remove Apps


The  “Apps” item in the “Settings” menu will display an overview of the installed apps. There are four tabs available which filter the displayed app list. Select an app to view its detailed information. In the detailed information you also have the options “Force Stop”, “Uninstall”, “Clear Data” and “Move the SD card”. Moving apps to your SD card can save you some internal storage memory on the tablet. The “Clear cache” and “Clear defaults” can be used when you are experiencing issues with a specific app. Clearing cached information and (possible wrong) default settings may solve the problem. Clearing this information will also wipe any stored login information. i.e. clearing the cache of your social media app will also force you to re-login afterwards. Apps may also be removed in the apps content page of the market / shop application.

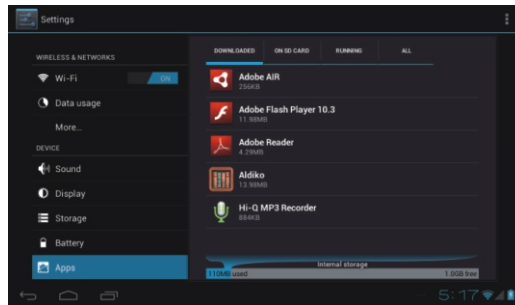


3.4 Add an Account

The best way to fully make use of your Android tablet is by linking your Google / Gmail account to your device. Open the “Settings” menu and choose the “Accounts & Sync” item. Without any added accounts, the right pane will display nothing. Select the option “Add account” in the top right corner. To add a Google / Gmail account, please select “Google” in the pop-up and follow the instructions on the screen. After entering your Google username and password you have

  the option to automatically back-up your apps, settings (i.e. bookmarks and WIFI passwords) and other data.

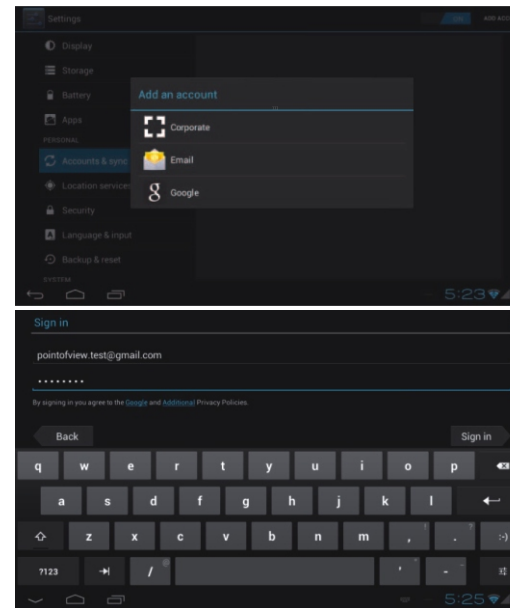

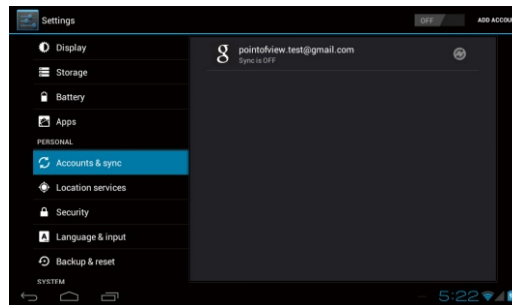

You can also add a POP3, IMAP or Exchange email account by selecting “Email”. The pop-up option “Corporate” will set up a “Microsoft Exchange” link.

Your system or network administrator can supply you with the server information and login credentials. Follow the steps displayed on-screen to complete the account linking process.

 
After you have successfully linked your account(s) with the tablet you can toggle the automatic synchronization on and off using the **OFF** **ON** switch next to the “Add account” option.

4.0 Basic Setup


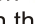

4.1 Changing Operating Language

Press the **☰** icon in the top right of the screen to open the App drawer. Select the “Settings” option to open the Android settings menu.

When selecting the option **A** “Language & Input” the contents will be displayed in the right pane. Open the “Language” option and choose a language for your tablet to operate in. This pane also displays the keyboard settings which you can customize, enable or disable.

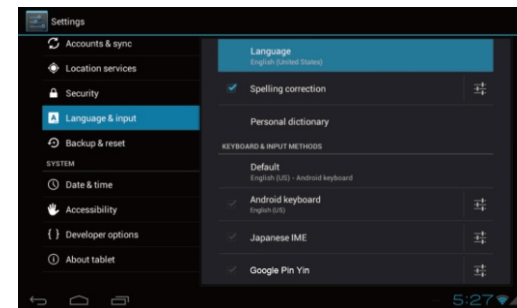


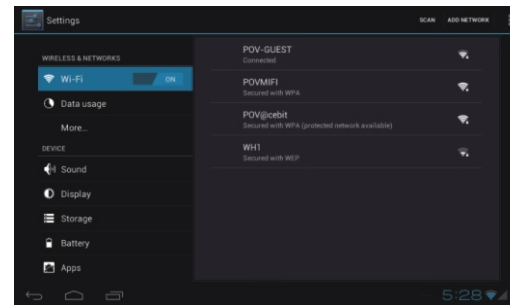 
4.2 WIFI Settings

Press the  icon in the top right of the screen to open the App drawer. Select the “Settings” option to open the Android settings menu. When selecting the option  “WIFI” the contents will be displayed in the right pane. The  switch allows you to quickly toggle WIFI on and off.


In the “WIFI” content panel you can view formerly used WIFI networks and the WIFI networks that have been detected by the tablet. To search for new available networks, press the “SCAN” icon located in the right top corner. The option “ADD NETWORK” allows you to add a network by manually inputting the SSID network and security codes.

Whether manually added or automatically detected, you may need to fill in a password to be accepted on the network. Please contact your system or network administrator for the correct information.

Advanced network settings can be found by clicking the options icon .

 


4.3 Connecting the Tablet to your PC

When connecting the tablet to your PC through USB, no drivers are needed to access the tablets internal memory or inserted MicroSD card. However, you do need to confirm the USB connection: click the notification area in the system information bar at the bottom of the screen . Select the option “Select to copy files to/from your computer”.

If your PC still asks for device driver, it may be that the tablet is in android debugging mode. To change this, go to the “Settings”

menu and open the { } “Developers Options” item. In the right pane you can (un)check “USB debugging”

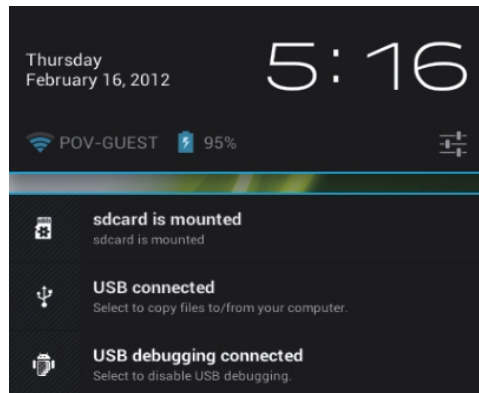

Warnings And Disclaimers

Users should ensure that all data is regularly and independently backed up. Audio, Stylco and the manufacturers of this product will not be held responsible for any direct or indirect loss or damage caused by software failure, incorrect hardware use, product maintenance, battery replacement or any accidents caused by personal data or mishandling of the product

Furthermore, we will not be responsible for any mishaps arising from the failure of the user to properly understand this manual or for any accidental damage that may be caused due to this manual.

Due to continuous product improvement, specifications may be subject to change without prior notice.

The firmware will take up part of the machines memory, therefore the actual available memory capacity of the machine will be less than the original memory of the machine.

will not ensure and will in no way be liable for non-compatibility with third part devices or software.
Due to continuous product development, specifications may be subject to change without prior notice.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help