### 55mm

# Wireless Portable Speaker 65mm User Manual

0 0 0



 Previous (long press for Volume Down)

(2) Answer phone/Play/pause

- Next (long press for Volume Up)
- Micro SD card slot
- 9
  - ⑤ DC 5V charging port
  - (6) Power switch OFF/ON
  - ⑦ AUX IN
  - (8) USB disk slot
  - Oharging cable

#### **Getting Started**

Please read this manual before operating your Bluetooth device and keep it for future reference. Please read all Safety precautions before using your Bluetooth device to ensure safe and proper use.

#### Product Overview

- 1) ON/OFF Power Button
- "— "Previews(Long Press for Volume Down)
- 3) " + "Next(Long Press for Volume Up)
- 4) " O "Play/Pause(Press to Answer Incoming Call)
- 5) LED light indicator
- Waiting for Bluetooth connection: Blue light flash
- Bluetooth connected successful: Blue light long on
- Red light long on in charging, red light off after charging
- 6) Mini USB port(Charging)
- 7) Bluetooth range 10M
- 8) Plaving time: 4.5-5.5 hours
- 9) This speaker has the prompt tone function, operate according to tone

#### Charging the Speaker

The product has a rechargeable built-in battery which is non-removable. Make sure the speaker is fully charged before using it for the first time. To charge the speaker. connect it with the mini USB port using the cable provided, into any available USB DC5V power source ( PC or Adapter-Not included).

While device is charging, the red LED light will be on. Once charging is complete the Red LED will turn off and the device is ready for use. The Blue LED will remain illuminated at all times once the Speaker is power on.

#### Bluetooth connection

To ensure you get the best performance from your speaker, keep the distance between your speaker and mobile device as closer as possible and avoid placing any other object in its signal path.

- 1. Power on, the LED light indicator turns blue, flashing fast and it enter Bluetooth mode:
- 2. Turn on the Bluetooth function of your mobile device and search the speaker device. You will find the

- sneaker name "D16" select and click to pair them Incase if you are prompted for a password, please input 0000 on your mobile device to make the connection
- 3. Once connection is successful, select music file from your mobile device to play it.

#### Hands-free Mode

- 1. During Bluetooth mode, when playing music, if there is incoming call, the music will stop automatically.
- 2. To answer the call, press the answer button on your mobile phone device or press PLAY/PAUSE button
- 3. For clear conversation during phone call, please keep the speaker unit at a reasonable distance and speaker directly into the MIC.
- 4. To end the call, press the end button on your mobile
- phone device or press PLAY/PAUSE buttons once. 5. After the call is ended. Music will automatically start
- 6. If it does not play, establish connection once again

#### TF card/USB Mode

- Power on the speaker to AUX mode. 2 Insert the TE card or USB disk into the slot properly
- music files will automatically start to play.
- 3. Use function button on the speaker for PLAY/PALISE/ VOI +/VOI -/Prev/Next

#### Safety Precautions

- Keep your device and all accessories out of the reach of children or animals. Small parts may cause choking or serious injury if swallowed.
- · Avoid exposing your device to very cold or very hot temperatures (below 0 °C or above 45 °C).
- · Extreme temperatures can cause the deformation of the device and reduce the charging capacity and life of vour device.
- Do not allow your device to get wet-liquids can cause serious damage. Do not handle your device with wet hands. Water damage to your device can void your manufacturer's warranty.

- 1. Do not install this equipment in a confined or buildingin space such as a book case or similar unit, and remain a well ventilation conditions at open site
- 2. The ventilation should not be impeded by covering the ventilation openings with items, Such as newspapers, table-cloths curtains etc.
- 3. No naked flame sources, such as lighted candles. should be placed on the apparatus.
- 4 Attention should be drawn to the environmental aspects of battery disposal:
- 5. The use of apparatus in tropical and moderate
- 6. WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine fire or the like













## **FCC STATEMENT:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

# **RF warning statement:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.