 


EMPOWRING YOUNG MINDS

# Tablet PC EM101T

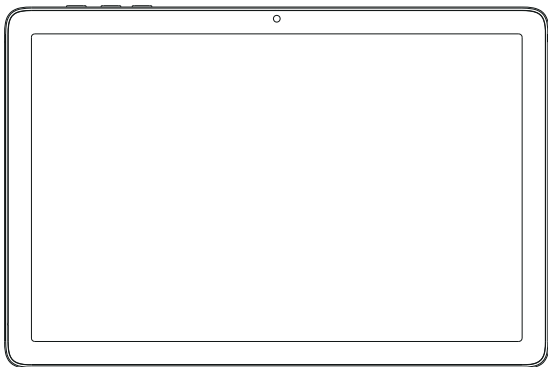

## USER GUIDE

Please read the manual before using this product, and save it for future use.



 
# English Content

ATTENTION .....	1
FUNCTION OVERVIEW .....	2
SPECIFICATIONS .....	2
START .....	3
HOME SCREEN .....	3
BASIC SETTINGS .....	4
NETWORK CONNECTION .....	7
APP MANAGEMENT .....	8
INTERNET NAVIGATION .....	8
MULTIMEDIA .....	9
TROUBLESHOOTING .....	11
FCC STATEMENT .....	12
IC WARNINGS .....	13

# ATTENTION

1. Before using the tablet, please read the manual of the tablet carefully, and operate it according to the requirements and specifications in the manual.
2. Use the charger that comes with the original machine to charge, do not replace other chargers casually. If the charger is damaged, replace it with a new regular charger (current voltage is 5V/2A).
3. When the tablet prompts for charging during use (the power is generally about 20%), it should be charged in time.
4. The duration of use should not exceed 3-4 hours. It is best not to use it while charging. (The body is in a state of constant heat for a long time, which may easily lead to the degradation of hardware performance, or accelerate the aging and damage of hardware).
5. When the tablet encounters a power failure during charging, you should unplug the tablet first.
6. Other items should not be placed on the tablet to avoid damage to the screen.
7. When the tablet is not in use, it should be placed on a stable desktop to avoid damage to the body due to accidental falls.
8. The tablet screen is afraid of squeezing and collision, please handle it with care. In addition, do not use fingernails during use. Generally light touch, not heavy pressure.
9. When cleaning the tablet, do not directly rinse it with water, as the tablet that is not waterproof may be useless after washing.
10. The built-in electronic components of the tablet are afraid of moisture and water, and must be kept away from high temperature, humidity and dust. Please keep it in a dry place and avoid direct sunlight.

# FUNCTION OVERVIEW

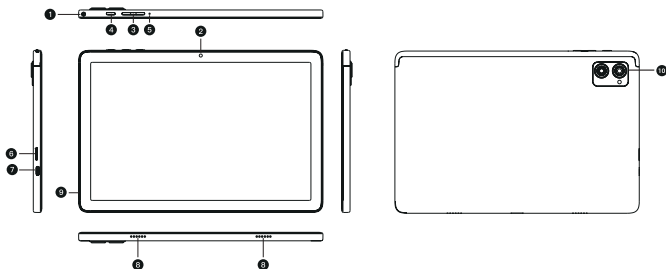

- |                      |                 |
|----------------------|-----------------|
| 1. Headphone jack    | 6. TF Card      |
| 2. Front camera      | 7. USB-C port   |
| 3. Volume+ / Volume- | 8. Speaker      |
| 4. Power on/off      | 9. Mic          |
| 5. Reset             | 10. Rear camera |

# SPECIFICATIONS

Tablet Specifications			
Tablet Size	10.1 inch	Connectivity	Wi-Fi/Bluetooth
Chipset	T616	CPU	Spreadtrum T616 Dual-core A75 1.8GHz + Six-core A55 2.0GHz
GPU	Mali-G57-3EE-1core 750MHz	RAM	4GB
Display	1920*1200	ROM	128GB
Front Camera	2MP	WiFi	802.11b/g/n/ac 2.4G/5G
Rear Camera	5MP	Power Supply	DC 5V 2A
Battery	6000mAh	Touchscreen	Multi-Touch
Operating System	Android 14	Ports	USB Type-c/TF card

# START

## Power On/Off

1. Hold down the power button for 2-3 seconds to turn on the tablet. Select the language and follow the start up guide to set up the tablet.
2. Hold down the power button for 2 seconds to display Power off / Restart options on the screen. Tap Power off to turn off the tablet. Tap Restart to restart.
3. If the tablet freezes, press and hold the power button for 6-7 seconds to do a forced shutdown.

## Battery

1. A rechargeable Li-ion battery is installed in the tablet.
2. We suggest you drain the battery completely once a month if you only use your tablet occasionally.
3. DO NOT dispose of tablet in fire.
4. Charge the device fully each time to increase the battery life.
5. You can charge the tablet, even if the tablet has some power left in it, as the lithium battery does not need to be fully drained to charge.
6. A full charge can be used for an average of 3-4 hours.

 
## Sleep Mode

Simply press the power button once to switch the tablet into sleep mode when the tablet is ON; press again to wake it up.

Tip: Go to Settings > Display > Screen timeout to adjust automatic sleep settings

# HOME SCREEN

## Icon on the Bottom Menu

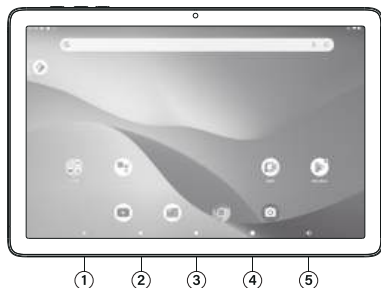

1. Volume Down
2. Back
3. Home Screen
4. Recent Activities
5. Volume Up

## Home settings, Wallpapers, Widgets

### Home settings

Tap and hold your finger in any blank space on the home screen and a pop-up menu will appear. Tap Home Settings to enable/disable adding icons to the Home screen. This applies to new Apps installed from Play Store.

### Wallpapers

Tap and hold your finger in any blank space on the home screen and a pop-up menu will appear. You can choose a wallpaper from the Gallery or your downloaded files. Set the one you like to be the wallpaper.

### Widgets


Tap and hold your finger in any blank space on the home screen and a pop-up menu will appear. Tap Widgets, then tap and hold the desired widget, drag the widget to the target homepage, and finish adding.


### Tips

Tap an icon and move it on top of another icon to create a new folder on the home screen. Open the folder; tap "Edit Name" to rename the folder.

## BASIC SETTINGS
 
### Quick Settings

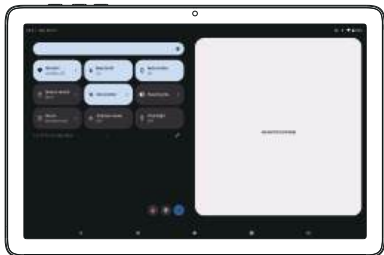

Swipe down from the top of the screen, then continue to swipe down. Tap the  icon to change the options in the quick settings.





## Storage

- View and manage your storage space

## Display & Wallpaper

- Adjust the screen brightness
- Adjust the font size and display size
- Set eye comfort mode
- Set a screensaver
- Change the wallpaper

## Sound

- Set volume levels for media, call, ring & notifications and alarms
- Set Do Not Disturb preferences
- Turn on / off the sound for screen lock, charging, and touch

## Scheduled power on / off

- Set a scheduled start time
- Set a scheduled shutdown time

## Accessibility

- For vision and hearing impaired users, manage settings for screen readers, subtitles, and more

## Privacy, Location, Security

- Set screen lock pattern, e.g. password, PIN, Swipe, etc
- Enable / disable all notifications while the screen is locked
- Turn on / off the location services for a specific app
- Set show/hide password when inputting a password

## Accounts & Password

- Add and manage the user accounts on your tablet

## Digital Wellbeing & Parental Controls

- Set timers for your apps
- Set up parental controls with Google's Family link

## Google

- Set the preferences for Google related services

## System

- Set Language

Tap Languages & input > Languages > + Add a language. After adding, hold and slide the = icon to the top to change the language

- Restore Factory Settings

Tap System > Advanced > Reset options > Erase all data ( factory reset ) to restore to factory settings

- Other Settings

Set the date and time

Turn on / off the backup

## About Tablet

- Check detailed information about the tablet

# NETWORK CONNECTION

 
Go to Wi-Fi Settings in the Settings interface or directly enter through Quick Settings

## Wi-Fi Connection

1. Go to Settings > Network & Internet > Internet > Turn on the Wi-Fi. All available Wi-Fi connections will be listed.



2. Select your Wi-Fi, and input the correct password.

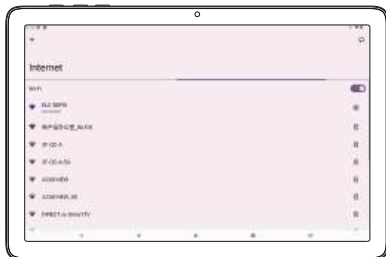

## APP MANAGEMENT

### App Download and Installation

1. Tap and open Play Store on the Home screen.
2. Log into your Google account; search and download the apps you need.

### Move an App

Tap and hold the app, then slide to desired screen.

### Remove an App from the Home screen

Tap and hold the App, then slide to the x to remove it from your home screen.

### Uninstall an App

Tap and hold the app, then slide to the uninstall to uninstall the app.

### Clear the App Cache

1. Go to Settings > Apps & notifications
2. Select an App > Storage & cache > CLEAR CACHE

## INTERNET NAVIGATION

Please make sure the tablet is connected to a working Wi-Fi network before trying to browse the Internet. You can use the Chrome browser that is pre-installed or download another browser from the Play Store.

# MULTIMEDIA

## Connecting to the Computer

 
1. Connect your tablet to a computer via USB type-c cable and go to Quick Settings.
2. Tap Android Systems > Charge this device via USB > Tap for more options > Media device(MTP)
3. Go to your computer and find tablet to transfer files between your tablet and computer.

## Tip

- Select Charge only if you only need to charge the tablet.  
Select Camera (PTP) to transfer photos between the devices.

## Connecting to an External Device

1. Insert a micro SD card into the micro SD card slot and go to Quick Settings.
2. Tap to set up.

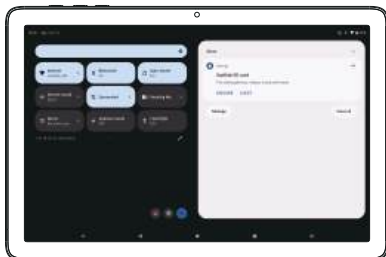

3. Set the micro SD card as portable storage by selecting use for portable storage. Enter micro SD card storage to move files between the card and tablet.



# TROUBLESHOOTING

## Q1. The tablet can not be turned on

- Reboot your tablet after charging for 30 minutes
- Press the power button to see if the tablet is in Sleep Mode
- Press and hold the power button for 7 seconds to turn off the tablet, then turn on it

## Q2. The tablet can not be charged

- Charge the device for at least 30 minutes, in case the battery was completely drained
- Make sure the USB cable is properly plugged into the charging port
- Try another compatible USB cable and adapter

## Q3. Error message occurs during operation

- Uninstall the app displaying the error message, then download and install again

## Q4. The tablet cannot be detected by the computer

- Make sure the tablet is powered on
- Try another USB cable
- Try another USB port on the computer
- Instead of Charge this device, choose Transfer files or Transfer photos (PTP) when connecting the tablet to the computer

## Q5. The tablet cannot connect to the Wi-Fi

- Make sure the Wi-Fi on your tablet is powered on
- Make sure you input the correct password
- Reboot the router
- Make sure there is no filter setting or device connection limitation in the settings of the router
- Forget the current Wi-Fi, reset the router and connect to the network again

## Q6. The storage space of the tablet is not enough

- Uninstall the apps you don't use
- Clear the app cache regularly
- Insert a micro SD card to expand the storage

# FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference
2. This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

## RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions (10mm) accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.



This device complies with parts of the FCC rules. Operation is subject to the following two conditions

This device will not cause harmful interference,

This device must accept any interference received, including interference that may cause undesired operation

Android is a trademark of Google LLC

# IC WARNINGS

## - English: "

This device complies with Industry Canada licence-exempt RSS standard

(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device."

## - French:"

Le présent appareil est conforme aux CNR d'industrie Canada applicables

aux appareils radio exempts de licence. L'exploitation est autorisée

aux deux conditions suivantes :

- (1) l'appareil n' doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

d'exposition aux radiofréquences en deçà des niveaux testés , utiliser des accessoires avec cet équipement pour maintenir une distance de séparation minimale de 0 cm entre le corps de l'utilisateur et l'appareil. Ces accessoires ne doivent pas contenir des composants métalliques . Il est possible que les accessoires utilisés près du corps qui ne répondent pas à ces exigences ne sont pas compatibles avec les limites SAR et il est conseillé d'éviter de les utiliser.

Operations in the 5.15-5.25GHz band are restricted to indoor usage only.



## Contact Us

E-mail: [service@elclcd.com](mailto:service@elclcd.com)

Manufacturer: Shenzhen Electron Technology Co., Ltd

Address: Bld.2, Yingfeng Industrial Zone Tantou Community,  
Songgang Street, Bao'an, Shenzhen, China.

For any inquiries, feel free to contact us. We'll be glad to help you out!