

Sport Bluetooth Headset



Charging the headphone

You must charge the battery fully before using the headphone for the first time.

1. Connect the USB charging cable to the USB charge port of the headphone.
2. The light indicator will turn into red when charging.
3. The full charge takes about 2 hours.
4. The red light indicator goes out and the light indicator turns into green when charging completed.

Power on/off the headphone

Power on Press the button "Play/Pause" for about 2-3 seconds until the yellow indicator light is flashing.

Power off Press the button "Play/Pause" for about 2-3 seconds until the red light indicator flash and then goes off.

Pair to your Smartphone

1. Press the button "Play/Pause" for about 4 seconds until the red and yellow lights start flashing alternately.
2. Turn on the Bluetooth function of your smartphone.
3. Search for the bluetooth devices and select "S9-HD".
4. Enter the code "0000" if needed.
5. If pairing is successful, yellow light indicator starts flashing.

Remark: You need to pair the bluetooth headphone to your smartphone for the first time. The headphone will connect to your smartphone automatically the next time when you turn it on. (Press the button "Play/Pause" for about 2-3 seconds until the yellow indicator light is flashing. Then the headphone will connect to the smartphone automatically.)

Answering a call

For iPhone users:

Selection 1. Press the button “Play/Pause” of the headphone.

Selection 2. Press the “Answer” button of your iPhone and check your iPhone call menu.

Look for the audio source and select the headset “S9-HD”

For Android User (such as Samsung, HTC, Sony etc.):

Selection 1. Press the button “Play/Pause” of the headphone.

Selection 2. Press the “Answer” button of your phone.

Ending a call

Press the button “Play/Pause”.

Rejecting a call

Press the button “Play/Pause” for 2 seconds, then release.

Redialing the last called number

Double press the button “Play/Pause”.

Playing music

When you are listening to the music, you can press the buttons “Play, Pause, Previous Song, Next song” to select your optimal performance and control the volume.

1. Next Song: Long press the button “Next song”.
2. Previous Song: Long press the button “Previous Song”.
3. Volume Up: Short press the button “Next Song”.
4. Volume Down: Short press the button “Previous Song”.

FAQ

1. The headphones can't be charged.

Try the other USB cable or AC adapter that does not work.

2. The headphone (S9-HD) Bluetooth devices could not be found.

Please make sure that the headphone is in pairing mode.

Press the button “Play/Pause” for about 4 seconds until the red and yellow lights start flashing alternately.



FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesirable operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with these instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorientate or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.