

truconnect™

 
USER GUIDE




WELCOME

- Congratulations on your purchase of the TruConnect mobile phone. Your phone provides many functions which are practical for daily use, such as a hands-free loudspeaker, camera, MP3 player, Ultra clear video
- You can read the manual to understand how to use TruConnect mobile phone and experience the well-established functions and simple operation method. Please use the original accessory in order to achieve the best use of effects. TruConnect shall not be responsible for any damage in machinery due to use of non-original components.

YOUR PHONE-FRONT VIEW

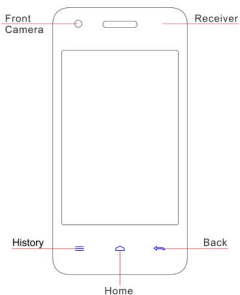

YOUR PHONE-BACK VIEW

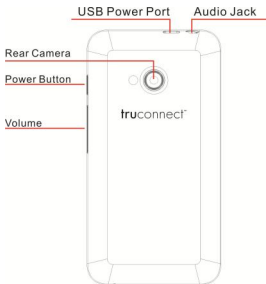 



CHARGE THE BATTERY

Connect this end to phone's USB port.

Tip: Be sure to charge your phone's battery completely after inserting it in the phone for the first time.



  
INSERT SIM AND Micro SD CARD

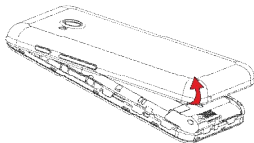

Please insert the SIM card(s) according to the label on the phone. Make sure that the clipped corner of the SIM card and the metallic contacts are facing the correct direction. Slide the SIM card into the slot until it doesn't move up any further.

Micro SD card slot is above the SIM card slot. The direction in which the micro SD card has to be inserted into the designated slot is shown by a label on the phone.

 
Tip: For additional media storage insert a micro SD card.



TURN THE PHONE ON& OFF


Hold down the power button to turn the phone on.

 Hold down the power button, then touch Power off to turn the phone off

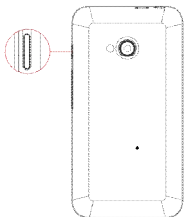


DIM LOCK & WAKE THE PHONE

 
When the power is on and you want to dim the screen, press the power button.

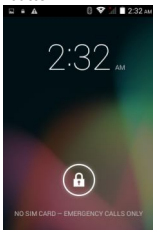

 When the screen is dimmed and you want to wake the phone, press the power button and then drag the lock to the right.

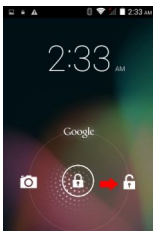

HOME SCREEN

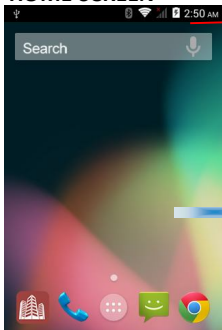 

Phone status bar and notifications

Touch and hold an empty spot to change the wallpaper

Slide left or right to see more panels

Touch it to Chrome

Touch it to enter message

Touch it to enter main menu

Touch it to enter dial pad

Touch it to enter App City

APPS



1. Touch it to enter app tray.



2. Touch an app to launch it

STATUS BAR

The status bar shows your phone's status and notifications. (Notifications are described on the next page.)











Notification icons

Status icons

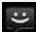

Status icons

The following status icons may appear on your screen:


Icon	Statement	Icon	Statement
	SIM Network signal level		Headset is inserted
	Indicates battery capacity		Bluetooth is activated
	Unread messages		Wi-Fi is connected
	Missed calls		Airplane mode is activated
	Alarm is activated		USB is connected

NOTIFICATION PANEL



The notification panel is your center for new events: like new e-mail, voicemail, updates, and more.

 
Drag down to display notifications

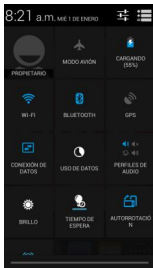
Touch a notification to respond




MAKE & ANSWER A CALL

 1. From the Home screen, touch 
2. Dial a number using the dial pad.
3. Touch to initiate the call 

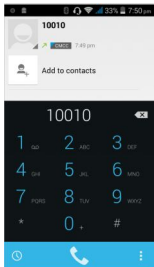


Answer a call Drag 




Decline a call Drag 

 VOLUME CONTROL WHEN CALLING

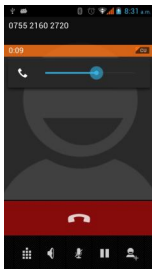Volume key is at the left side of the phone. During a conversation, you can press the volume key to tune the sound volume.



SEND A TEXT

 
1. From the Home screen, touch 
2. Touch  to start a new message.
3. Touch the To field, then enter a recipient.
4. Touch the Type message field, then enter a message
5. Touch  Send the message

ADDING EMAIL ACCOUNTS

The first time you open Email, you are prompted to set up an email account. After that, you can configure Email to send and receive email from additional accounts.

To add an email account:

- 1) Tap the e-mail icon. In Your account interface, tap Next. In e-mail address option, enter your e-mail address. In password option, → enter your e-mail password. Tap Next.
- 2) Filling the email address and password, tap next to setup email
- 3) Tap next to enter your email.

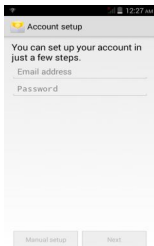

SETTINGS

the settings for various features of the phone

Get to know the settings in your phone so that you can personalize them to your own requirements. Go to Settings to configure how your phone looks, sounds, communication, privacy, and operations in a variety of ways:

Wireless & networks

You can use Wireless & Network settings to manage your SIM card, configure and manage connections to networks and devices by using Wi-Fi. You also can set Bluetooth, data usage, airplane mode, VPN, tethering & portable hotspot and mobile networks in this interface.


Audio profiles

There are four profiles: General, Silent, Meeting and Outdoor. You can set the profiles according to different conditions.

Display	You can set Wallpaper, Auto-rotate screen, Brightness, Daydream, wireless display, Sleep and Font size in this interface.
Storage	Use the Storage settings to monitor the used and available space on your phone and on your SD card and to manage your SD card.
Battery	You can view your battery status, battery level and battery use in this interface.
Apps	You can use the Applications settings to view details about the applications installed on your phone, to manage their data and force them to stop, to view and control currently running services, and to view the storage used by applications, etc.
Location	You can turn on Wi-Fi & mobile network location, GPS satellites, etc through this function.
Security	You can set the parameters about security through this function.
Language & input	Use the Language & Keyboard settings to select the language for the text on your phone and for configuring the input method.
Backup & reset	You can backup your data and reset your phone in this interface.

Add account	You should add account first before using this function.
Data & time	You can use Date & Time settings to set your preferences for how dates are displayed. You can also use these settings to set your own time and time zone, rather than obtaining the current time from the network, etc.
Scheduled power on & off	You should set a certain time, when the time arrive, the phone would power on/off automatically.
Accessibility	Enable your installed accessibility applications and adjust related settings.
Developer options	You can manage your develop tools through this function.
About phone	This function enables you to view some phone related information.

SET A RINGTONE

Press  → Audio profiles, select the profiles you want to set, you can customize the ringtone and volume of incoming call, notification ringtone in this interface.

 
MULTIMEDIA

listen it, watch it, capture it, enjoy it!

FM RADIO

1. Insert an earphone as the external antenna , then tap the Power icon to stop or play FM.
2. Tap the forward by 0.1 MHz or scroll the knob icon to change channel frequency. Press volume key to adjust the volume.
3. Tap Search, Speaker and Record FM icon to adjust.

MUSIC PLAYER

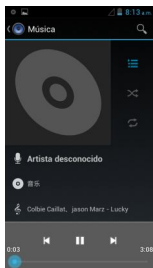


Controls


Play/Pause




Touch 

Previous/Next

Touch 

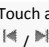Rewind/Forward


Touch and hold 

Volume adjust	Press side key
Now playing: Touch to open the current playlist.	Touch 
Shuffle: Touch to shuffle the current playlist.	Touch 
Repeat: Touch to repeat the current playlist; touch again to repeat the current song.	Touch 

Camera

1. Launch the camera by pressing the camera icon in the app list.
2. In the camera app, tap the screen to focus on a specific area.
3. Press the camera button all the way down to take a picture.

SHOOT A VIDEO

1. Launch the camera by pressing the camera icon in the app list.
2. In the Camera app, select video 
3. Press the camera button to begin filming and press again to stop filming.

Calculator

1. Launch the calculator by pressing the calculator icon on the home screen.
2. In the calculator app, enter numbers and arithmetic operators on the basic screen.

Calendar

You can use the calendar to keep track of important events. After entering the calendar function menu you can select year, month and date. Slide the Calendar screen up and down to switch month.

Sound Recorder

 
Use this function to record audio files. Two function icons at the bottom of the Recorder screen are corresponding to start recording and review record file.

Clock

The clock allows you to view time and date. You can also add an alarm, set the alarm and turn it on. Then, the alarm can ring at a specific time you set.

Video player

With Videos, you can play video clips in your device (for example, the video you captured by the camera) or video files stored in compatible SD card (if inserted).

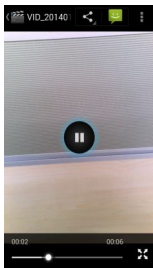

Browser

To let you browse the Internet.

File Manager

 
The phone supports the Micro SD card. You can use the File Manager to conveniently manage various directories and files on the phone and Micro SD card.

Network based services

Such as, Maps, Play Store, Search, etc.

File Transfer

You can connect your phone to a computer with a USB cable, to transfer music, pictures, and other files between your phone or phone's SD card and the computer.

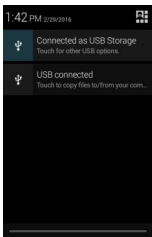

CONNECT TO Wi-Fi NETWORKS

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.



Touch Settings>Wireless & networks > WI-FI settings. Check Wi-Fi to turn it on. The phone scans for available Wi-Fi networks and displays the names of those it finds. Secured networks are indicated with a Lock icon.

truconnect™

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This mobile phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR values for the model phone as reported to the FCC when tested for use at the head and on the body are:

Head: 0.406W/kg, Body - worn: 1.016W/kg

Hotspot: 0.693W/kg

Simultaneous Transmission: 1.354W/kg

(Measurements differ among phone models, depending upon available accessories and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on
FCC ID: [2ABDT-D351W](#)

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.0 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.0 cm from your body when the phone is switched on.

truconnect™