

Digital<sup>2</sup>

11.6" PAD

PLATINUM

Quick Start Guide  
D2-1161G

*U.S Service Hotline : 1-888-863-0138*  
*More support at [www.d2pad.info](http://www.d2pad.info)*

## FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

# Tablet Overview

- 1 Touchscreen
- 2 Notification Bar
- 3 Front Camera
- 4 Volume Button
- 5 Power Button
- 6 Start Key
- 7 Navigation Bar
- 8 Back Key
- 9 Home Key
- 10 Rear Camera
- 11 Power Charging Port
- 12 Microphone
- 13 Earphone Jack
- 14 Micro SD Card Slot
- 15 Micro HDMI Port
- 16 Micro USB Port  
\*Supports USB Mouse (Not Included)
- 17 Speaker
- 18 Magnetic USB Keyboard Connection Port  
\*Keyboard docking is included



# Peripheral Accessories

## Keyboard Shortcuts


A docking keyboard is included within the package. Properly connect it by pointing the bottom 5-pin connection port on the tablet towards the same 5-pin port on the keyboard.

Shortcuts	Function
CTRL+C	Copy the selected item on docs/files.
CTRL+X	Cut the selected item on docs/files.
CTRL+V	Paste the selected item on docs/files.
Shift	Language input switch
START KEY+ D	Return to home screen
Enter/Space	While tablet is not set to any form of screen lock, you may click on Enter/Space to go into home screen.
Print Screen Key	Capture screenshot
Screen Mirror Key	HDMI screen output (only works while HDMI display is connected.)


## USB Mouse (\*Not included)

This tablet can support the mouse right-click key function, just as on a Windows PC. You will need a "micro USB mouse" or a "micro USB male to USB A female adapter" (Figure A. shown below) in order to support this option.

Once a USB mouse is connected, you may see a mouse icon on the tablet screen. In the meantime, the right-click function can be operated anytime you attempt to Open/ Create Shortcut/ Uninstall an application or within any application that displays a right-click menu.

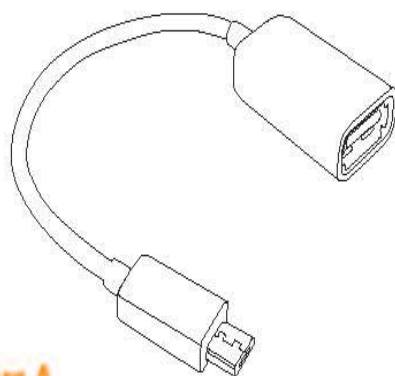 

**Figure A.**  
Micro USB male to USB A female adapter  
(\*Not included)

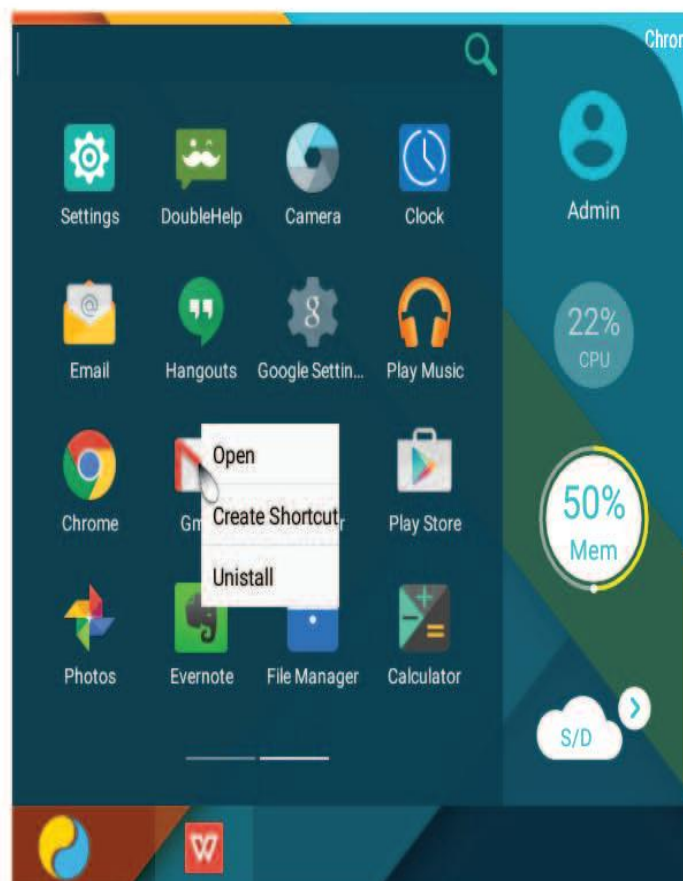 



# Charging & Battery Care

Please charge the battery via method 1 or 2:

1. Connect the included power adapter into the tablet's power charging port and an electrical outlet.
2. Connect the tablet to a computer via the USB cable. (Not recommended)

As the battery charges, a lightning bolt symbol will appear within the battery icon on the status bar of the home screen. When the battery is fully charged, the lightning bolt will disappear and the battery icon will be completely solid.



**Operating Temperature.** Your tablet is designed to work between 32°F & 95°F (0°C to 35°C). The lithium-ion battery used in the tablet is sensitive to high temperatures. Keep your tablet out of direct sunlight and do not leave it in a closed environment susceptible to extreme temperatures.

**Recharge Anytime.** You can recharge the internal battery at any time. However, we recommend discharging the battery down to 10% or lower during the first use before you recharge it.

## Note:

- The lithium battery cells in the battery pack are not user-serviceable.
- When device is not in use, be sure to turn it off to extend usage time.
- The built-in lithium battery must be recharged regularly. Battery damage caused by depletion or the use of unauthorized chargers is not covered by the warranty.

Battery life is based on continuous playback and optimal settings. Actual battery life may vary upon usage and settings.

## Warning:

- Use only the power adapter & USB cable provided with your device.
- For safety, the battery will stop charging if in danger of overheating.

# Power On / Off

Power on

## 1 Press the power button to power on.

To power on your Digital2 tablet, press and hold the power button for a few seconds until the system startup welcome logo appears.

## 2 Slide up the correct user icon to enter the system.

 


Power off

## 3 Press the power button to power the tablet off.

Press and hold the power button for 5 seconds, then a dialog window will pop up.

## 4 Select "Power Off" to turn off your tablet.

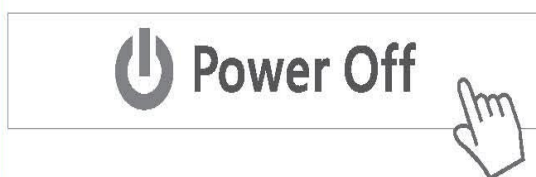


### Troubleshooting:


If your device is frozen and unresponsive, press and hold the POWER button for 10-15 seconds to perform a force shutdown.

# Set-up Wi-Fi

 - 1 Touch 'Settings' on home screen or inside the App Menu, then select 'Wi-Fi' to open the Wi-Fi settings screen.

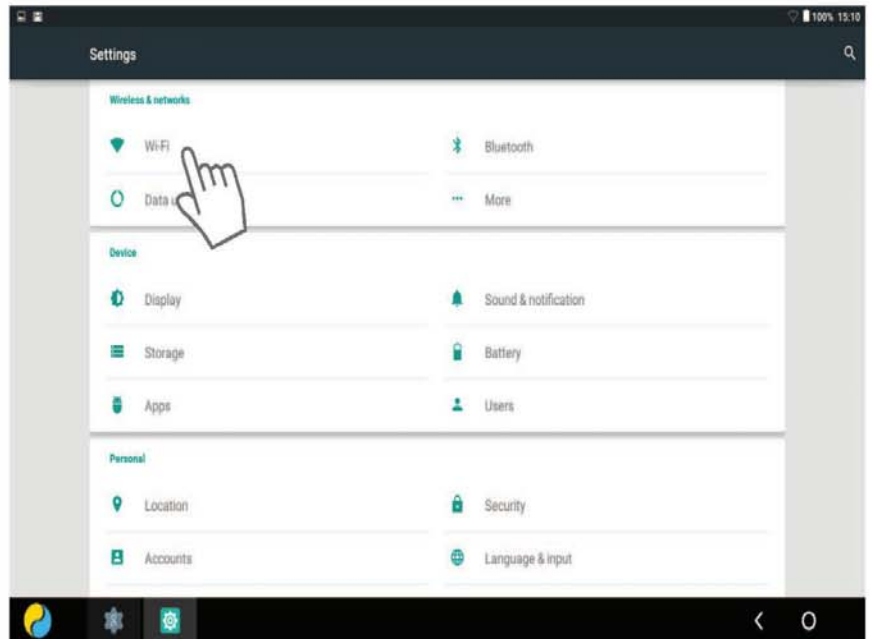

 - 2 Click the switch to turn the Wi-Fi function ON or OFF. While Wi-Fi is turned on, select a network from the displayed list to connect.

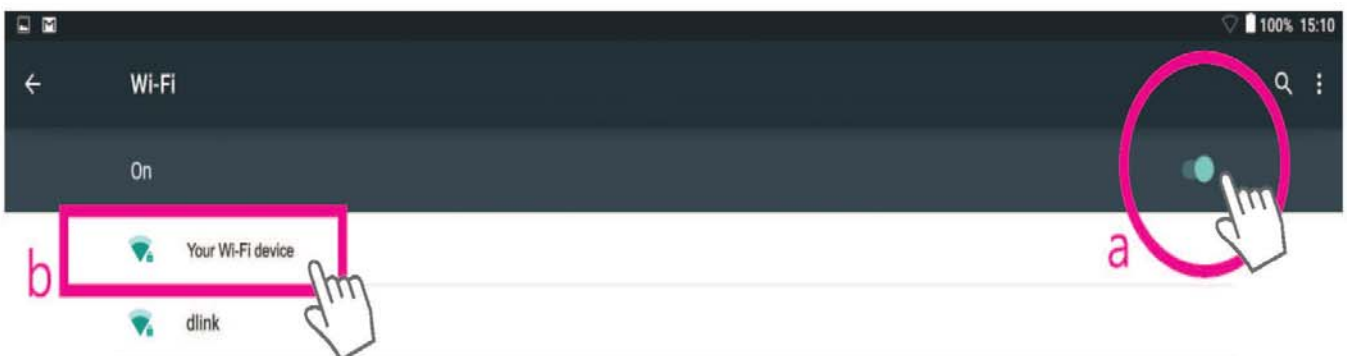

- 3 Once the Wi-Fi password dialog window pops up, enter the correct username and/or password\* if required. Unless you are connecting to an open or public Wi-Fi network, corresponding login information would be required to establish connection.

*\*If you need help finding your wireless network password, please contact your network provider.*

- 4 Once connected, Wi-Fi connectivity icon will display at the top right corner of the screen.







# Set-up Bluetooth

  Follow the steps below to turn Bluetooth on and connect to other Bluetooth devices.

- Turn Bluetooth on
- 1 Open your device's 'Settings' menu.
  - 2 Under "Wireless & networks", select 'Bluetooth'.
  - 3 Click the switch to turn Bluetooth ON or OFF.
  - 4 A Bluetooth icon at the top of your screen will indicate when Bluetooth is turned on.



- Pair with a Bluetooth device
- 1 Once the tablet's Bluetooth function is turned on, make sure the second Bluetooth device is turned on as well and ready to be paired.
  - 2 The tablet will scan for and display all available Bluetooth devices in range under "Available devices." If your Bluetooth device isn't showing on the list, click the Menu icon, then select Refresh.
  - 3 Click the name of the Bluetooth device you want to pair with your tablet.
  - 4 Follow the on-screen instructions to complete pairing. If you are prompted to enter a passcode, consult the documentation that came with the Bluetooth device.
  - 5 Once pairing is successful, your tablet will connect to the Bluetooth device and it will be displayed as 'Connected' under 'Paired devices.'

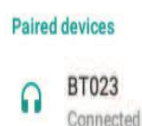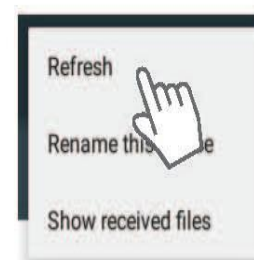

## Bluetooth Visibility

By default, your tablet will be visible to nearby devices while Bluetooth is turned on.

Tips: To extend the life of your battery between charges, turn Bluetooth off when you're not using it.



# Set-up Email

From the home screen, select the Email icon.





## Automatic Setup

 
 
 
- 1 Enter your email address, click 'Next'.
- 2 Enter your password, click 'Next'.
- 3 Choose your account options, click 'Next'.
- 4 Once the account is set up, you may give this account a name.

## Manual Setup

- 1 To set up your email manually, on the 'Enter your email address' screen, type in your email address, then click the bottom-left 'Manual Setup' option.
- 2 Select the type of email account you are setting up (POP3 / IMAP / Microsoft Exchange Account) and complete the following settings.


## Compose New / Replay / Delete an Email

- 1 In the inbox, click the Compose icon .
- 2 Add recipients by typing an email address in the 'To' field.
- 3 Click  to add file attachments.
- 4 Once the email is composed, select Send , or click on  for more options, such as Save as draft, Discard, Settings, and Insert quick response.
- 5 To reply to an email, open up the email and choose Reply, Reply all, or Forward.
- 6 Go to Inbox to display messages.
- 7 Slide left or right on the email you wish to delete.
- 8 To undo, click Undo.

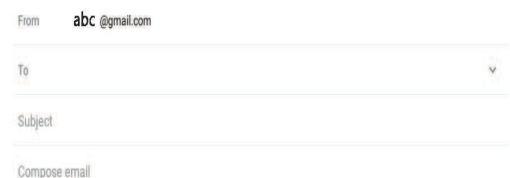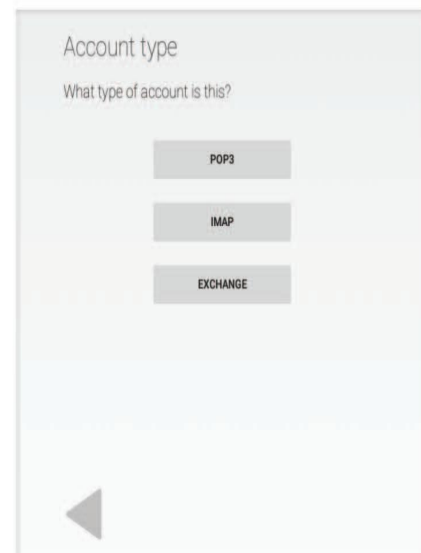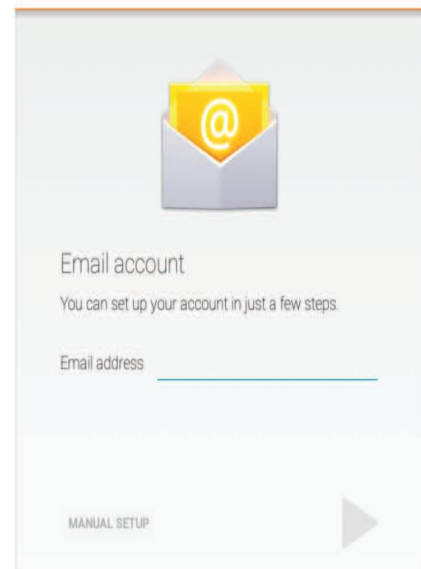


# Personalize your Tablet

 Press and hold on a blank spot on the home screen and a menu will appear.

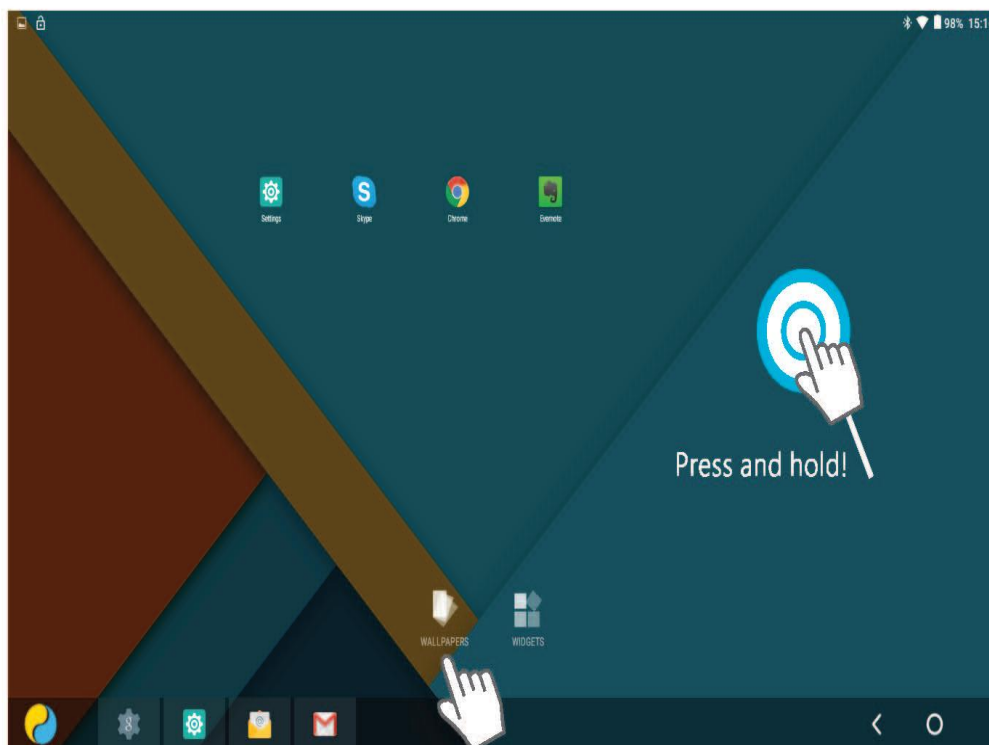

 Choose between the Wallpapers and Widgets options. In the Wallpapers menu, click "Pick image" to choose from the photos you had captured with the camera. In the Widgets menu, click and hold on to a widget, and place it onto the home screen, then release when you have finished positioning the widget.

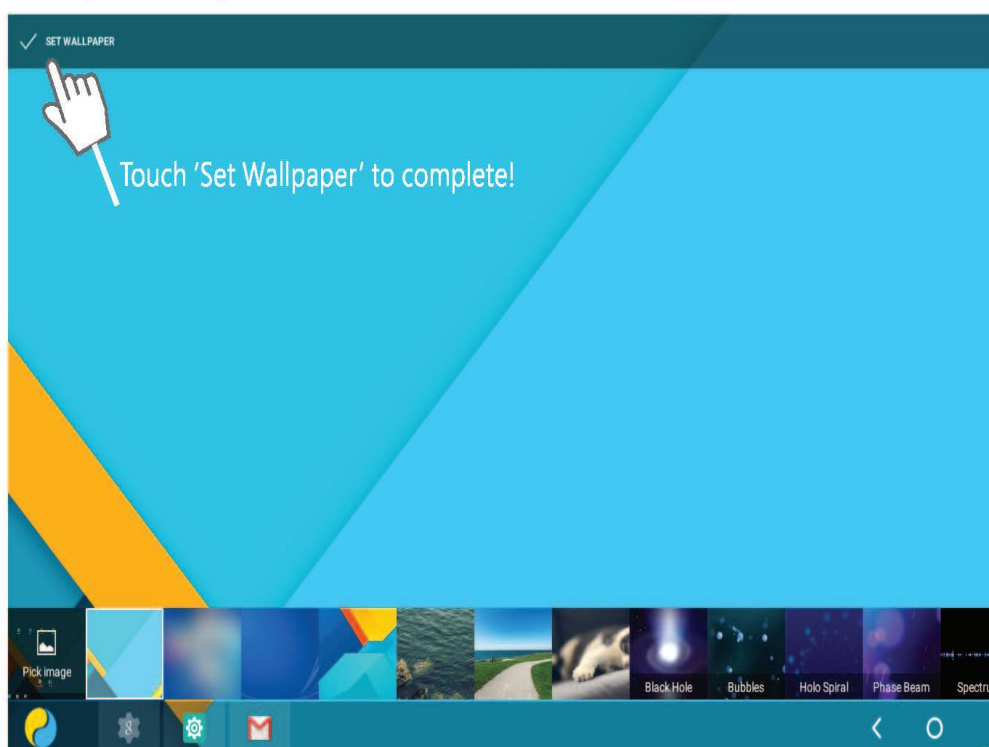

Organize your home screen to your liking. Press and hold on an app in order to move its position or remove it from the home screen.

# Apps Menu & Task Bar

## Apps Menu

 
- 1 Click the 'Start' key to display Apps Menu.
- 2 Select the application you would like to open.
- 3 Select the Back Key to return to the previous screen; Select the Home Key to return to the home screen.



## Task Bar


### The task bar inside the navigation bar shows recently opened apps

To completely close out the app and remove from the task bar, simply click and hold on the app icon displayed in the task bar, then drag and flick up to remove and close it completely.

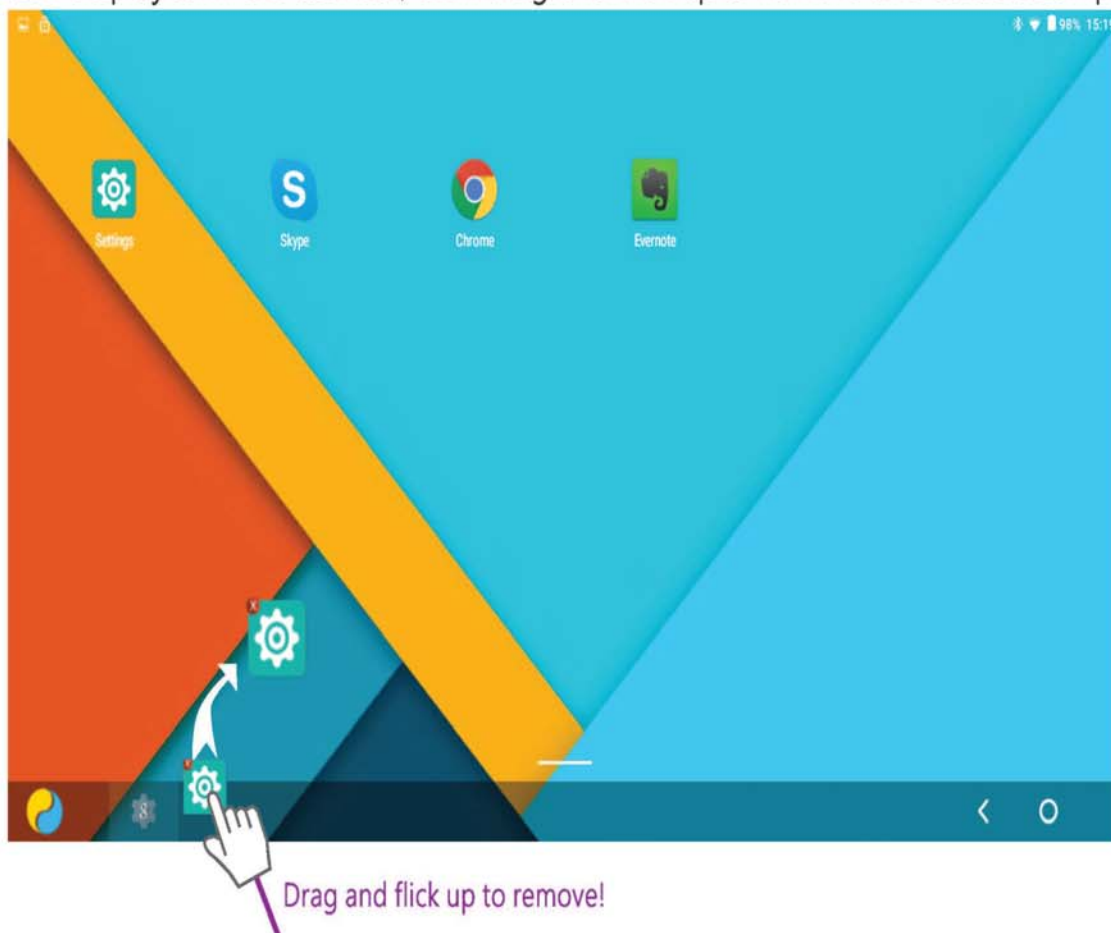

# WPS Office & Office Suite

 
This tablet comes with WPS Office and Microsoft Office Suite of Word, Excel and Powerpoint. On the initial setup, you are required to sign in with your Microsoft account. (You may create an account directly from the welcome page if you do not have one available.)

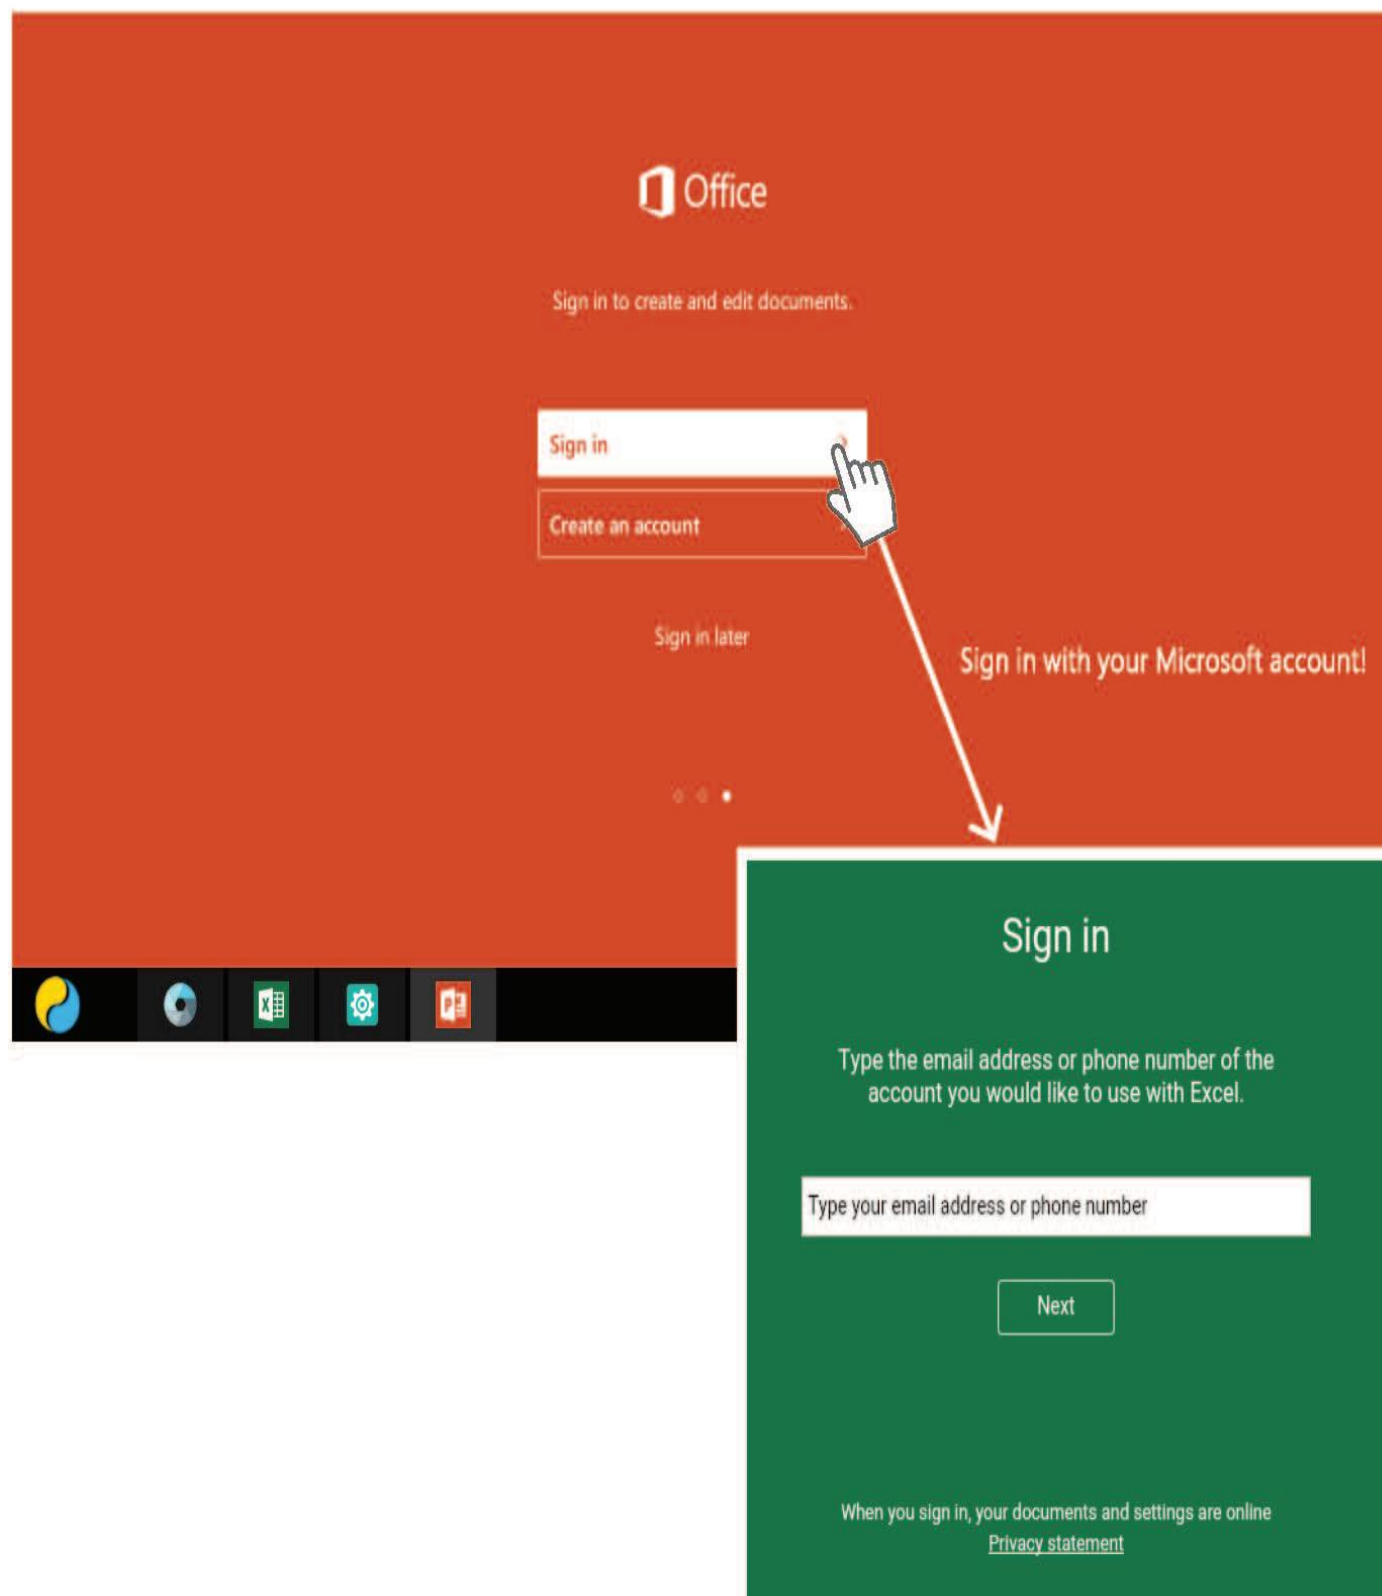




# Notifications

 Click the notification bar & slide down once on the home screen to open the notification list. The notification list reports the arrival of new messages, calendar events, alarms, etc.

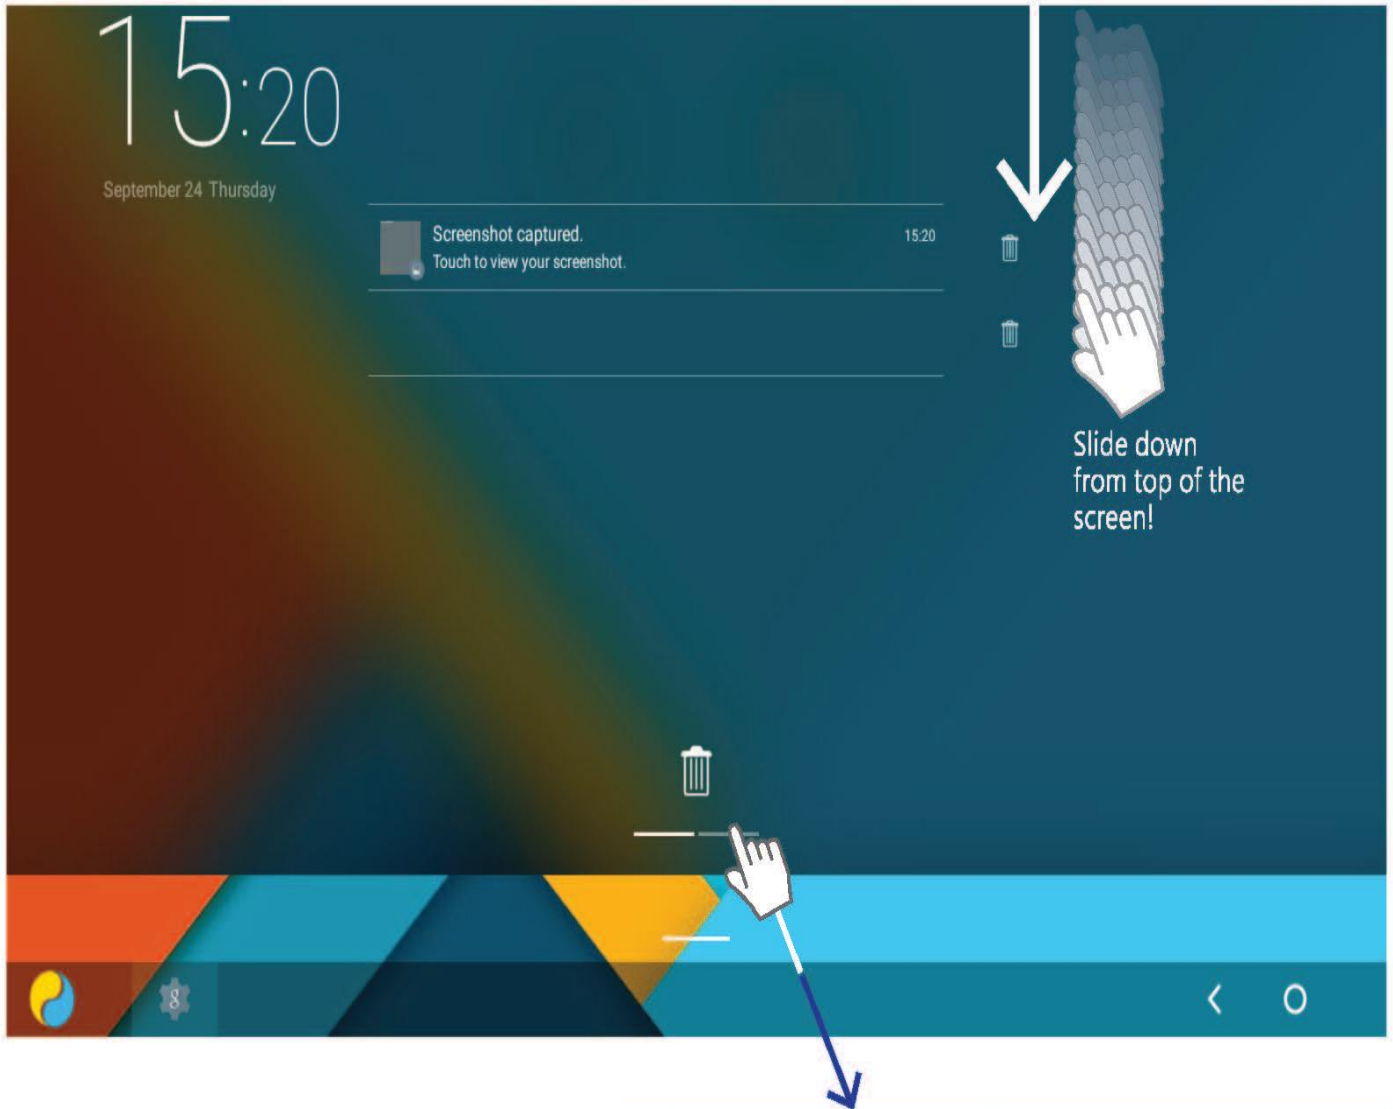

Slide down from top of the screen!

 Click the right-hand bar at the bottom of the notification page to access the 'Settings' Shortcut page.

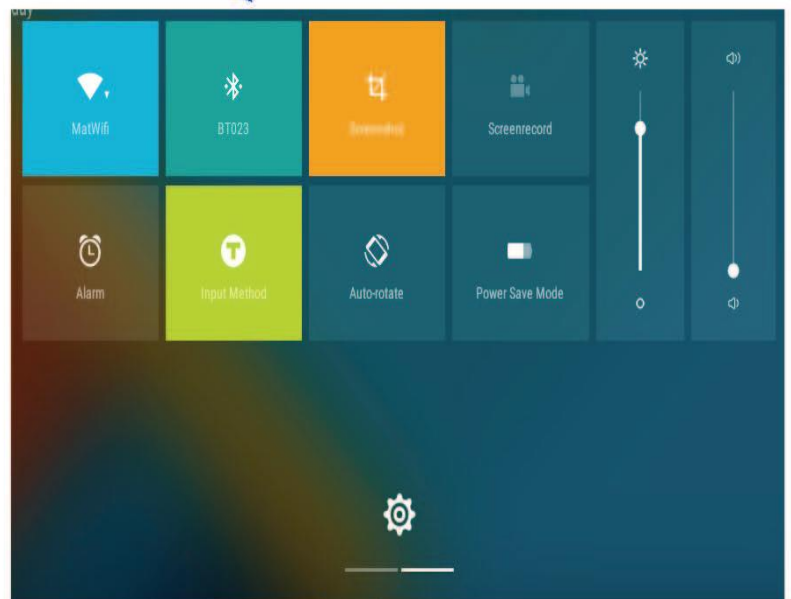

# User Profile

## Add Users

 
By default, Admin is the primary user account. You may add up to 7 new users for this tablet. To add users, enter the 'Apps Menu' and select the 'Admin' icon to access the 'Users' menu. Click 'Add user or profile' and follow the on-screen instructions.



Note: Only Admin can add new users. If you are on another user profile and want to add new user(s), you must log out and log back into Admin profile.

## Delete Users

To delete users, enter the 'Apps Menu' and select the 'Admin' icon to access the 'Users' menu. Click the 'Trash' icon next to the name of the user to delete the account.

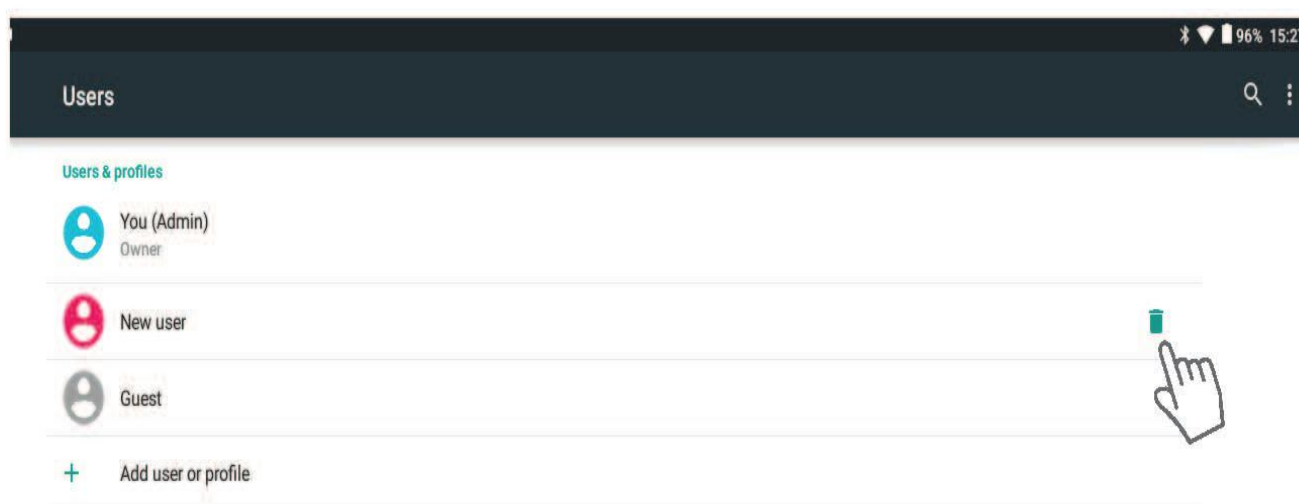


# File Transfer

## Connecting Tablet to PC


Connect the included Micro USB to USB cable to your tablet and computer.



 After a successful connection, you may continue using your tablet. Slide the notification bar down and click on 'Connected as a media device,' then choose Media device or Camera. By default, the 'USB debugging' is enabled while connecting to a PC via USB. However, you may go to Settings > Developer Options and enable 'USB debugging' if needed.

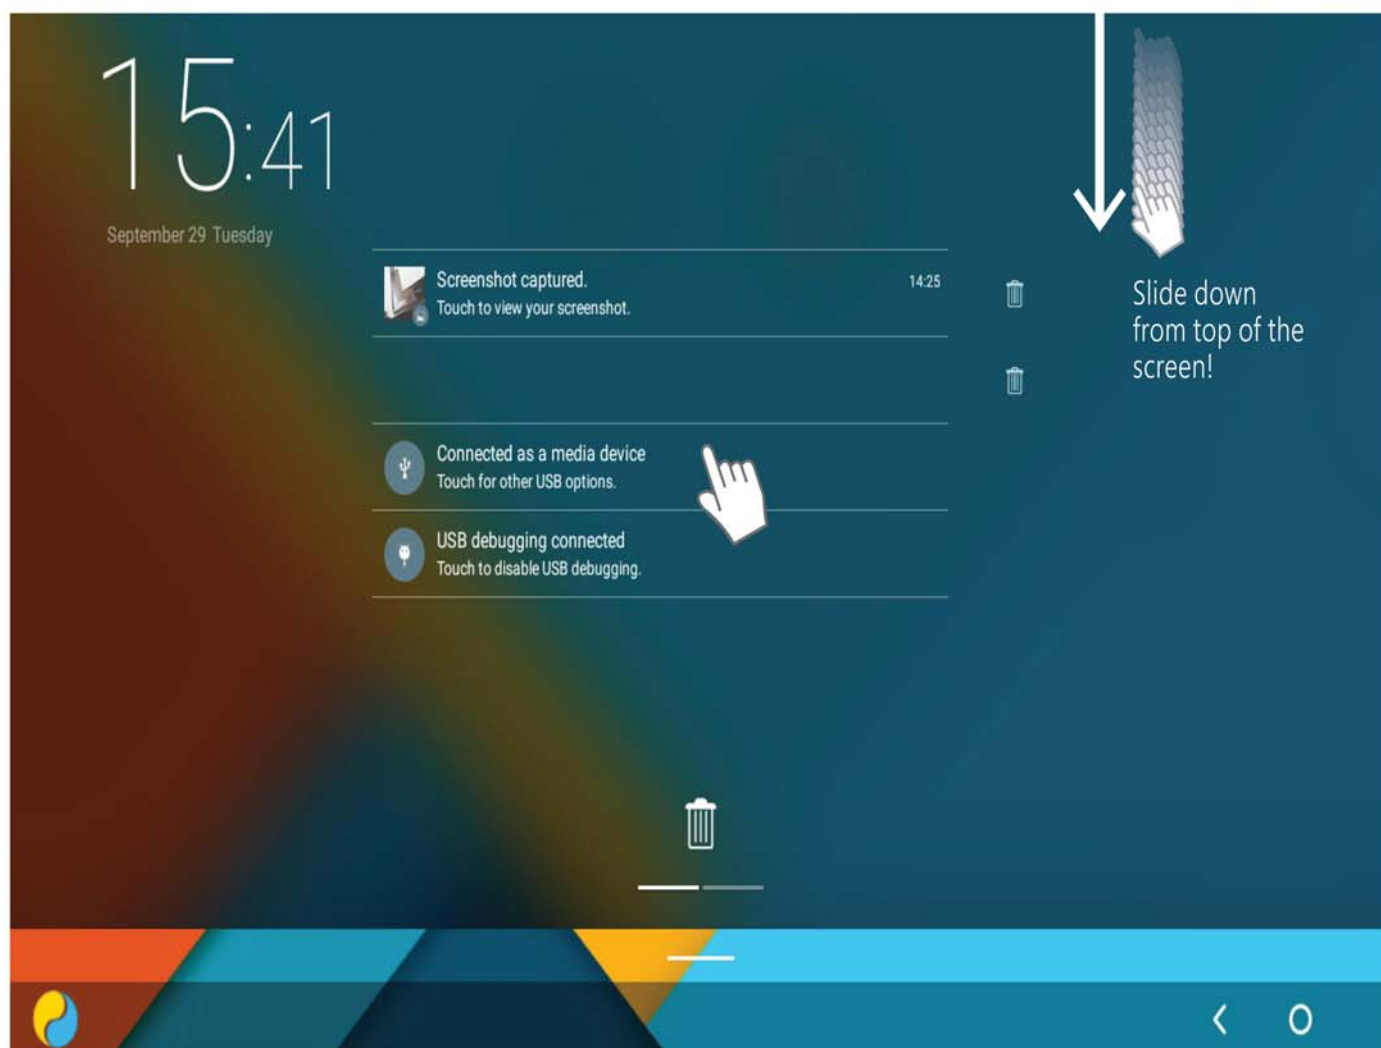

 A new storage option named 'D2-1161G' will appear within the 'My Computer' folder on your PC. Double click 'D2-1161G' to see the files saved on the tablet. You may transfer files between devices at this time. When finished, disconnect the USB cable to disconnect the devices.

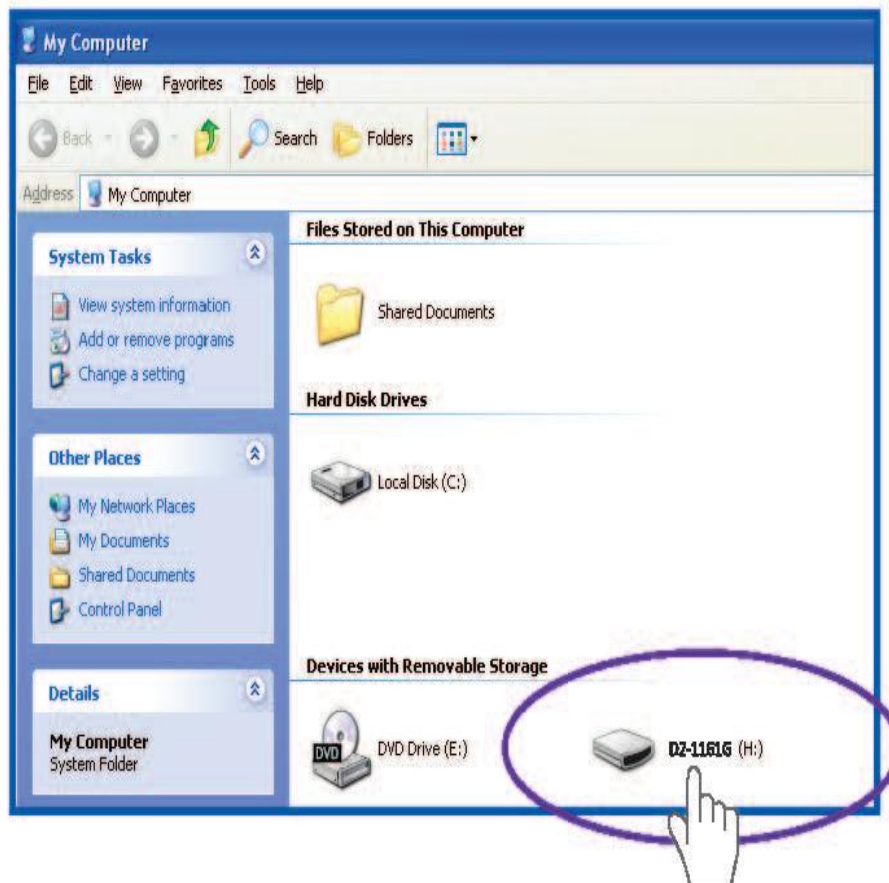

**Note:** Photos taken with the tablet's camera will be saved in the 'DCIM' folder and screenshots will be saved in the 'Pictures' folder. Place music files in the 'Music' folder for the files to be played properly.



## Precautions

- Avoid dropping or exposing the product to any sort of heavy impact or vibration as these may cause damage or abnormal display to the IPS screen.
- Some storage capacity may not be available for data storage as the tablet requires some essential programs for operation.
- This product cannot be used with any unauthorized chargers as they may overheat the product and otherwise cause damages, which will not be covered by the warranty. For any additional manufacturer charger, please contact customer service.
- To avoid accidents, please do not use the product when driving or walking on streets or busy areas.

Digital2 shall not be held liable for any loss of data caused by damage or repair of the product or any other reason. Please operate the product properly following the guidelines.

**Notice:** Pictures in this Quick Start Guide are for reference only.