

 orbic<sup>®</sup>  
TAB10R  
5G<sup>™</sup>

Quick  
Start  
Guide

## About the Tablet



**Note:** The screen images and icons are seen here are for reference only since the devices and software are constantly evolving.

## Initial Tablet Setup

The Tab 10R comes with a pre-installed SIM card.

**Note:** For the optimal functionality of your new device, please use the pre-installed SIM card.

## Inserting a microSD

If you have a microSD card, use the pin tool and insert it in the hole to release the tray. Insert the microSD card with the gold contacts facing down and close the tray.

**Note:** The microSD card is sold separately.



## Charging the Battery



Before using your Tablet, you must charge it completely.

1. Insert the small end of the USB cable into the Tablet and the larger end into the charger.
2. Plug the charger into an electrical outlet.

**Warning!** Use only approved chargers with your device. Incompatible chargers that are tampered with may damage the device and void the warranty.

## Powering ON/OFF



### To Power ON Your Tablet

- Press and hold the **Power/Lock** button located on the right edge of your Tablet.

### To Power OFF Your Tablet

- Press and hold the **Power/Lock** button and follow the prompts.

## Using On-screen Gestures

Use the on-screen gestures to move around the screen; open menus, select items, zoom in or out on web pages, and more.

- **Swipe** - Swipe by quickly sliding your finger in any direction.
- **Drag** – Touch and hold an item to move it to a new position.
- **Double Tap** – Tap twice rapidly to zoom in or out on a picture.
- **Zoom** – Spread two fingers apart on a web page, map, or image to zoom in. Pinch the screen to zoom out.

## Lock and Unlock the Tablet

### To Lock the Screen

- Press the **Power/Lock** button. This action prevents the accidental keypress.

### To Unlock the Screen

- Press the **Power/Lock** button and swipe up on the screen.



## Calling

Calling is supported by the Message+ app when paired with an active Verizon device.

## Texting

Texting is supported by the Message+ app when paired with an active Verizon device.

## Take Photos

Take pictures with the Camera app.

1. From the Home screen tap .
2. Aim the camera at the subject using the Tablet's main display screen as a viewfinder.
3. Pinch the screen to zoom in or pinch open to zoom out.
4. Before taking a picture, you can tap on the screen icons to access various camera options and settings.
5. Tap  to click a photo. You can also use the volume keys to click a photo.



## Google™ Play Store

Find and download your favorite apps, movies and TV shows, music, books, magazines, and games.

### Install Apps

Your Tablet comes preloaded with several applications, and you can download many more from the Play store.

#### Play Store


Play Store is a preinstalled application store on Android™ tablets.

1. Search or browse for applications.
2. Select the desired app, download, and install.
3. Follow the on-screen instructions to complete the installation.

You can also uninstall, update, and manage your downloaded apps.

#### Open an App

- Tap the app that you want to open.

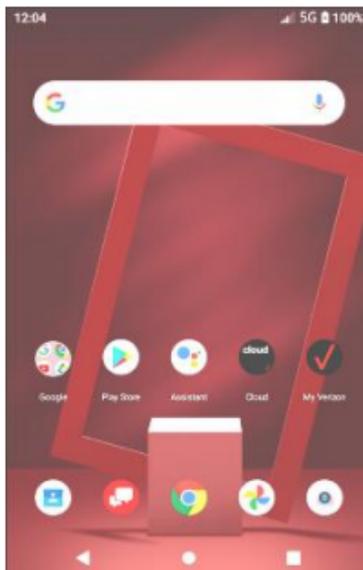

## Uninstalling Apps

You can uninstall the downloaded apps.

**Note:** Preloaded apps cannot be uninstalled.

1. Touch and hold the app icon that you want to uninstall.
2. Tap **Uninstall** and follow the prompts to uninstall the app.
3. Touch **OK** to confirm or **Cancel** to stop the uninstallation.

## Improving Accessibility

Accessibility services are special features that allow those with specific physical disabilities (impaired vision, hearing, or reduced dexterity) to use the device more easily.

1. Touch Home key  > swipe up for apps > Settings  > Accessibility.
2. Tap a category and set the desired options.

## Connect to Wi-Fi

1. Touch the Home key  > swipe up for the apps > Settings  Network & Internet > Wi-Fi. Make sure Wi-Fi is ON.
2. Select **Network** or **Add Network**.
3. Enter the network SSID and other required information.
4. Touch **Connect**.

## Verizon Cloud

Verizon Cloud offers secure online storage to back up and access your data and sync them with your other Cloud-Connected devices.

To learn more, go to “[vzw.com/Cloud](http://vzw.com/Cloud)”.

## Support and More



### **My Verizon Mobile**

Manage your account, track your usage, edit account information, pay your bill, and much more.



### **Get Help using your Tablet**

From your computer, visit <https://orbic.us/pages/support>



### **International Travel**

For features and rates outside the US, visit ["verizonwireless.com/international"](https://verizonwireless.com/international)



### **Customer Service**

Call **1-877-872-4555**



### **More Information**

Download a User Guide from ["verizonwireless.com/support"](https://verizonwireless.com/support)

## **Additional Information**

### **Your wireless device and third-party services**

Verizon Wireless is the mobile carrier associated with this wireless device, but many services and features offered through this device are provided by or in conjunction with third parties. Verizon Wireless is not responsible for your use of this device or any non-Verizon Wireless applications, services, and products, including any personal information you choose to use, submit or share with others. Specific third-party terms and conditions, terms of use, and privacy policies apply. Please review all applicable terms, conditions, and policies before using this wireless device and any associated application, product, or service.

Google™, Google Play, and Android™ are trademarks of Google™ LLC.