

Wireless 5W charging alarm clock speaker



SPECIFICATION:

Model: SL203
 Item No.: 2967
 Speaker output power: 5W
 Frequency: 20-20kHz
 Input: DC 5V/ 2A
 Wireless output: DC 5V/0.7A
 Charging Distance: max. 6mm
 Battery capacity: 4000 mAh

Please read this manual before using the device to ensure safe and proper use.

DEVICE LAY-OUT:



HOW TO USE:

Make sure the device is charged fully before using. Please use the included micro USB cable. It will take about 5 hours to fully charge the device. Turn on the device using the on/off button (B).

BY PRESSING M YOU CAN CHOOSE THE FOLLOWING MODES:

- FM radio
- AUX
- Bluetooth

HOW TO USE FM RADIO:

1. The included AUX cable can serve as an antenna to improve the reception.
2. When chosen FM mode long press the Pause/Play button, the device will automatically search and store the detected radio frequencies.
3. Press previous and next to switch radio frequencies.

HOW TO USE THE AUX:

1. Connect the AUX cable to the alarm clock speaker and your mobile phone
2. Choose the AUX function by pressing the M button until you find AUX.
3. Play your favorite music (up to 5 hours of playtime on a full charge)

HOW TO USE THE BLUETOOTH FUNCTION:

1. Make sure you turn on Bluetooth mode on your mobile phone
2. Make sure the device is turned on and on Bluetooth mode by pressing (M)
3. Find the device on your phone.
4. Play your favorite music.

HOW TO SET THE TIME:

1. Long press Clock to set the time
2. Set the hour by pressing + or -
3. Press Clock again to set the minutes
4. Press Clock again to set the day (D1-D7)
5. Finish by pressing Clock again

HOW TO SET THE ALARM CLOCK:

1. Long press M to set your alarm
2. To set the alarm time set the hour by pressing + or -
3. Press M again to set the minutes
4. Press M again to choose the day range (weekdays 1-5; weekends 6-7 or whole week 1-7)
5. Press M to choose the alarm clock tune (BB, USB, RADIO, SD or OFF)
6. You can set a 2nd alarm time after finishing setting the first alarm.
7. If not needed you can choose OFF

HOW TO ANSWER PHONE CALLS:

1. Make sure the Bluetooth mode is on and that your phone is connected
2. Press the pause/play button to answer incoming calls and to end calls.

HOW TO USE THE WIRELESS CHARGING MODULE:

1. Connect the speaker to USB adapter (Must has 2A output) with the cable provided, put the phone centered onto the device in order to ensure that your phone will charge correctly.



HIGH CURRENT MOBILE PHONES CAN DRAW TOO MUCH POWER ENABLING THE USAGE OF BOTH SPEAKER AND CHARGER. PLEASE USE ONLY ONE FUNCTION AT A TIME!

NOTES:

- Some phone cases may block the wireless charging
- Do not place other materials, like metal objects, magnets, and magnetic stripe cards, between the mobile device and the wireless charger pad
- Check your mobile device's battery percentage using the charging icon displayed on the screen of your phone
- When the mobile device is not placed on the charging surface accurately, your mobile device may not charge properly
- If you use the wireless charger in areas with weak network coverage, you may lose your network reception
- Please do not expose this device to moisture or heat sources
- This is not a toy, not suitable for children under the age of 7

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference, and
 (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning:

Charges or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by (ShenZhen C-Star Electronic Tech. Co., Ltd.) is under license. Other trademarks and trade names are those of their respective owners.

Bluetooth Listing Declaration ID: D026369

How to Use Correctly?



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This equipment complies with Part 18 of the FCC Rules.