


Wireless Charger speaker

Instruction Manual

Model Number: SL249

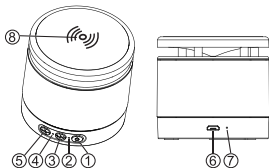

Functions:

1. Play/Pause/ON/OFF
2. Bluetooth LED Indicator
3. Vol +/Next Track
4. Wireless Charging LED Indicator
5. Vol-/Previous Track
6. Micro-USB charging port
7. Charging LED Indicator
8. Wireless Charging Pad

What's included:

- 1 x Metal Speaker (7198-64)
- 1 x USB to Micro-USB Charging Cable
- 1 x Instruction Manual

Tech Specifications

- Playing time: up to 2hrs at max volume
- Charging time: up to 1.5hrs
- Pairing Name: "Metal Wireless"

Instructions:

(Be sure to fully charge the speaker before using for the first time).

1. Charging the Speaker

- Connect the provided charging cable to a power source and to the micro USB port on the speaker (6).

The LED indicator light will glow red when charging and turn off when fully charged.

2. Wireless Charging:

- Connect speaker to a 2A output with the provided cable, Wireless Charging LED(4) will glow **red** once connected.
- Place wireless charging supported mobile device on top charging pad, LED will glow **green** when device is charging.
- Phone will begin to charge automatically.

3. Bluetooth® Setup:

- Press and hold Power Button(1) to turn ON the speaker, Bluetooth LED Indicator(2) will flash BLUE.
- Turn on the Bluetooth function on mobile device, Select "Metal Wireless" pairing name. LED will turn solid BLUE if successfully paired.
- *Speaker will automatically pair if the mobile device has been paired before.*
- Press and hold Power Button(1) to turn off the device.

4. Playing Music:

- Short press "Play/Pause" key to pause music. A second short press will resume playing music again.
- "Vol+/Next track":
Short press - next track.
Long press - increase volume.
- "Vol-/Previous track":
Short press - previous track
Long press - reduce volume

SAFETY PRECAUTIONS:

- **WARNING**-When using this product, basic precautions should always be followed:
 1. Read all the instructions before use.
 2. Never store or use this product in temperatures below 32°F(0°C) or above 115°F(45°C).
 3. Do not overcharge Phone. Unit may get hot with excessive use. Remove Phone when it is fully charged. Never charge for more than 7 hours at a time.
 4. The unit's full performance is achieved only after 2 or 3 completed charge and discharge cycles.
 5. To reduce the risk of injury, close supervision is necessary when the product is used near children.
 6. Do not expose the device to moisture.
 7. Do not use the device in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury.
 8. Do not use the device if damaged or modified.
 9. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
 10. Do not disassemble the device. For repairs, seek a qualified service professional. Incorrect reassembly may result in a risk of fire or injury.
 11. Do not expose the device to fire or excessive temperature. Exposure to fire or temperatures above 104°F may cause explosion.
 12. Ensure that qualified service professionals use only identical replacement parts to ensure product safety

FCC Statement:

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
- **Warning:**
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Consult the dealer or an experienced radio/TV technician for help.
- (3) This equipment should be installed and operated with minimum distance 20cm between the radiator & your body