

HIGH POWER STREET DANCE BOOMBOX

 


Instruction Manual




P-137L

Please read this manual carefully before operating and save it for future reference.

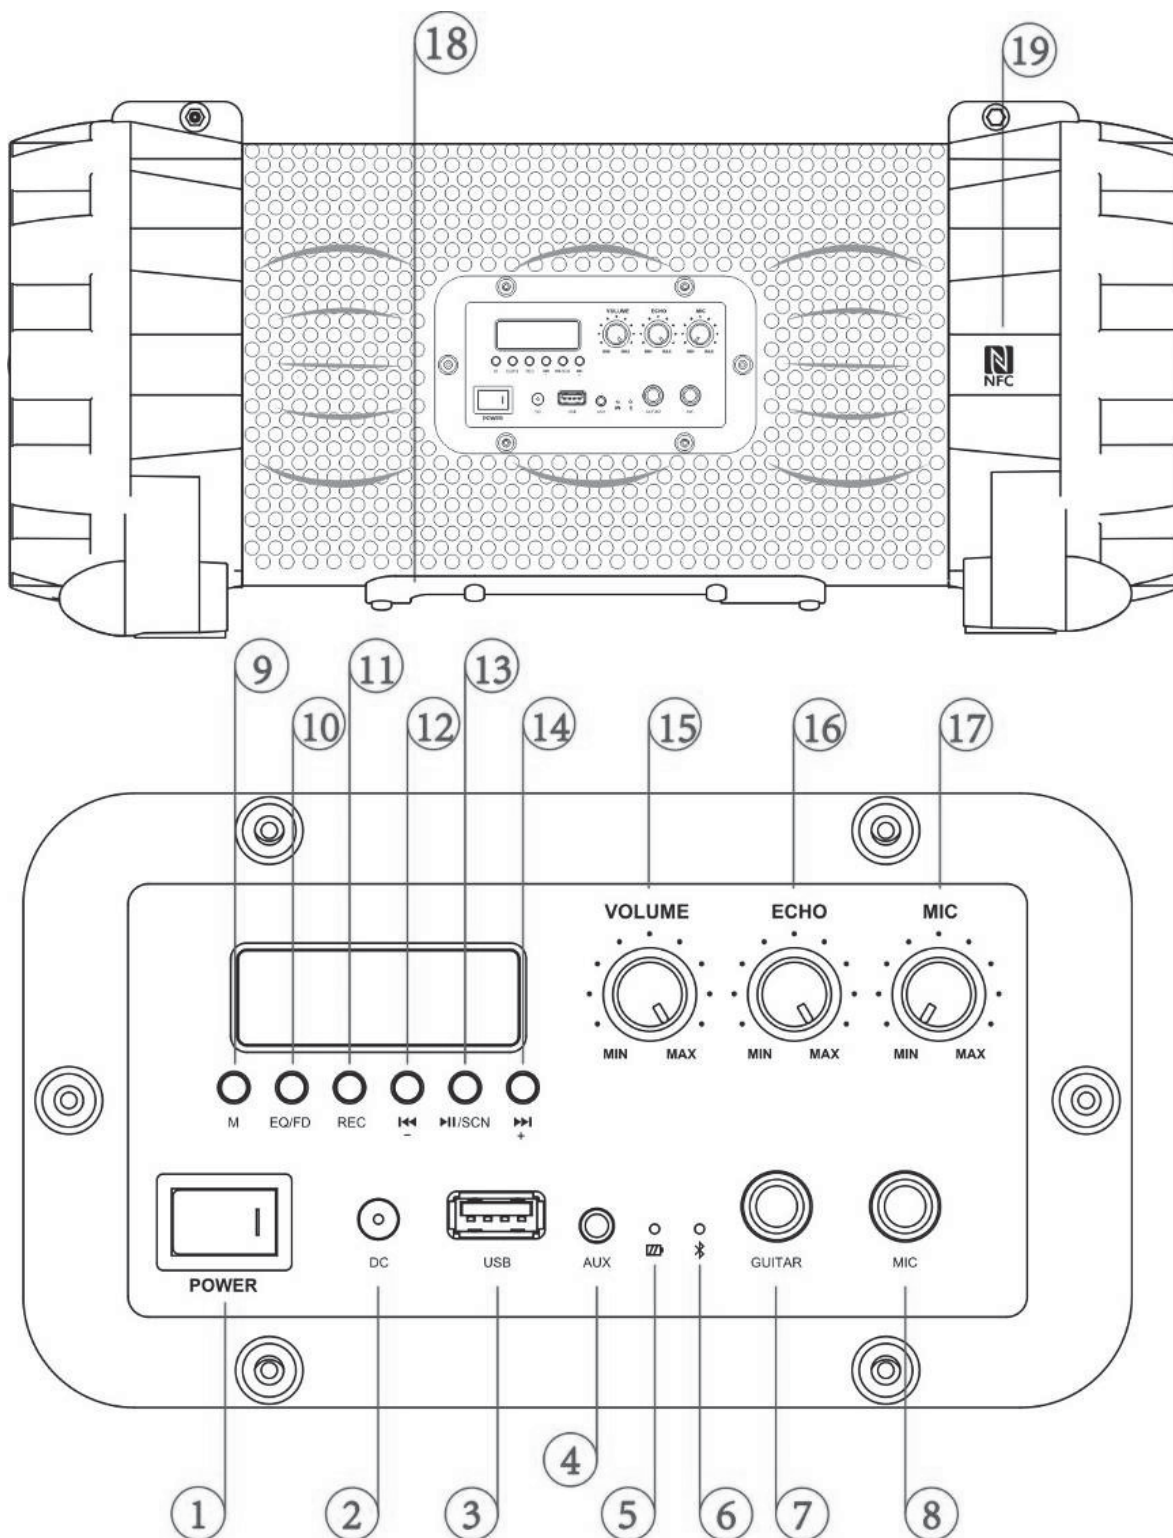Location of controls



Location of controls

1. POWER SWITCH
2. DC IN JACK
3. USB PORT
4. AUX IN JACK
5. BATTERY INDICATOR
6. BLUETOOTH INDICATOR
7. GUITAR INPUT JACK
8. MICROPHONE INPUT JACK
9. MODE BUTTON
10. EQ/FD (EQUALIZER / FOLDER)
11. LIGHT ON/OFF BUTTON
12.  / -
13.  / FM SCAN
14.  / +
15. VOLUME LEVEL CONTROL
16. ECHO LEVEL CONTROL
17. MICROPHONE INPUT LEVEL CONTROL
18. BATTERY COMPARTMENT
19. NFC AREA

Getting started

Charge the battery

Before using the speaker, you must charge the battery. When the battery is charging, the BATTERY INDICATOR lights solidly. After the battery has fully charged, the light switches off.

1. Connect the AC adaptor to the DC IN JACK of the speaker firmly, and plug it into a wall outlet.
2. When the battery is fully charged, first disconnect the AC adaptor from the speaker, then from the wall outlet.

 
Power source

1. Press the POWER SWITCH to turn on the speaker.
2. Press the POWER SWITCH again to turn off the speaker, and pull the AC adaptor out of the wall outlet if you want to switch off completely.

Bluetooth function

Pair the bluetooth device

Before using your speaker with a Bluetooth device for the first time, you must pair and connect it to the Bluetooth device. Press the POWER SWITCH to turn on the speaker. The display shows “HI”. Then it enters into Bluetooth mode automatically. (F1). The "BLUETOOTH INDICATOR starts to flash, and the speaker is now in pairing mode.

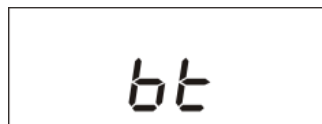

F1

Pair the speaker using NFC

1. With Near Field Communication (NFC), you can easily pair and connect the speaker to Android device with NFC.
2. If the Android device supports NFC, activate its NFC feature, and touch the NFC area of the speaker with the NFC area of your Android device (F2). The speaker pairs and connects to the Android device automatically. For details on NFC, see the user guide of the Android device.

3. It belong slave device



F2

4. For other Bluetooth device, pair the speaker manually.

Pair the speaker manually

1. Verify that the Bluetooth function of Bluetooth device is enabled.
2. Choose the Bluetooth menu in your Bluetooth device, and from the found devices, select the “P137L”. If you are prompted to enter the PIN code, please enter "0000" (four zeros).
3. For more information, see the user manual of Bluetooth device.
4. After a successful pairing, play the music from the Bluetooth device.

Note:

1. Only one Bluetooth device can be connected to the speaker. If the speaker is already connected to another Bluetooth device, the speaker will not appear in the Bluetooth menu of your Bluetooth device.
2. When you turn off/on the speaker or the Bluetooth device, the speaker will connect to the last Bluetooth device it was used with automatically within 10 seconds. Otherwise, you need to connect it manually on the Bluetooth menu in your Bluetooth device.
3. Depending on the device manufacturer, some Bluetooth devices need to perform the pairing again.

APP control

1. Please scan the QR Codes or search “hplay_light” on the Google play or App Store to download the app to your Android or IOS device.



2. Please scan the QR code to download the user manual of the APP.



Aux in function

1. When the speaker is in Bluetooth mode, press the MODE button to select the Aux in mode (F3).

 


F3

2. Connect an audio cable (not included) to the AUX IN JACK of the speaker and to the audio output socket on the external audio devices such as MP3 player, discman, etc.
3. Play from an external audio device.

Listening to FM radio

1. When the speaker is in Aux in mode, press the MODE button to select FM radio (F4)



F4

2. Press **▶||** / FM SCAN button to search all the FM stations.
3. When it stops searching FM stations, all the FM stations have been found and stored automatically.
4. Press **/ -** or **/ +** button to explore the found stations (F5).



F5

Remark: you can also use hplay_light APP to control FM radio.

 
Playing audio via USB port

1. When the speaker is in FM radio mode, press the MODE button to select USB mode (F6).



F6

2. Plug the USB device into USB Port, then it will play the music file automatically.
3. For interruption while the music is playing, press the ►/ FM SCAN button once. Playback is now paused. To re-start playback, press the ►/FMSCAN button again. The music will start from the exact position where it was interrupted.
4. When / - or / + button is pressed once, it will return to the previous track or advance to the next track.
5. During play mode, when / - or / + button is pressed and held, it will search the track with audible high-speed backward or forward playback.
6. Press and hold EQ/FD button will advance to the next folder (F7).

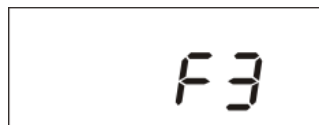

F7

Remark: you can also use hplay_light APP to control USB playback.

Connecting a microphone/guitar

Using a microphone or a guitar, you can mix its sound with a source sound.

CAUTION

DO NOT connect a bass guitar to the MICROPHONE / GUITAR INPUT JACK, as it may damage the speaker.

1. Turn the MICROPHONE INPUT LEVEL CONTROL fully counterwise.
2. Connect a microphone or a guitar to the MICROPHONE / GUITAR INPUT JACK of the speaker.
3. Select the Bluetooth, Aux in, FM radio or USB as the source.
4. Start playback of the sound source.
5. Turn the MICROPHONE INPUT LEVEL CONTROL to adjust the microphone volume.
6. Turn the GUITAR OUTPUT LEVEL CONTROL of your guitar to adjust the guitar volume.

Press LIGHT button to turn on/off the party light.

To adjust the volume

Turn the VOLUME LEVEL CONTROL to adjust the volume of the speaker

Control the echo

Turn the ECHO LEVEL CONTROL to adjust the echo.

Control the EQ

Press the EQ/FD button, the sound tone changes as below:

Specification

- Rated Power Output : 40 WRMS(L) + 40 WRMS(R)
- Connectivity
 - 3.5mm Aux In Jack
 - DC IN Jack
- Power Requirement
 - AC 100-240V, 50/60Hz
 - Rechargeable Battery
- Unit Dimensions: 620(W) x 250(D) x 250(H) mm

FCC NOTE:

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.