

User Manual

FRONT

SHARPER IMAGE

Floating Party Speaker



User Guide
F12

In the box



Floating Speaker User Guide



3.5mm Auxiliary Cable Micro USB Charging Cable


Location of Controls



Front View

- Microphone
- [M] button
- [P] button:
 - Quick press to answer and end phone calls.
 - Quick press to PLAY music from your playlist
 - Quick press again to PAUSE music.
- [V] button
 - Quick Press to gradually decrease the volume.
- [S] button
 - Long press to skip to the previous track.
 - Quick press to gradually increase the volume.
 - Long press to skip to the next track.

Location of Controls (cont'd)

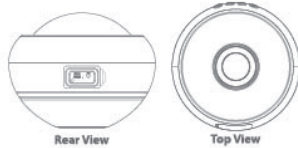

- Rear View**
- Waterproof cover
 - DC5V - Micro USB charging port
 - LED indicator light
 - Aux-in Port
- Top View**
- Strobe light
 - Press and hold the [M] and [V] buttons together to change light modes.

Charging the speaker

- Remove the waterproof cover to access the Micro USB charging port.
- Connect the small end of the Micro USB charging cord into the Micro USB charging port on the speaker.
- Connect the larger end of the Micro USB charging cord into a USB port on your computer or other USB charging device.
- The LED indicator light will stay solid RED when charging and will shut off once charging is complete.
- When the speaker is fully charged, remove the Micro USB charging cable.
- Press and hold the [M] button to disconnect your paired Bluetooth device.

Pairing the speaker

- Long press the [M] button for approximately 3 seconds. A tone will be heard indicating that the speaker is now in pairing mode.
 - Keep the speaker and your Bluetooth enabled mobile device within 3 feet of each other during the pairing process.
 - Set your Bluetooth enabled mobile device to search for new devices.
- NOTE:** Charge the speaker for at least 4 hours before using it for the first time.

NOTE: If there are no paired devices in range when the speaker is turned on, it will go into pairing mode automatically. If a paired device is in range, the speaker will connect to it automatically.

- On an iPhone**
- Go to **SETTINGS > BLUETOOTH** (Make sure Bluetooth is turned ON)



Pairing the speaker

For iPhone users: An optional battery meter feature will be located on the remaining battery capacity of the headphones will display on your phone's toolbar.


- On a Blackberry**
- Go to **SETTINGS/OPTIONS > BLUETOOTH**
 - Enable **BLUETOOTH**



- On an Android Phone**
- Go to **SETTINGS > BLUETOOTH > MENU**
 - Search for devices (Make sure Bluetooth is turned ON)



- On other Cell Phones/Devices**
- Review the instruction manual that came with your phone/device.

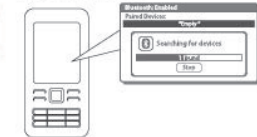

- When your mobile device finds the speaker, select "SBT606" from the list of discovered devices.
- If required, enter the password 0000. Select OK or YES to pair with your device.
- After a successful pairing, a tone will be heard confirming that both speakers are paired.

NOTE: If you would like to connect the speaker to another device, you must unpair the speaker from the currently paired device first. On your device's Bluetooth settings, select "SBT618 then select "unpair" or "forget device." The speaker will return to pairing mode.

The screenshots above are typical of many Bluetooth-enabled devices in the market today, and are used to assist in the explanation of the pairing process. Your Bluetooth-enabled device's interface and interaction with the speaker may slightly differ from the illustrations above.

BACK

Playing Music

Play/Pause

- Quick press the [M] button to pause the music.
- Quick press the [M] button again to resume music playback.

Skipping Songs

- Long press the [S] button to skip to the previous song.
- Long press the [S] button to skip to the next song.

Adjusting the Volume

- Quick press the [V] button to gradually decrease the volume.
- Quick press the [V] button to gradually increase the volume.

NOTE: Music playback and volume can be controlled from both the speaker and from your mobile Bluetooth enabled device.

Making Phone Calls

Answering/Ending Phone Calls

- Press the [M] button to answer an incoming call.
- Press the [M] button again to end the call.

Adjusting the Volume

- Quick press the [V] button to gradually decrease the in-call volume.
- Quick press the [V] button to gradually increase the in-call volume.

NOTE: When increasing or decreasing the volume, a tone will be heard indicating that the maximum or minimum volume level has been reached.

Changing Light Modes

To change light modes on the PBT606 wireless Speaker, press and hold the [M] and [V] buttons together.

- OFF: Lights will remain OFF during music playback.
- Random Colors: The speaker will display a series of random light patterns
- Responsive Mode: Lights will rhythmically illuminate to the music when wired or paired to a Bluetooth enabled device.

Using as a Wired Speaker

- To access the speaker's Aux-in port, remove the waterproof cover on the rear of the speaker.
- Connect one end of the 3.5mm Auxiliary cable into the Aux-In port on the rear of the speaker.
- Plug the other end of the 3.5mm Auxiliary cable into an external headphone port on your smartphone, or MP3 Player.
- Open a media player and on your mobile device and press PLAY to start playing your music.
- Use the controls on your connected device to control music playback and volume.

Troubleshooting Tips

I can pair the LED Lights Speaker with my Bluetooth device, but I cannot hear any music.

- Make sure your Bluetooth device supports A2DP profile.
- Turn up the volume on your Bluetooth device.
- You may have to unpair the speaker, then re-pair to your device.

Troubleshooting Tips (cont'd)

My Bluetooth device is not able to pair with the LED Lights Speaker.

- Make sure the speaker is turned ON before beginning the pairing process.
- Keep the speaker and Bluetooth-enabled device within 3 feet of each other during the pairing process.
- Check that YOUR device's Bluetooth feature is turned ON.
- Try repeating the pairing process. Consult the "Pairing the Speaker" section of this manual.
- Make sure the speaker is charged.

I cannot get the speaker into pairing mode.

- Make sure the speaker is turned ON before beginning the pairing process.
- Make sure that your device's Bluetooth feature is powered ON and ready to search for Bluetooth devices.
- Check that the speaker is charged.

Additional Warnings

This speaker has an IPX7 rating, which means that it is protected against water ingress up to 3 feet (1 meter) deep. This speaker is designed to float on the water—it will not operate under ideal. Do not submerge for longer than 30 minutes. Do NOT attempt to open the water-tight Waterproof USB Cover on the Floating Party Speaker (model #SBT606) before drying the speaker thoroughly and completely. Do NOT open the Waterproof USB Cover while the device is in water or in very humid places, such as swimming pools or bathrooms. Do NOT expose this speaker to a constant stream of running water such as ocean waves. Damage, shock, and/or injury can occur if this warning is not heeded properly.

Legal information

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment. FCC Part 15: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Limited Warranty

90 Days Limited Warranty
In the unlikely event that this product is defective, or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

Limited Warranty (cont'd)

TO OBTAIN WARRANTY SERVICE:

- Call the Customer Support number located below, or go to our website portal to receive an SRQ number.
- Provide proof of the date of purchase within the package (Dated bill of sale).
- Presay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value. If examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:
Southern Telecom, Inc.
Attention: Customer Service (2nd Floor)
14-C 53rd Street
Brooklyn, NY 11232

Should you have any questions or problems concerning this product, please contact our customer service department at:

Customer Support:
Phone: 1-877-768-8481
Monday-Friday 8AM-10PM(EST)
www.southern telecom.com
Click on "Product Support"

Warranty service not provided
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty:
THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY AIT, INC.'S AGENTS, OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. AIT, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations on exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.



Sharper Image's name and logo are registered trademarks. Manufactured and marketed by Southern Telecom under license. © Sharper Image. All Rights Reserved.

SHARPER IMAGE