

# Charging via DC 5V port: 1. Connect the USB pin charging cable to the DC 5V charging port on the back of the turntable. 2. Connect the USB end of the USB pin charging cable into your computer or other USB charging device. 3. The LED charging indicator light is GREEN when charging. It will shut off BACK PANEL when the turntable is fully charged. ake sure you charge the turntable for at least 8 hours efore using it for the first time. 1. Bluetooth/Turntable switch 2. LED charging indicator light 3. LED Bluetooth indicator light 4. LED power indicator light 5. Power/Volume knob 6. RCA right speaker output port 7. RCA left speaker output port

#### HARGING THE TURNTABLE PAIRING THE TURNTABLE

#### 1. Turn the turntable ON.

- 2. Move the Bluetooth/Turntable switch to the Bluetooth position. The LED Bluetooth indicator light will quickly flash BLUE.
- 3. Keep the turntable and Bluetooth enabled device within 3 feet of each other during the pairing process.
- 4. Set your Bluetooth enabled device to search for Bluetooth devices.





#### On a Blackberry

• Go to SETTINGS/OPTIONS > BLUETOOTH Enable BLUFTOOTH



PAIRING THE TURNTABLE (cont'

#### On an Android Phone

 
• Go to SETTINGS > BLUETOOTH > MENU > Search for devices (Make sure Bluetooth is turned ON)



# AIRING THE TURNTABLE (cont

#### On other Cell Phones/Devices

• Review the instruction manual that came with your phone/device.



- 5. When the Bluetooth enabled device finds the turntable, select "PBT4002" from the list of found devices.
- 6. If required, enter the password 0000. Select OK or Yes to pair the two
- 7. After a successful pairing, the LED Bluetooth indicator light will flash BLUE

NOTE: If you would like to connect the turntable to another device, you must unpair the unit from the currently paired device first. In your device's Bluetooth settings, select "PBT4000", then select "unpair". When the turntable has been unpaired, it automatically goes into pairing mode again.



Polaroid

· Reorient or relocate the receiving antenna.

· Increase the separation between the equipment and receiver.

Consult the dealer or an experienced radio/TV technician for help.

# USING THE TURNTABLE

#### Powering ON/OFF

- Turn the Power/Volume knob to the right to turn the unit ON. Turn it all the way to the left to turn the unit OFF.
- Check that your Bluetooth features are turned ON. If you have already paired the turntable with a Bluetooth enabled device, it will automatically
- If you are using the turntable for the first time, go to the "PAIRING THE TURNTABLE" section of this User Manual, and pair the turntable to your desired Bluetooth device.

#### Adjusting the volume

- Turn the Power/Volume knob to the left (MIN) to decrease the volume.
- Turn the Power/Volume knob to the right (MAX) to increase the volume.

#### Using the 45 RPM Adaptor

The 45 RPM Adaptor allows you to play 45 RPM singles on 78 RPM spindle size

- Remove the 45 RPM Adaptor and place it on the spindle.
- Place the record on the turntable. Make sure that the adaptor is secure.

### PLAYING MUSIC

#### Playing wireless music

To enjoy wireless music on your Portable Turntable, make sure you are connected to a Bluetooth enabled device. Once connected press PLAY on your Bluetooth device. When playback has begun, you can control the music with your connected 3. Connect the other ends of the RCA Audio cable to an external speaker device (with devices that have the AVRCP Bluetooth profile).

# Playing vinyl records

- 1. Place the record on the turntable and set the needle on the record.
- 2. Turn the Power/Volume knob to the right to turn the unit ON.
- 3. Move the Bluetooth/Turntable switch to the Turntable position.

### Adjusting the volume

- Turn the Volume knob to the left to decrease the volume.
- Turn the Volume knob to the right to increase the volume.

## 1. Turn the turntable ON.

- the corresponding right and left speaker output ports on the back of the
  - system's input ports.
  - 4. Open a media player on your device and click on PLAY to start playing your music.
  - 5. Use the controls on your connected device to control music playback and volume.

JSING AS A WIRED TURNTAB

NOTE: The Turntable's internal speaker volume can be increased or decreased when connected to a Bluetooth enabled device. It will also adjust the volume to an external speaker when connected with the included RCA Audio cable.

# ROUBLESHOOTI

### 2. Connect one red plug and white plug of the included RCA Audio Cable to

- 1. Make sure your Bluetooth device supports A2DP profile.
- 2. Turn up the volume on your Bluetooth device.
- 3. You may have to unpair the turntable, then re-pair to your device.
- 4. Use your connected device to increase the volume.



- 1. Make sure the Portable Turntable is turned ON before beginning the
- 2. Keep the Portable Turntable and Bluetooth enabled device within 3 feet of each other during the pairing process.
- 3. Move the Bluetooth/Turntable switch to the Bluetooth position. The LED Bluetooth indicator light will quickly flash BLUE.
- 4. Check that YOUR device's Bluetooth feature is turned ON.
- 5. Try repeating the pairing process, see "Pairing the Turntable".
- 6. Make sure the turntable is fully charged.

### ROUBLESHOOTING (cont

- 1. Make sure the Portable Turntable is turned ON before beginning the pairing
- 2. Move the Bluetooth/Turntable switch to the Bluetooth position. The LED Bluetooth indicator light will quickly flash BLUE.
- 3. The turntable is now in pairing mode.

#### WARRANTY

# This product as supplied and distributed new by AIT, Inc. ("AIT") to the original consumer purchaser is warranted by AIT against defects in material and workmanship for a period of one year from your date of purchase ("Warranty"). In the unlikely event that this product is defective, or does not perform properly, you may within one year from

- Call the Customer Support number located below, or go to our website portal to receive an SRO
- number.

   Provide proof of the date of purchase within the package (Dated bill of sale).

   Prepay all shipping costs to the authorized service center, and remember to insure your return.

   Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective
- unit within the package.

  Describe the defect or reason you are returning the product. Your product will be repaired or replaced, at our option, for the same or similar model of equal value if
- examination by the service center determines this product is defector of shipping, will require you to file a claim with the carrier.
- The shipping address of the authorized service center is:
- ATTN: Customer Service (2nd Floor) 14-C 53rd Street Brooklyn, NY 11232
- IN NO EVENT WILL AIT, ITS MANUFACTURERS, DISTRIBUTORS OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) RELATED TO THIS PRODUCT. EXCEPT' AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY.





Questions?
Need some help?
This manual will help you enjoy your new product enjoy your new product Support.

If you still have questions, call our help line:
1-877-768-8481

Or visit us at:
Wwww.southerntelecom.com
Click on "Product Support"



Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment general uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may acuse harmful interferer to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment dosc cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

