

**1. Unboxing**  
1.1. Remove the headphones from the carrying case.  
1.2. Remove the protective foam from the earcups.  
1.3. Remove the protective foam from the headband.  
1.4. Charge the headphones fully before use.

**2. Charging**  
2.1. Connect the USB-C charging cable to the headphones.  
2.2. The charging indicator light will turn on.  
2.3. The headphones will charge for approximately 2 hours.  
2.4. The charging indicator light will turn off when fully charged.

**3. Pairing**  
3.1. Turn on the headphones.  
3.2. Press and hold the multi-function button until the indicator light starts flashing.  
3.3. The headphones are now in pairing mode.  
3.4. Follow the on-screen instructions on your device to pair the headphones.

**4. Controls**  
4.1. The multi-function button is used for power and pairing.  
4.2. The volume buttons are used to adjust the volume.  
4.3. The touch sensor on the earcup is used for track skipping and volume control.

**5. Compliance Information**  
5.1. The headphones comply with FCC Part 15B Class B limits.  
5.2. The headphones are designed to minimize interference with other devices.  
5.3. The headphones are not intended for use in aircraft.


**QUICKSTART GUIDE**

**WIRELESS SAFE LISTENING HEADPHONES FOR KIDS**

model: KJMSBT  
[www.MEEaudio.com/KidJamz](http://www.MEEaudio.com/KidJamz)

MUSIC ENJOYMENT FOR EVERYONE

### YOUR KIDJAMZ

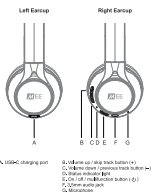

### GETTING STARTED

Charge for 2 hours. The indicator **turns blue** once it's charged.

Press and hold the **power on/off** button in **both** earbuds for 5 seconds until the indicator **flashes red**. This resets the earbuds and the case.

Insert the audio cable into the **3.5mm** jack of your device.

**Tap** - Play/Pause  
**Tap +** - Volume Up  
**Tap -** - Volume Down  
**Tap + (5s)** - Power On/Off  
**Tap - (5s)** - Power On/Off  
**Tap + (5s) + Tap - (5s)** - Factory Reset

**Volume Up / Tap Track Forward**  
Tap + (2s) - Previous Track  
Tap - (2s) - Next Track

**Volume Down / Tap Track Backward**  
Tap - (2s) - Previous Track  
Tap + (2s) - Next Track

**Tap (5s)** - Power On/Off  
**Tap + (5s)** - Power On/Off  
**Tap - (5s)** - Power On/Off

**Tap + (5s) + Tap - (5s)** - Factory Reset

**Tap (5s)** - Power On/Off  
**Tap + (5s)** - Power On/Off  
**Tap - (5s)** - Power On/Off

**Tap + (5s) + Tap - (5s)** - Factory Reset

### ABOUT OUR VOLUME-LIMITING TECHNOLOGY

High-fidelity headphones and earbuds can include **volume limiting** to help protect your hearing. MEE KidJamz earbuds include **volume limiting** technology to help protect your hearing. This technology is designed to help protect your hearing by limiting the volume of sound that can be played through the earbuds.

Note: **OSD** is based on average SPL measurement of 1 meter. For more information, please refer to the **OSD** manual. The **OSD** manual is available in the **OSD** manual folder of the **OSD** manual. The **OSD** manual is available in the **OSD** manual folder of the **OSD** manual. The **OSD** manual is available in the **OSD** manual folder of the **OSD** manual.

**SAFE LISTENING VOLUME FOR ALL AGES (85 dB)**

### VOLUME LIMITER ON/OFF SWITCH

KidJamz headphones have the **volume limiter** to be disabled in new environments.

There are two options: **volume limiter (OSD)** and **volume limiter (OSD)**.

To **disable** the volume limiter, press the **Volume Limiter** button on the **OSD** manual.

Note: Using headphones at high volume can lead to hearing damage. Please use the **OSD** manual for more information on how to use the volume limiter.

### TROUBLESHOOTING

#### Factory Reset

Press and hold the **power on/off** button for 5 seconds.

**Power on/off** button: **Tap + (5s) + Tap - (5s)**

**Power on/off** button: **Tap + (5s) + Tap - (5s)**

### TROUBLESHOOTING (CONTINUED)

#### Safety and Care

- Do not use while driving, or when operating machinery or performing any task that requires full attention.
- The device is designed and manufactured to operate within the frequency range of the radio waves. Do not use in the presence of electromagnetic interference.
- Do not expose to heat. The device comes in contact with your skin. Avoid direct contact with the device.
- Do not use the device in the presence of fire or other heat sources.

#### Warranty

MEE audio products are covered by a **limited warranty**. For more information, contact your local MEE audio dealer or visit [meeaudio.com/support](http://meeaudio.com/support).

### WARNINGS

Charge for 2 hours. The indicator **turns blue** once it's charged.

Do not use while driving, or when operating machinery or performing any task that requires full attention.

The device is designed and manufactured to operate within the frequency range of the radio waves. Do not use in the presence of electromagnetic interference.

Do not expose to heat. The device comes in contact with your skin. Avoid direct contact with the device.

Do not use the device in the presence of fire or other heat sources.

Charge for 2 hours. The indicator **turns blue** once it's charged.

Do not use while driving, or when operating machinery or performing any task that requires full attention.

The device is designed and manufactured to operate within the frequency range of the radio waves. Do not use in the presence of electromagnetic interference.

Do not expose to heat. The device comes in contact with your skin. Avoid direct contact with the device.

Do not use the device in the presence of fire or other heat sources.

Charge for 2 hours. The indicator **turns blue** once it's charged.

### QUESTIONS? WE'RE HERE TO HELP!

**Phone Support:** 626-765-1008  
Monday - Friday 9:00 am to 5:00 pm PST

**Email Support:** [support@meeaudio.com](mailto:support@meeaudio.com)

**MEE audio**