

封底8

封面1

F1 NowGo *Sing Woods*  
Follow Light



NowGo微信公众号



NowGo微信客服





NOW:GO™

F1 Chasing Light Sound Wood— Outdoor Multifunctional Bluetooth Speaker

· User Manual ·

01 Important Reminder

1. Please read and follow this user manual.
2. Please store and use this product at room temperature.
3. Please do not use this product in high temperature environments, such as in direct sunlight, near open flames, or other similar environments.
4. Please do not throw it away to avoid damage to this product due to falling.
5. Please use a power charger with the rated voltage of the speaker for charging.
6. If the cable does not match your device, please contact the dealer.
7. Please adjust the volume of the speaker to an appropriate level to avoid damage to your hearing.
8. This product is waterproof and can be used in environments with splashing water, but do not let this product be immersed in water. If liquid splashes on the surface of this product, please wipe it with a dry flannel or napkin.
9. No matter the equipment is damaged due to any reason, it must be repaired by professional maintenance personnel in time. Unauthorized disassembly will invalidate the warranty.
10. This product is made of recyclable high-performance materials and components. Do not dispose of this product with other household waste. Please understand the local regulations on the separate collection of electronic and electrical equipment and batteries. Your correct disposal of these products is a contribution to the protection of the environment, human health, conservation and rational use of natural resources.

 



	Safe for use in non- tropical climates only
	Only suitable for safe use in areas below 2000 meters above sea level
	Electronic information product recycling sign
	WEEE waste electronic and electrical product recycling sign (not suitable for mixed dumping with domestic waste)

02 Product Features


- 1. Born in the wild, the master of outdoor camping atmosphere**
Through light and sound, escapes the hustle and bustle and restlessness, and preserves the graceful time of the exclusive moment. The retro candlelight sound adds a sense of ritual to the ordinary life, and opens a 360° immersive sound journey.
- 2. 5200mAh energy storage capacity**
5200mAh large-capacity battery can continuously provide lighting for up to 12 hours, lighting up the whole night. Meet your multiple needs for outdoor activities, allowing you to enjoy the best time.
- 3. Small and portable, with sound and light, elegant rhythm**
Small and portable, comfortable to hold, with effortless hand-held lighting. Soft and natural warm light, easy to fill the atmosphere and enjoy exquisite camping. Infinite dimming, to make light and dark gradient as you wish. Flicker-free simulated candlelight, healing light and sound, adding a sense of ritual to ordinary life.
- 4. A symphony of visual and music**
Through light and sound, escapes the hustle and bustle and restlessness, and preserves the graceful time of the exclusive moment. The retro candlelight sound adds a sense of ritual to the ordinary life, and opens a 360° immersive sound journey.
- 5. Both a camping light and a bluetooth speaker**
Bluetooth 5.3 provides a smoother experience, fast connection speed, stable transmission, and low power consumption. By independent sound unit, the sound quality is touching.

NowGo Follow Light F1 / 01

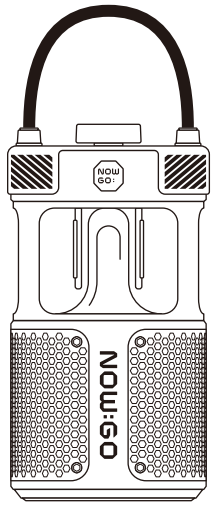03 Products and accessories

1. 
 2. 
 3. 
 4. 
1. Speaker 2. AUX audio cable 3. USB power cable/data cable 4. After-sales service card + user manual

 04 Body button functions


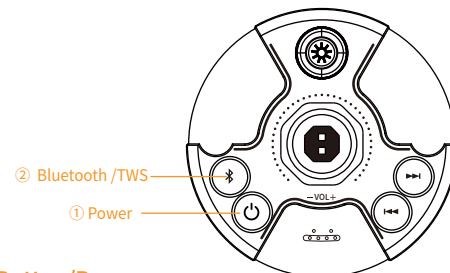


① Power Button/Power

1. Power on: long press for 2 seconds
2. Power off: long press for 3 seconds

② 蓝牙键/TWS

  1. TWS pairing: long press the Bluetooth button for 3 seconds to enter TWS pairing mode.
2. Disconnect TWS : long press the main/secondary Bluetooth button.
3. TWS Pairing: Long press bluetooth button 3 seconds on first F1 to enter TWS mode, this F1 to be master. Turn on another F1, this F1 to be slave. Master is left channel, Slave is right channel.
4. Disconnect bluetooth :Short press Bluetooth button
5. Factory Reset: Press and hold on bluetooth button 8 seconds. All paired listing will be removed. After successful reset, LED indicators run from left to right, then from right to left, total 5 seconds.

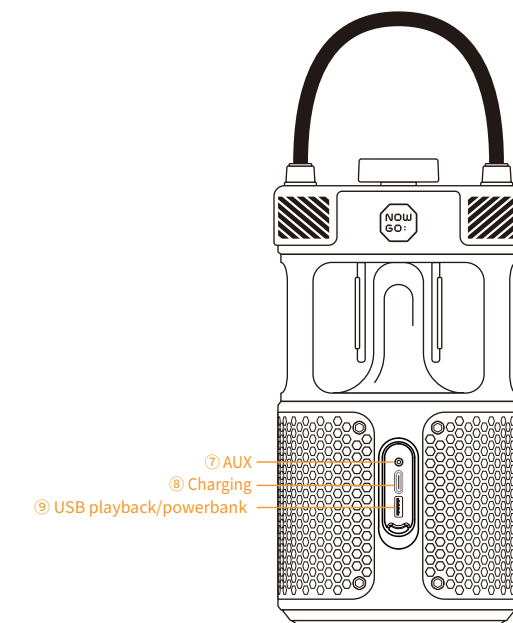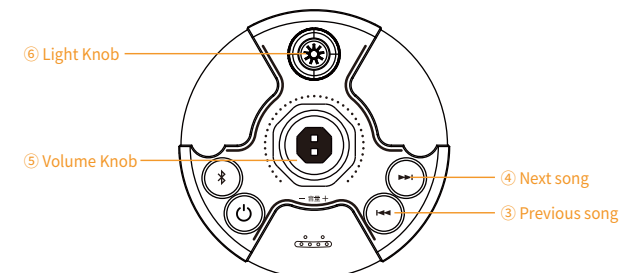

- ③ Previous song: Short press the previous song button
- ④ Next song: Short press the next song button
- ⑤ Volume knob

1. Volume up: Rotate clockwise.
2. Volume reduction: Rotate counterclockwise
3. Pause/play: Short press
4. Voice Assistant: Long press
5. Incoming call : short press to answer, long press to reject, short press to hang up during answering, long press to switch to mobile phone Answering
6. Double click to switch mode: USB/BT/AUX

⑥ Light knob

1. Brightening: Rotate clockwise
2. Dim: Rotate counterclockwise
3. Switch warm light/cold light clockwise

⑦ AUX interface function

In Bluetooth mode, plug in the AUX cable to enter AUX mode to play music.

⑧ Charging port

Please use a 5V/2A power adapter to charge the speaker

⑨ USB playback/mobile power output interface

Turn on the speaker and insert the USB flash drive to play the USB flash drive. When turned on, it can directly output 5V 1A to charge external devices.

Automatic shut-down

It will automatically shut down after 15 minutes of no connection in the power-on state, and it will not shut down when it detects that the light is on.

Smart Power Saving Mode

1. The power indicator light will turn off automatically after it lights up for 5 seconds.
2. Short press the speaker button during use, the battery indicator light will turn on for 5 seconds, and the indicator light will stay on during charging.

05 Power display

Working status:

1. When 5%<battery <10%, LED1 red light is on
2. When 15%<battery <25%, LED1 white light stays on
3. When 25%<battery <45%, both LED1 and LED2 white light stays on
4. When 50%<battery <75%, the LED1, LED2, and LED3 white light stays on at the same time;
5. When 75%<battery <100%, 4 LEDs white light stays on at the same time

06 Charging power display

 
Charging:

1. When battery <15%, LED1 white light flashes
2. When 15%<battery <50%, LED1 stays white, LED2 white light flashes
3. When 50%<battery <75%, LED1 and LED2 stays white, LED3 white flashes
4. When 75%<battery <99%, LED1, LED2, LED3 stays white, LED4 white flashes
5. When battery =100%, 4 LED stay white light

07

Press and hold on bluetooth button 8 seconds. All paired listing will be removed. After successful reset, LED indicators run from left to right, then from right to left, total 5 seconds.

08 Bluetooth connection

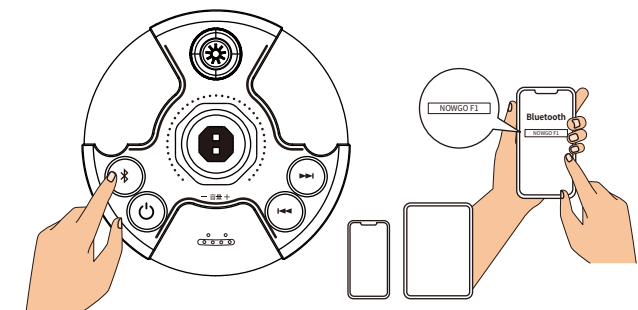

Pair the speaker with a Bluetooth-enabled tablet or smartphone

1. Press and hold the power button to turn on the Speaker, then the blue light will light up, and it will enter Bluetooth mode by default, waiting for Bluetooth pairing.
2. Find "Settings" on your smart device, turn on and search for the device. Click the NOWGO F1 found in the Bluetooth device list to start connecting.
3. The connection is successful and you will hear a tone. After successful connection, you can play music or make hands-free calls.
4. The effective distance of Bluetooth connection is about 30m, depending on the environment. Music transmission may be interrupted by obstacles between device and speakers, such as walls, the device metal of casings, or other nearby devices operating on the same frequency.



⚠ Precautions:

1. When the Bluetooth speaker is turned on, it will automatically connect back to the last connected device before it was shut down. There is no need to search again to pair Bluetooth.
2. If you need to connect to other Bluetooth devices, short press the [⏮] key to cutoff the connection with the current device, the blue light flashes, and the Bluetooth returns to the waiting connection state.

NowGo Follow Light F1 / 02

10 Specifications

Mold number	: Chasing Light Forest F1
speaker unit	: 48MM*2
Rated output power	: 10W+10W
Bluetooth version	: 5.3
Play mode	: BT/AUX/U disk
Music format	: MP3/WMA/WAV/APE/FLAC
Power supply	: 5200mAh built-in rechargeable lithium battery
Charging input	: DC 5V/2A
Discharge output	: DC 5V/1A
Package Size	: 220 mmx303x110 mm
Product volume	: Diameter 102mmxH193mm(excluding braided rope)
product weight	: 850g
Barcode	: 6944044912285
Appearance patent	: 2033302221954

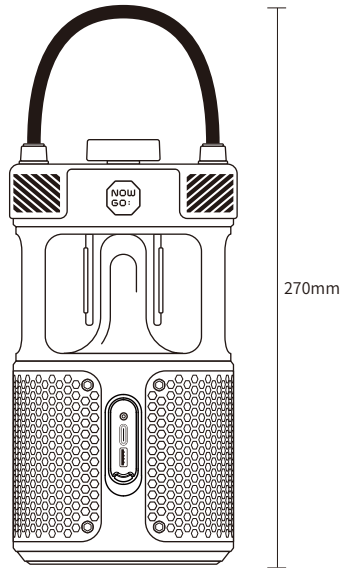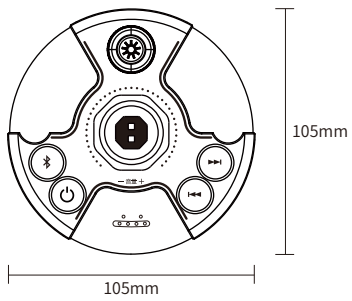  

11 Common troubleshooting methods

question	Solution
Intermittent sound in Bluetooth mode	<ul style="list-style-type: none">· Please make sure that the connection distance between the host and the Bluetooth device is within 10 meters;· Please ensure that there are no obstacles between the host and the Bluetooth device;· Or try to change to another Bluetooth device for playback.
No sound in audio input mode	<ul style="list-style-type: none">· Please check whether the audio cable is correctly connected in place;· Please check whether the sound card of the host computer is running normally;· Or whether it is correctly connected to the corresponding audio output interface.
No sound/format error in U disk mode	<ul style="list-style-type: none">· Please check whether the format of the USB flash drive is FAT32;· Please check whether the files in the U disk are APE, FLAC, MP3, WMA, WAV.
Button does not respond	<ul style="list-style-type: none">· Please turn off the speaker and charge it for 30 minutes before turning it on again;· Or press and hold the reset button to reset and then restart.
No sound from speaker	<ul style="list-style-type: none">· Pleasetry turning up the volume;· Please select the correct audio input channel;· Please make sure all cables are connected correctly.
Noise from the speaker	<ul style="list-style-type: none">· Please make sure all cables are connected correctly;· Or try to replace other audio cables;· Please make sure that there is no noise in the output of the device connected to the audio cable.
Not charging	<ul style="list-style-type: none">· Please ensure that the TP-C charging cable is properly connected to the adapter and host;· Please check whether the voltage and current of the power adapter meet the requirements;· Please make sure that the TP-C charging cable can be charged normally with other devices.
Bluetooth pairing failed	<ul style="list-style-type: none">· Pleasecheck whether the device is in pairing state (in Bluetooth mode);· Or try to restart the device and perform Bluetooth pairing again.

Now:GO™

F1逐光声林—户外多功能蓝牙音箱

· 使用说明 ·

01 重要提示



1. 请阅读并遵循本使用手册。
2. 请在常温环境中存放和使用本产品。
3. 请勿在高温环境下使用本产品,如阳光直射处、靠近明火处或其它类似环境。
4. 请勿丢掷,避免因跌落造成本产品损坏。
5. 请使用音箱额定电压的电源充电器充电。
6. 如果连接线与您的设备不匹配,请与销售商联系。
7. 请将音箱调至合适音量,避免对您的听力造成损害。
8. 本产品为防水设计,可以在有溅水的环境中使用,但切勿让本产品处于浸水状态。如果有液体溅到本产品表面,请用干绒布或餐巾擦拭即可。
9. 无论设备因何原因损坏,都必须及时请专业维修人员修理,擅自拆卸将使保修失效。
10. 本产品采用可回收利用的高性能材料和组件制造而成,切勿将本产品与其它生活垃圾一起处理。请了解当地关于分类收集电子、电气设备及电池的规定,您正确弃置这些产品的举动是对保护环境、人类健康、节省和理智的使用自然资源的贡献。

	仅适用于非热带气候条件下安全使用
	仅适用于海拔2000米以下地区安全使用
	电子信息产品回收利用标志
	WEEE废弃电子电器产品回收标志 (不适合与生活垃圾混合倾倒)

02 产品特性

1. 向野而生,户外野营氛围大师

光音悦动间,逃离喧嚣与躁动,留存专属此刻的曼妙时光,复古烛光音响,为稀疏平常的生活增添仪式感,开启360°沉浸音旅。

2. 5200mAh储能电量

5200mAh大容量电池,可持续提供照明长达12h,照亮一整夜。满足您在户外活动的多重需求,让您尽享美好时光。

3. 小巧便携,声光搭配,优雅律动

小巧轻便,握感舒适,手持照明毫不费力。柔和自然暖光,轻松拉满氛围,享受精致露营。无极调光,明暗渐变随心。无频闪仿真烛光,治愈光音,为平淡的生活增添仪式感。

4. 一场视觉与音乐的交响

小小的机身具备饱满的声场和强悍的低频爆发力。360°全景立体音效,能让周围听者拥有一致的感官体验,无论何处,都处于音乐中央。


5. 既是露营灯,也是蓝牙音响

蓝牙5.3更畅快的体验,连接速度快,稳定传输,低功耗。独立发声单元,音质动人心弦。

03 产品及附件

- 1.
 - 2.
 - 3.
 - 4.
1. 音箱主机 3. USB电源线/数据线
2. AUX音频线 4. 售后服务卡+使用指南

 04 机身按键功能

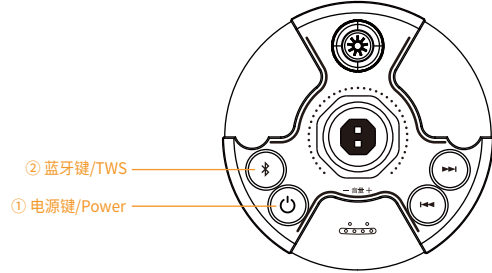


① 电源键/Power

1. 开机:长按2秒
2. 关机:长按3秒

② 蓝牙键/TWS

 1. 蓝牙配对:开机进入蓝牙配对模式
2. 断开蓝牙连接:蓝牙连接状态下,短按蓝牙键
3. TWS配对:长按蓝牙键3秒,进入TWS配对模式
4. 断开TWS连接:在TWS连接情况下长按主/副机蓝牙键

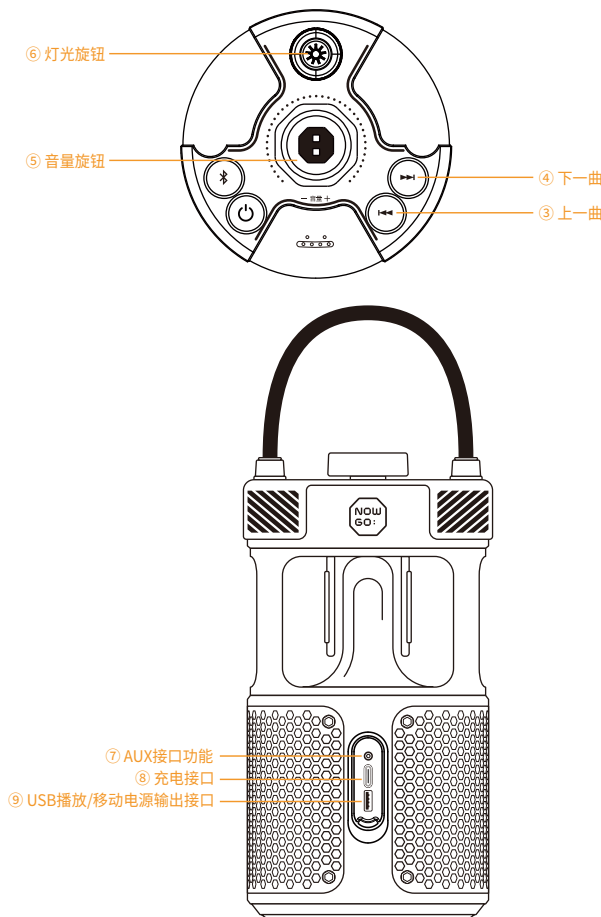

③ 上一曲:短按上一曲 ④ 下一曲:短按下一曲

⑤ 音量旋钮

- 音量加:顺时针方向旋转
- 音量减:逆时针方向旋转
- 短按:暂停/播放
- 长按:语音助手
- 来电接听:短按接听, 长按拒接, 接听过程中短按挂断, 长按切换到手机接听
- 双击切换模式

⑥ 灯光旋钮

- 调亮:顺时针方向旋转
- 调暗:逆时针方向旋转
- 顺时针切换暖光/冷光

⑦ AUX接口功能

蓝牙模式时, 插入AUX线进入AUX模式播放音乐

⑧ 充电接口

请使用5V/2A的电源适配器给音箱充电

⑨ USB播放/移动电源输出接口

开机插入U盘进入U盘播放

开机可直接对外输出 5V 1A给外部设备充电

自动关机

开机状态无连接15分钟后自动关机, 检测到开灯状态下不关机。

智能省电模式

- 开机电量指示灯亮5秒后自动关闭。
- 使用中任意短按音箱按键, 电量指示灯亮5秒自动关闭, 充电时指示灯常亮

NowGo Follow Light F1 / 05

05 电量显示

开机状态下:

- 5%<battery level<10%时,LED1红灯亮
- 15%<battery level<25%时,LED1白灯长亮
- 25%<battery level<45%时,LED1、LED2同时白灯长亮
- 50%<battery level<75%时,LED1、LED2、LED3同时白灯长亮
- 75%<battery level<100%时,4个LED灯同时白灯长亮

06 充电电量显示

 
充电中:

- battery level<15%时,LED1白灯闪
- 15%<battery level<50%时,LED1白灯长亮, LED2白灯闪
- 50%<battery level<75%时,LED1、LED2同时白灯长亮, LED3白灯闪
- 75%<battery level<99%时,LED1、LED2、LED3同时白灯长亮, LED4白灯闪
- battery level=100%时,4个LED灯同时白灯长亮

07 复位

如果产品因其它因素导致软件死机可通过长按电源键 10 秒进行复位修复。
如果无法蓝牙连接, 长按蓝牙键8秒清除配对记录, 恢复出厂设置。

08 蓝牙连接

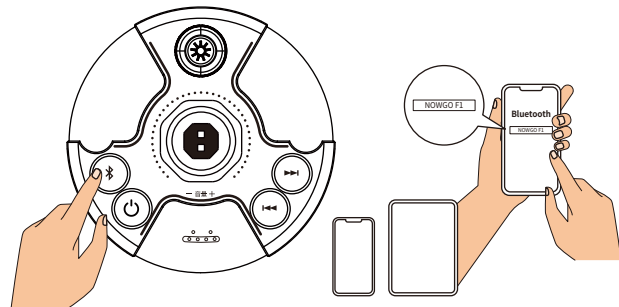

将音箱与具有蓝牙功能的平板电脑或智能手机配对


- 长按电源键开机, 蓝灯点亮, 默认进入蓝牙模式, 等待蓝牙配对。
- 在您的智能设备上找到“设置”, 打开蓝牙, 搜索设备。点击蓝牙设备列表中已搜索到的NOWGO F1, 开始连接。
- 连接成功, 您将听到提示音。成功连接后, 即可在蓝牙设备上播放音乐或免提通话。
- 蓝牙连接有效距离约30m, 具体因环境而异。音乐传输可能因设备与音箱之间的障碍物而中断, 如墙、设备的金属外壳或附近相同频率工作的其它设备。

⚠ 注意事项:

- 蓝牙音箱处于开启状态, 会自动回连关机前最后一个连接设备, 无需重新搜索配对蓝牙。
- 如需连接其它它蓝牙设备, 短按【🔗】键可切断与当前设备连接, 蓝灯闪烁, 蓝牙返回等待连接状态。

10 规格参数

型 号	: 逐光声林 F1
扬 声 器 单 元	: 48MM*2
额定输出功率	: 10W+10W
蓝 牙 版 本	: 5.3
播 放 模 式	: BT/AUX/U盘
音 乐 格 式	: MP3/WMA/WAV/APE/FLAC
电 源 供 应	: 5200mAh内置充电式锂电池
充 电 输 入	: DC 5V/2A
放 电 输 出	: DC 5V/1A
包 装 尺 寸	: 220 mmx303x110 mm
产 品 体 积	: 直径102mmxH193mm(不含编织绳)
产 品 重 量	: 850g
商 品 条 码	: 6944044912285
外 观 专 利	: 2033302221954

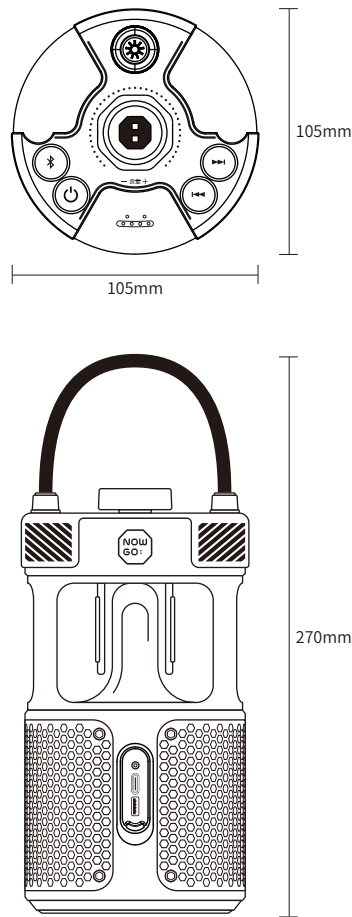 

11 常见故障处理方法

问题	解决方法
3. 蓝牙模式下声音断续	<ul style="list-style-type: none">· 确保主机与蓝牙设备的连接距离在10米以内;· 请保证主机与蓝牙设备之间没有障碍物阻隔;· 或者尝试更换另一个蓝牙设备进行播放。
6. 音频输入模式无声音	<ul style="list-style-type: none">· 请检查音频连接线是否正确连接到位;· 请检查电脑主机声卡运行是否正常;· 或是否正确连接到相应的音频输出接口。
1. 2. 3. U盘模式无声音/格式错误	<ul style="list-style-type: none">· 请检查U盘的格式是否FAT32;· 请检查U盘卡内文件是否是APE、FLAC、MP3、WMA、WAV。
按键无反应	<ul style="list-style-type: none">· 先关机充电30分钟再开机;· 或按住复位键复位后重新开机。
扬声器无声音	<ul style="list-style-type: none">· 尝试调大音量;· 请选择正确的音频输入通道;· 请确保所有的线缆均正确连接。
扬声器有杂音	<ul style="list-style-type: none">· 请确保所有线缆都已正确连接;· 或尝试更换其它音频线缆;· 请确保音频线外接的设备端输出本身没有杂音。
不充电	<ul style="list-style-type: none">· 请确保TP-C充电线与适配器和主机正确连接;· 请检查电源适配器的电压和电流是否满足需求;· 请确保TP-C充电线与其它设备能正常充电。
蓝牙配对不成功	<ul style="list-style-type: none">· 检查设备是否处于配对状态(蓝牙模式下);· 或尝试重新开机后再次进行蓝牙配对。

NowGo Follow Light F1 / 06

产品保修卡

用户姓名: 联系电话:

用户地址:

产品型号: 产品序列号:

购机日期:

售机单位:

联系电话:

售机单位地址:

邮编:

售机单位签章:

维修单位: 联系电话:

地址: 邮编:

送修故障:

修理结果:

日期: 经手人:

送修故障:

修理结果:

日期: 经手人:

New Arrivals

F6 IP67 20W



F8 IP67 40W



C1 100W 30000mAh



C2 60W 15000mAh



UHF Microphone

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

.Increase the separation between the equipment and receiver.

.Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

.Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. RF Exposure Information

The device was evaluated to meet general RF exposure requirements. This equipment should be installed and used with a minimum distance of 0 mm between the radiator and your body.