

POSH LYNX A100

User Manual

FCC ID: 2ABN6POSHA100

Before Using	2
<i>Phone Unlock</i>	2
<i>SIM Unlock</i>	2
Function menu Introduction	2
<i>Phonebook</i>	2
<i>Call history</i>	4
<i>Settings</i>	4
<i>Profile</i>	8
<i>Multimedia</i>	9
<i>Organizer</i>	12
<i>File manager</i>	14
<i>Fun&Games</i>	14

Before Using

Phone Unlock

In order to prevent illegal use, your phone can set the phone lock password protected. Use this function, you must enter the phone lock password so that you can unlock the phone into the normal use state.

Enter the phone lock password, press the **LSK** to confirm. For example, if the phone lock password is set to 1234, then the following input: **1234 OK**

SIM Unlock

In order to prevent illegal use of your SIM with PIN (Personal Identification Number) password encryption protection. Use this function, if you have set the PIN password protection, every time you must enter the PIN password at boot time, so that you can unlock the SIM card and phone to normal use.

Enter the PIN password, press the **LSK** to confirm. For example, if the PIN is set to 1234, then the following input: **1234 OK**

If three consecutive incorrect, your SIM will be network locked, the phone will ask for PUK password.

Function menu Introduction

Phonebook

Press OK in the idle or from the main menu to enter the phonebook.

You can use the phonebook to store records, can store the following: name and phone number. In the phonebook list, select a record, to make a call when you press the dial keys.

Select a record in the phonebook, you can do the following:

- View View the details or edit record.
- Send text message Send SMS to this number.
- Call Make a call to the number.

-
- Edit** Can edit and save record.
 - Delete** Delete the record.
 - Copy** Copy the current record to Phone/SIM.
 - Send business card**

As text message: Send phonebook via SMS. Select this item to go on to the receiver's number Editing Interface. The interface can directly enter a phone number, but also access to all of the multiple-choice card interface. You can simultaneously select multiple recipients to send.

Via Bluetooth: Send phonebook via B-tooth. First of all you want to add the device to receive the card, displayed all the equipment, select a matching, please enter the B-tooth adapter code, enter the correct code and directly send the card to each other.

- Add to Blacklist** Add the current record to the blacklight.
- Mark several** Mark several or all records can send text message or delete
- Groups** You can add Group including 'SIM1', 'SIM2', 'Family', 'Friend', 'Coworker', 'Classmate', Options a group can display the group all contacts, this list interface, selection [options] operational items are the bulk of information and edit group

Phonbook settings

- Preferred storage** can be in the SIM1, SIM2, Phone and All to switch, and phonebook list will change accordingly, such as select SIM1, the phonebook list will only show SIM1 records .
- Speed dial** according to the number keys 2-9 to call the telephone number.
- Extre numbers** can be set SIM fixed dial numbers.
- Memory status** View the usage and free Phonebook capacity information.
- Copy contacts** If select SIM to phone, the SIM card records of all telephone numbers copied to the phone
- Move contacts** You can select the SIM records of all mobile phone numbers move to the phone, also you can switch the option to operate.

-Delete all contacts You can delete all contacts in SIM card or phone and all records are deleted.

Call history

Missed calls

Enter the missed call menu, will display the missed calls list. Select missed call record, press the middle key to enter "Options":

-View View the details.

- Call Call the record number.

- Send text message Send SMS to record number.

- Save to Phonebook Save the number to the phone or SIM card.

-Add to Blacklist Add the current record to the blacklight.

- Delete Delete the number

Dialed calls

Enter the dialed calls menu to display the current record of outgoing phone list of phone numbers.

Please refer to Missed calls for details.

Received calls

Enter the received calls menu to display the current record has been received mobile phone number list.

Please refer to Missed calls for details.

Call times

Enter this menu, display the call timers. Input password 162995

Settings

Duad SIM settings

Select to open or close SIM cards' function. If there are no SIM cards in the card ports, then you can not do operations with the card.

The SIM cards' function will active when you open the SIM card.

Call waiting

Open this menu, during the call if the new call, the network will notify you. Specific use with your network provider.

Activate Launch the function.

Deactivate Close the function.

Query status Query the function's status.

Call divert

Network Call Transfer service allows you to call a business case in a default transferred to a phone number you specify.

The features include: Divert all voice calls, Divert if unreachable, Divert if no answer, Divert if busy, Divert all data calls. Enter the corresponding Transfer menu, you can do the following:

Activate Transfer the current call forwarding setting number.

Deactivate Call transfer prohibited.

Query status Check the status of this function.

After setup is complete, when you do not need call forwarding, you can cancel all diverts to prohibit the use of the above functions.

Call barring

Into the "Call barring" sub-menu, you can set the following call barring any combination to improve security. Some network providers may not provide this service call restrictions, specific use, please contact your network provider. Network provider will provide a four-digit password so that you can enable call restrictions.

Change the password to enter the old call barring password, set new restrictions on the password.

Advanced settings

Blacklist:

Reject number in blacklist can on/off this function

Blacklist numbers can input numbers and add numbers from phonebook and call history

Auto redial:

Through on / off settings, to activate or disable the feature. Turned on and when your phone call after another failed attempt to connect up to redial 10 times. This feature can save you the trouble of repeated calls.

Auto call record In the process of calls, can the recording

Phone settings

Into the phone settings sub-menu, you can make the following settings:

Time and Date

In this menu, you can move the phone time and date settings. The menu consists of three sub-menu:

Set home city: The city a total of 78 international cities by selecting different cities, change the mobile phone area.

Set time/date: Set time and date are set according to the established format and on / off daylight saving function. Phone allows you to set a calendar from 2000 to 2030 between the dates. If daylight saving is set to open, then the phone time to add in the original time of one hour or one hour later.

Set format: Set time and data's form

Display

Wallpaper: Wallpaper set in two ways: First, through the navigation system comes with the wallpaper and select; the second is user defined, by browsing the [File manager] photos folder identified as a wallpaper.

Show date and time: Display date and time to do On / Off settings, to determine whether the date and time displayed on the idle screen.

Dedicate key

Set up, down, left and right key for any functions of you want

Auto update time

can be set to automatically update time.

Flight mode

Turn On/Off the Normal or Flight mode. If you select Flight mode, SIM cards' function will not active.

Network settings

Network selection

Select Network: Search Network, you can choose from a list of networks you need to network.

Selection mode: Press the left soft key to select automatic or manual mode. Automatic, mobile phone SIM card information is automatically selected according to service provider; manually, choose manually select the network services, mobile phone search to get the current list of service providers for users to select the service provider SIM card type.

Security settings

Into the "Security Settings" menu, you can set the phone's security options, mobile phone or SIM card to avoid unauthorized use.

SIM security settings

PIN lock

SIM card PIN password to lock the completion of your SIM card to prevent unauthorized use.

If the current SIM card lock is closed, select Open to open the SIM card, enter the PIN lock password, the next boot requires that you enter the correct PIN password to enter;

If the current SIM card lock is On, select Off to close the PIN lock protection.

Change PIN: If the current PIN password lock has been activated, you can re-set on the PIN password

Change PIN2: PIN2 old to enter the correct password, you can set on the PIN2 password.

Phone security

Phone lock:

Phone lock password can prevent your mobile phone stolen by others.

Select On to open phone lock password to enter the correct password-protected phone lock open, the next boot requires that you enter the correct password to enter the phone lock.

Change password:

Change the phone password, enter the old password and then enter a new password. Phone default password is 1234.

Anti-theft tracking

Restore factory settings

In this menu, enter the phone lock password, once determined, the phone automatically reboot the phone after the relevant parameters can be set to return to the case of mobile phone factory. The default password is 1234.

Profile

Profile including General、 Silent、 Meeting, Outdoor. First, based on the current scene, select a different profile, then you only need a personal profile can be set and activated.

General: General environment.

Silent: For Silent environment.

Meeting: For meeting the environment, to be pre-set (for example: ring mode can be set to vibration).

Outdoor: For outdoor activities, need to pre-set (for example, ring volume can be set to a higher state).

Press the left soft key "Options":

Activate: Enable the selected profile.

Customized settings

Alert type: Can choose to Ring only, Vib. only, Vib. and ring, Vib. Then ring as the current method.

Ring type: You can choose repeat and beep once two type

Ringtone According to their own preferences set ringtones 1-5, can also be set from the memory card custom ringtones

Ringtone volume In the volume control interface, you can volume up and down navigation keys on the set. Volume level is divided into seven, 1-7, followed by increases.

Message According to their own preferences set ringtones 1-5.

Message volume In the volume control interface, you can volume up and down navigation keys on the set. Volume level is divided into seven, 1-7, followed by increases.

Keypad you can set keypad as silent、click and tone

Keypad volume In the volume control interface, you can volume up and down navigation keys on the set. Volume level is divided into seven, 1-7, followed by increases.

System alert can on\off system alert

Shortcuts

Shortcuts interface, press LSK key into option, it display add、edit、delete、delete all and change order.

Multimedia

Camera

The phone includes high-definition camera, you can take pictures anytime, anywhere, and to save the photos to your phone or

memory card .

State in the preview, press the LSK to enter "Options" you can do this to conduct a more detailed set of parameters.

Switch to video record: Into video record menu.

Photos: Photo album shows the current list of files.

Camera settings: Including **Shutter sound, EV, Contrast, Anti-flicker, Delay timer** setting operation contents of the regulation. Been adjusted, press the LSK "OK" to save the current settings.

Image settings: Include the Image size and image quality regulation.

White balance: Set the white balance state.

Scene mode: Including Auto and Night scene mode .

Effect settings: You can set the effects to normal, grayscale, sepia, sepia green, sepia blue, and color invert.

Storage: storage location can be set as Phone, Memory card, the captured image will be saved to the specified location.

Restore default: Set all parameters to default settings.

Image viewer

Select an album sub-menu, you can easily view stored in the camera album picture list, and press the LSK to enter to "Options" to choose the pictures to do the View, Image information, Send, Use as, Rename, Delete, Sort by, Delete all files and change Storage operations. View pictures, by clicking on the left and right navigation buttons to switch pictures.

Video recorder

Switch to camera: To switch from the camera and the camera

Camcorder settings: Recorder settings including Anti-flicker setting.

Video settings : Including video quality. .

Storage: Storage location can be set as Phone and Memory card, shooting the video will be saved to the specified location.

Video player

Choose video player sub-menu, you can easily view the saved video player in the video list, press the LSK to enter "Options" to select the video files to do the play, send, rename, delete and short by operation.

Send the video via Bluetooth if you want.

Audio player

In the Audio player interface, you can press left and right keys to switch the music; press * and # keys to adjust the play volume.

In the Audio player interface, press the left soft key to enter "list" menu and enter the current playlist to play in the option list can be any of a music file to play.

Select a music file to enter the settings option, you can top of the screen prompts the items content specific settings of each item:

Pre.playlist: Can select the preferred list, Phone or Memory card. If you choose a memory card, then show the all music files in memory.

List auto gen.: To switch to this setting. When this feature is set On, you can perform the "Refresh Playlist" operation.

Repeat: Can be set to Off (no repeat), One, All.

Shuffle: Random order of play set, respectively, can be set to On and Off.

Background play: Set the background play On, you can make mobile phone in other user interface and also play music. Set as Off, the music will not play when out of the Audio player.

Sound recorder

In the sound recorder interface click "option", it shows the items of record.

New record Start to new record. If you click stop, it will pop up a dialog box to prompt you save it or not. If you click pause, it

will suspend recording, and then click continue, it can record again.

List It displays the sound that you recorded and saved in the memory card.

Settings You can set the storage and audio quality of the record.

FM radio

FM interface, press the down navigation key to turn on / off FM play, press the UP navigation key to automatic search , press *and # keys to adjust the FM playing volume.

Press the left soft key "Options" can show FM options menu, the content were:

Channel list: Shows FM channel list.

Manual input: Can be their own editors to manually enter the channel frequency, the effective value of 87.5 ~ 108.0

Auto search: Auto search FM channels in the channel list.

Settings: Can on/off the background play and loudspeaker.

Record: record the program you are listening to and save it in the recording list automatically

File list: play recorded audio files

Oganizer

Torch

Into to torch on/off menu,can on\off torch

Calculator

Your phone provides you with the basic arithmetic operations can be a function of the calculator, easy simple operation.

Press the left soft key "Clear" or stylus to click on the "Clear" can be cleared.

Press the right softkey "Back" to exit the calculator.

Note: This calculator has limited accuracy and rounding errors will be generated, especially in addition to endless time.

When the calculation of range, the display area will use the letter "E" to represent.

Bluetooth

Power: Activate Bluetooth on or off the Bluetooth function.

Visibility: If set as On, other devices can search this Bluetooth device; if set as Off, other devices can not search this Bluetooth device.

My device: Can search for nearby Bluetooth devices.

Search audio device: Free devices to search for near-free decoration, such as Bluetooth headsets.

My name: The Bluetooth device name can be modified.

Calendar

Enter calendar sub-menu, the screen will show a calendar month, and other background box with the current date marked. Press the up, down, left, and right navigation keys to change the date, calendar information on the screen will be updated accordingly.

Tasks

You can view, add, edit, delete, delete overdue, delete all, jump to date, view uncompleted tasks.

Alarm

Five alarm can be set up (turned off the alarm is still valid.)

Select and edit an alarm clock: Can edit the setting of alarm on / off, Time, Repeat and Alert type. You can choose to set to repeat: Once, Everyday, Custom

World clock

In the world clock interface, users click right or left button can change region and time. Click "option", you can set on or off

daylight saving time for foreign city or not. If select on, the present time increase one hour. Otherwise, it displays local time.

File manager

Into the File manager menu, the menu display **Phone** and **Memory card**.

Root directory, select "**Phone**", press the **LSK** to enter "**Options**" can be as follows:

- **Open** Open the root directory lists the directories and files.
- **Format** Format the memory card, this action will remove all current flash memory data.

Root directory, select "**Memory Card**", press the **LSK** to enter "**Options**" can be as follows:

- Open** Open the root directory lists the directories and files.
- Format** Format the memory card, this action will remove all current flash memory data.
- Details** for more information you can view, such as Name, Total size, free size.

You can play the music or video files, view Photo, copy/move/delete files, rename files and so on.

You can send the file through Bluetooth.

STK

STK Display Operators's information.

Fun&Games

Games Into this menu display snake and game setting.

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back of the phone kept 0.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.5cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 0.5cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

TIPS ON EFFICIENT OPERATION:

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

RF Exposure Information:

This product is in compliance with FCC RF Exposure requirements and refer to FCC website search for FCC ID: 2ABN6POSHA100 to gain further information include SAR Values.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or over maximum 50°C, the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.