
尺寸: 72*112mm 材质: 157铜版纸 亚膜 折页

69 不見不散

manual for better operation

Dear user:

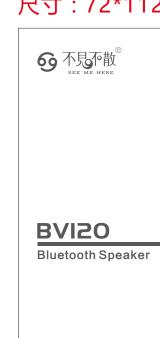

Shenzhen See Me Here Electronic Co.,Ltd. Address:D Block, TongFuYu Industrial Park, Xi'Xiang Town, Bao'an District, Shenzhen. Tel:0755-61181399 Fax:0755-29101982 Website:www.see-me-here.com

All rights reserved by Shenzhen See Me Here Electronic Co., Ltd. It's not allowed to copy comment from the manual. The product specification bases on newest update.

The leading audio technology makes you feel wonderful music when

you at home, on trip or at business work, providing the excellen voice effect for computer and any other music players.

Catalog

Part1:Start 1.Matters need attention Thank you for choosing our Bluetooth speaker. Please view the

Preface

2.Product configuration 3 Appearance and structure Our bluetooth speaker gets fashionable appearance, excellent voice effect, integrated multifunction, own patent in whole s eries.

4.Specification Part2:Use

5.Bluetooth play 6.Charge other devices 7.SD card play 8. Hands free calling 8.USB media play 8.Store music 8.Charge the speaker

9.Part3:FAQ

10.Part4:Warranty Card


9. Selfie snapshot function

Start

Matters need attention

- Please read this instruction before using
- Do not disassemble product.
- Do not expose product to high temperature or wet area.
- Please keep product away from fire or water to avoid explosion.
- Do not cover product with papers or other articles to avoid cooling fault. • Please disconnect the power charging cable when product is in off.
- Do not shock, hit product.
- Please stop using if there is liquid flooding from product.
- Please use the original charge cable and adapter.

Product configuration

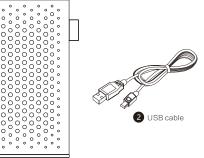

6 不見不散。 BV120 Bluetooth speaker

Functions

- Support bluetooth play and bidirectional conversation.
- One key to reconnect bluetooth Support SD card play in APE/FLAC format.
- Support exchange data via SD card.
- USB media play mode.
- Shut down automatically if pause or no working 10 minutes.
- Bluetooth snapshot.
- Run in Ultra Power Saving Mode after sound off 15 seconds
- Play above 15 hours with super battery
- Always keep Bluetooth connection
- Built-in 4400mAh battery for power bank function

Specification

| Appearance specification | | | | | | |
|--------------------------|--------------------------|--|--|--|--|--|
| Name | Bluetooth speaker | | | | | |
| Model | BV120 | | | | | |
| Net weight | 245g | | | | | |
| Dimension | 63*36*126mm | | | | | |
| Basic | | | | | | |
| Vocal tract | Single | | | | | |
| Bluetooth version | Bluetooth 4.0 | | | | | |
| Wireless distance | 10m Max | | | | | |
| Power capacity | 4400mAh | | | | | |
| Store type | SD Card | | | | | |
| Technical | | | | | | |
| Frequency response | 100Hz~18KHz | | | | | |
| Rated power | 3W THD=10% | | | | | |
| USB | USB2.0 | | | | | |
| Input | 5V≥1A | | | | | |
| Output | 5V===1A | | | | | |
| Max store capacity | 32GB Max | | | | | |
| Charge time | 1000mA4hr~5hr | | | | | |
| Play time | 12hr~24hr | | | | | |
| Playing Function | | | | | | |
| Format | APE, MP3, WMA, WAV, FLAC | | | | | |

封页

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital

device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

FCC Notice

- Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is

-Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

USE

Long press 2s for power on/off





function on mobile, tablet or computer, search device"BV120",click to connect.

 
2 You will hear voice"Ding-dong" when connected, play music now. Type in "0000" if it needs password. The speaker will automatic reconnect the last pairing device before shut down.

3 Long press * to disconnect bluetooth, the LED light is flashing, can search BV120 again.

4 Short press the bluetooth key to reconnect the last device.

Charge other devices





2 Press 🖇 , LED light will show the power capacity for 5s, then start

3 Disconnect the speaker with your device, BV120 will shut down automatically after 30s.

Power display

| z)c | (ε ε) nite light | 淤 | 淤 | 100%Power | ₽Ò. Whi | کارڈ te light | 30/2 | ΣŅ.́ς Ch | arge to 100 |
|-----------|----------------------|----------|---|---|------------|----------------------------|----------|-------------|---------------------|
| Σ)ς Wh | (t s)(t ite light | 淡 | | 75%Power | » L | ;\\\. | 淡 |) C | harge to 75 |
| s)c | í þí | | | 50%Power | ;\\\. | /hite lig | ht Fl | ashing C | light harge to50 |
| »); | ίς nite light | ge | Low power needs charging, volume will get lower automactically. | | | White light Flashing light | | | |
| Fla | ίς ashing whi | te light | | The speaker can not work in 10% low power | | | order ba | | in Chargii |
| | | | | | | | | | |

Pause under BT mode: the white LED

Micro SD card play: the white LED light stays Micro SD card pause: the white LED light

Line in play: the white LED light stays Line in pause: the white LED light flash Max volume: the white LED light quick

Note: when the power is very low, power on and the white LED will be quick flash. The speaker will be turned off automatically in 15S.

Micro SD card(TF card) mode



1 Insert SD card when power on In powered status, insert the SD card, the speaker will switch to SD card mode automatically and play music.

2 Switch to SD card mode In powered off status, insert SD card, then power on the speaker, after "dingdong", it enters Bluetooth mode firstly, double click the mode key , with prompt" SD card mode" then it

Warm Tip: We set Bluetooth mode as the first mode, it needs to switch (double click (b)) to SD card mode.

Hands free

6 不見不散[®]



1 When speaker connected with mobile The music play will be paused when a call comes in, short press 💥 to answer or end the call, long press to reject the call

USB media play



1 USB media play nnect the speaker with laptop, PC via USB cable, then double click 🐧 to enter the USB media play, then play music on your computer. Double click (b) to shift to other mode.

When power off, connect the speaker with laptop, PC via USB cable; short press with the prompt of "card reader mode", then ou can copy the music to the SD card. 3 Charging

Either power on or off, it can be charged as blow ways

1: Use the adapter on or above DC5V--1A 2: Use the USB ports on laptop, PC

PS: Please charge before using if unused for a long time. 8

Selfie snapshot function

1 In IOS system, connect with BV120, turn on the camera then press" 1 to snapshot.

2 In Android system, please download and install app "Camera360" from Google Play. Connect BV120 with your device, turn on"Camera360",press" 🔓 " to snapshot.

FAQ

Appearance

Reset: Press it with sharp for reset when the speaker crash.

-Volume+/Next: Short press for volume up(15 levels), default on 12 level when power on; Long press for next

Snapshot: Short press for photo snapshot when

Power: Long press 2 seconds for power on or off.
Pause: Short press for pause or play when run in SD card mode; for sound off mode when run in line in mode.
Mode: Double-click for changing mode, the sequence is: Bluetooth > SD card > Line in mode.

Charge: Short press for power bank mode, charge for

- Microphone: Built-in microphone for hands free calling.

-Bluetooth: Long press for disconnection, short press to reconnect Call: Hands free calling, short press to answer or hang up the call, long press to refuse the call.

LED power capacity/Charging power capacity

Plastic Material, Metal mesh.

- Mode LED Light

-Power: Long press 2 seconds for power on

| Problem | Solution |
|---|---|
| E-314 | 1. Turn off then restart the speaker |
| Fail to connect | 2. Type in "0000" if it needs password. |
| Staccato(not play fluently) | Check the connected distance or if there is barrier in the connected range. |
| 0D | 1.Check the SD card format(should be FAT32) |
| SD card error | 2. The stored file format should be WAV/WMA |
| Navaina | 1.Check the volume |
| No voice | 2. Check the speaker if it is in silent mode or pause status |
| No voice when in USB media play mode | Check the USB cable if it connects correctly or not |
| Can not power on | Click the reset key to try power on. |
| No reaction | Click the reset key |

Warranty Card

Please fill up the "Warranty card" and keep it well after purchasing the product