 


尺寸: 80*104mm 材质: 80g书写纸 折页

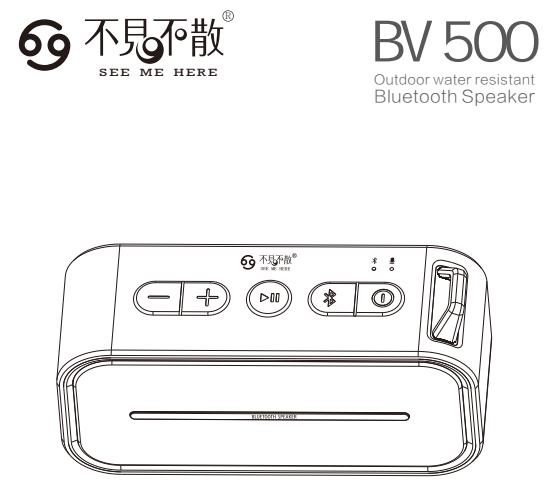

不見不散
SEE ME HERE

BV 500
Outdoor water resistant Bluetooth Speaker

www.see-me-here.com
Manufacturer: Shenzhen See Me Here Electronic Co.,Ltd.
Address: 3-4th Floor, Building D, TongFuYu Industrial Park, Xixiang Town, Bao'an District, Shenzhen City, Guangdong Province, China

Contents


Chapter 1: Getting to Know
 ① Warnings
 ② Packing Content
 ③ Parameters

⑤ power on/off
 Connect and Play
 ⑥ Play Music on TF Card
 Hands-free Call
 ⑦ External Audio Playing
 Enter Card Reader / Charging Mode

Chapter 2: Getting Started
 ④ Keys and Components

⑧ **Chapter 3:** Troubleshooting

 Packing Content

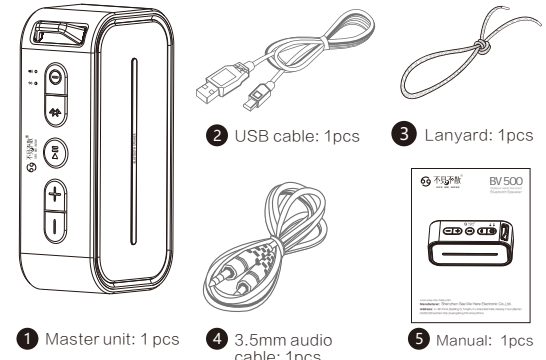


① Master unit: 1 pcs
 ② USB cable: 1pcs
 ③ Lanyard: 1pcs
 ④ 3.5mm audio cable: 1pcs
 ⑤ Manual: 1 pcs

Parameters

Appearance	
External interfaces	Micro USB interface TF card slot AUX external audio interface
Product specifications	W142 x D70 x H46 (mm)
Net Weight	395g (including built-in lithium battery)
Basic parameters	
Product type	Portable Bluetooth speaker
Speaker system	3W*2 + Bass radiator
Volume control mode	Touch the button to adjust
Features	Bluetooth 4.0
Storage type	TF card (MAX 32G)
Power supply	Built-in 1200mAh lithium battery
Technical parameters	
Output power	3W*2 THD = 10%
Frequency response	110Hz--18KHz
USB specification	USB2.0, compatible with USB1.1
Charging time	DC5V=1A around 3 hours
Audio play time	Around 6 hours at Mid-volume, around 3.5 hours at MAX-volume
Functions	
File format	MP3, WMA, WAV, APE, FLAC
Voice call	Bi-directional conversation
TF card playback	TF card music playback
Bluetooth play	Yes
TF card reader	Support data access
External audio source	Aux In
Bluetooth connection	One key reconnect
Power level display	Support iOS power display
Ringtone	Support ringtone playback
APP	Yes

Getting Started

 Keys and Components

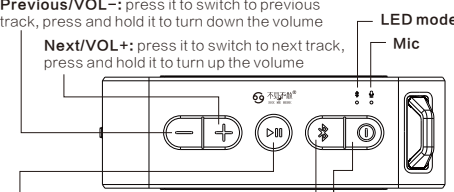

Previous/VOL-: press it to switch to previous track, press and hold it to turn down the volume

Next/VOL+: press it to switch to next track, press and hold it to turn up the volume

 
Mode: press it to switch among BT, TF and AUX

Power: same as the Mode button; press and hold for 2 seconds to turn on/off.

Play/Pause: press it in playing state to play/pause

BT: press and hold it to disconnect the Bluetooth, and press it to connect the last connected Bluetooth device.

Call: if there is incoming call in BT state, press this button to answer the call, or press and hold it to reject; during the call, press it to end.

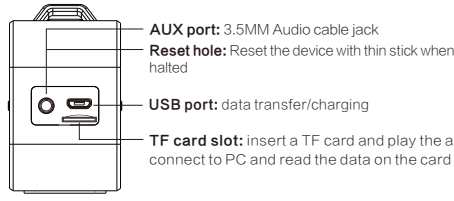

AUX port: 3.5MM Audio cable jack

Reset hole: Reset the device with thin stick when the speaker halted

USB port: data transfer/charging

TF card slot: insert a TF card and play the audio file, or connect to PC and read the data on the card

 
Getting to Know

Warnings


- Please use and store this product at room temperature;
- Do not expose this product to rain or wet conditions;
- Do not throw and drop this product, avoid damage;
- Do not self-dismantle, repair and transform the product;
- Only charge with a rated voltage charger(DC5V=1A);
- Long time high volume may cause hearing impairment; please adjust the volume appropriately when listening, especially for long time listening;
- Unauthorized dismantlement will void the warranty.

①. Note: Improper battery replacement may cause explosion; only replace with same or equivalent battery.
 ②. Do not expose the battery to sunlight, fire or excessive heat.

Press and hold for 2 seconds to turn on/off the speaker

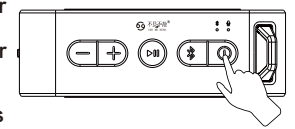

Connect to other Bluetooth devices



1 Press and hold for 2 seconds to turn on/off the speaker
 Press and hold for 2 seconds to turn on the speaker, the speaker makes a ding dong sound, and the blue LED starts flashing; press and hold for 2 seconds again to turn off the speaker.

2 Bluetooth connection
 Turn on Bluetooth on the mobile phone, tablet PC or other devices, search for Bluetooth device "BV500", and then tap Connect to confirm.

3 Successfully connect to Bluetooth and play
 After pairing successfully, the device makes ding-dong-ding sound, the blue LED stays, and then you can select and play music files on mobile phone or tablet PC.

1. If necessary, type "0000" and tap OK to connect

2. The Bluetooth speaker will connect to the last paired device automatically (when turned on)

4 Disconnect Bluetooth device
 When the speaker and the device are connected, press and hold to disconnect the Bluetooth connection, accompanied by a thud sound; the speaker is available for connect now and the blue LED starts flashing.

5 Bluetooth reconnection
 When the Bluetooth is disconnected, you can tap to connect to last paired device, and tap to play last song.

 
Playing music on TF card

1 Insert a TF card and turn on the device
 Insert a TF card with music files into the card slot, press and hold the Power button to turn on the speaker, accompanied by a ding-dong sound.

2 Switch to TF music mode
 Press the Mode switch button, and the speaker will make a dong-dong sound and play the music files on TF card.


Tip: BT is the default mode of the Bluetooth speaker; if want to play music on TF card, switch to TF mode first; if the speaker is turned on, the files on the TF card will be played automatically when the card is inserted.

External audio playing



1 Connecting audio cable
 Press and hold the Power button to turn on the speaker, insert the audio cable after the ding-dong sound, and press the Mode switch button to switch to Aux In mode; you can also insert the audio cable in power on state to realize plug and play.

 Entering card reader/charging mode

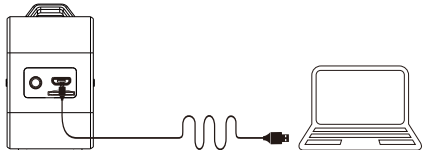

1 Copy music
 Turn off the speaker, insert the TF card, connect the speaker to PC with the USB cable via Micro USB interface, press the Power button to enter card reader mode, and then you can copy music files to the TF card.

3 Charging the speaker
 You can connect the speaker to PC with the provided USB cable and charge the speaker no matter it's power on/off. It is recommended to buy a separate DC5V=1A USB charger or other 5V1A charger for mobile phone and charge the speaker through indoor outlet.

Tip: Please charge the speaker first if it hasn't been used for a long time.

Troubleshooting

Fault	Solution
Pairing failed repeatedly	1. Turn off the speaker and restart it 2. If your device requires code, type 0000
Music play interrupted	1. Check if the device is out of effective range, or if there is barrier between speaker and the device
TF card error format error	1. Check if the TF format is proper (speaker supports FAT32 format) 2. Check if the file formats of the TF card are WAV, WMA, MP3, APE or FLAC
No sound during playing	1. Check if the speaker volume is adjusted properly 2. Check if the speaker is or paused
Can't turn on the speaker	1. Restart the speaker, use the reset function
No reaction	1. Restart the speaker, use the reset function

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCCID: 2ABNJ-BV500

Hands-free call



1 Connecting speaker and mobile phone
 We the speaker connected to you smart phone, if there is an coming call, the music will pause and the "dudu" sound is ring, press to answer the call and press it again to end the call; or press and hold to reject the call