



A Multimedia message or MMS can contain letters, an image, an audio or video file. To create and send a MMS, please follow the steps mentioned below:


- Enter the Main Menu, select Messaging.
- Tap  Compose new message.
- Select Menu > Add subject.
- In the To field, enter the recipient's phone number or email address and enter the Subject.
- To insert a picture or video file, etc, tap .
- To insert text, tap Type to compose, and then enter your message.

## 3.5 CONTACTS

---

You can save information such as name, phone numbers, etc. for each contact listed in your Contacts menu.

### To add a Contact

- Enter the Main Menu select People.
- Tap  add to contacts .
- Store the contact to SIM card or Phone contact.
  
- You can fill out as many or as little fields as you'd like for the contact.
- Tap Done to save the contact.

## 3.6 EMAIL

---

Your device allows you to compose, read and send emails.

## 3.7 BROWSER

---

The Browser is the tool which enables you to access the Internet.

## 4. HOME SCREEN

---

### 4.1 CUSTOMIZING SCREEN

---

The device features a touchscreen with idle displays and access to utilities at just one-touch. So swipe right or left to navigate through various screens accessing your favorite features without entering the main menu. Each screen can be customized by adding various widgets, shortcuts and folders.

#### **Shortcuts**

In order to add a shortcut on the screen: Long press on the desired application to add on the screen.

#### **Widgets**


Save time with live updates right on Home screen and get all of your personalized updates at one place.

#### **Setting the wallpaper**

You can customize the wallpaper of your Home screen with default wallpaper or with pictures taken from your device.

- Tap the Menu Key > Wallpapers.

#### **Rotating Your Mobile Phone Screen**

- The orientation of most screens will change to landscape or portrait view when you rotate your phone sideways.
- On the Home screen, tap  > Settings > Display > Auto-rotate screen to disable this function.

## 5. MULTIMEDIA

---

Your device features various multimedia options, such as Music Player, Camera and Video Player.

### 5.1 FILE MANAGER

---

You can browse, open and manage the data saved in the Device and Memory card by accessing the File Manager sub-menu. The device provides a certain space for users to manage files and supports the T-Flash card. You can use the file browser to conveniently manage various directories and files on the T-Flash card.

### 5.2 CAMERA

---

Your device is equipped with a camera and camcorder that enable you to capture photos and videos.

### 5.3 GALLERY

---

You can view the captured images, recorded video clips, and downloaded images in the Gallery.

The picture folder and video folder will be displayed.

Select to view the camera pictures or camera videos. The images or videos will be displayed in thumbnails.

### 5.4 FM RADIO

---

You can use your phone to listen to FM radio stations once the original Headset is plugged into the connector. Please press the side key to adjust music volume.

Tap  to exit FM radio function. Tap the (   ) to search the channels.



## 6. NETWORK

---

### 6.1 WI-FI

---

Connect to a wireless network to browse Internet.

- Enter Main Menu and tap Settings.
- Tap 'ON' to activate Wi-Fi.
- Tap  Wi-Fi > Network notification to start detecting networks. The available networks will then be listed.
- Tap  Add Wi-Fi network to add a connection.

#### Note:

- If the connection is successful, the device information will be saved in the pop-up window selected connection, if no longer wish to use the connection, select forget to remove device information.
- If the device does not encrypt the selected connection in the pop-up window to connect, no additional steps needed.
- If the device is encrypted, the pop-up window will appear, enter the password.
- If the network connection is successful; the status bar icon will appear as Wi-Fi connection.

### 6.2 BLUETOOTH

---

You can transfer data, such as music to other device using Bluetooth. Search the device and accept/transfer data. The received data is automatically stored in the directory.

- Access Settings by entering the main menu
- Check Bluetooth to turn on Bluetooth
- To make your device discoverable, select Bluetooth settings and check discoverable.

## 7. SETTINGS

---

---

Select Settings to view and adjust the settings of your device.

### 7.1 SIM MANAGEMENT

---

Your device supports two SIM cards, which can be managed by accessing the SIM Management sub-menu. You can view/change the roaming settings of the cards using this menu.

### 7.2 WIRELESS & NETWORKS



---

Access this sub-menu to change/view the Wi-Fi, Bluetooth, Mobile Networks, VPN settings, etc. Please refer to network section for detailed information on Wi-Fi and bluetooth.

### 7.3 AUDIO PROFILES

---

Your device provides four pre-defined user profiles that allow the operations of the device to best suit the environment you are in. The profiles are General, Silent, Meeting and Outdoor.

The Touch  icon adds a new profile; tap the  icon to select Reset to restore the default settings.

### 7.4 DISPLAY

---

With this function you can configure the display characteristics of the device including brightness, Auto-rotate screen, etc.

### 7.5 STORAGE

---

View and manage the data storage of your device:

Total Space and Available Space: Lists the amount of space on the microSD card installed in your device and the amount you have used to store photos, videos, music, and other files.

Un-mount SD Card: Un-mounts the microSD card from your device so that you can format the card or safely remove it when the device is on.

Available Space: The amount of internal phone storage used by the operating system, its components, applications

(including those you downloaded), and their permanent and temporary data.

## **7.6 BATTERY**

---

You can check the battery status of the device by accessing this sub-menu.

## **7.7 APPS**

---

This sub-menu enables you to manage all the installed, running and applications saved in the device memory and SD card. You can remove and manage installed applications, view and control running applications, allow installation of non we build in market applications.

## **7.8 LOCATION**

---

Your device supports Global Positioning System.

## **7.9 SECURITY**

---

You can protect your device from unauthorized users by setting the PIN code or entering a password.

### **Enable or Disable SIM card PIN**

When PIN code is enabled, you are required to enter the PIN code before making a call.

- Go to Application Drawer > Settings > Security.
- On the SIM card lock tab, select Set up SIM card lock.
- Select a SIM card.
- Tap Lock SIM card to use PIN. Check to enable, uncheck to disable.
- Enter the current PIN code.
- To change the PIN code, select Change PIN.
- Enter the old PIN code.
- Enter the new PIN code and confirm.

### **Setup Screen Lock**

You can set up a lock for your screen in form of Pattern, PIN code or password.

- Go to Settings > Security
- Set up screen lock

- Select a desired form (None, Slide, Pattern, PIN or password,etc.)

## **7.10 LANGUAGE & INPUT**

---

Use the Language & Input settings to select the language for the text on your device and for configuring the onscreen keyboard, including words that you've added to its dictionary.

## **7.11 BACKUP & RESET**

---

You can use the privacy settings to manage your personal information, such as back up my data, automatic restore and factory date reset.

## **7.12 ACCOUNTS**

---

Use the Accounts to add, remove, and manage your Google and other supported accounts. You also use these settings to control how and whether all applications send, receive, and sync data on their own schedules, and whether all applications can synchronize user data automatically.

## **7.13 DATE & TIME**

---

You can select to set date, time and time zone using this sub-menu.

Use Automatic unless you need to override the network values.

Use 24-hour format: Select to set 24-hour formats on or off.

Choose Date format: Select from a variety of formats.

## **7.14 SCHEDULE POWER ON&OFF**

---

You can set the time for auto power on /off. Do turn the status on before using that function, and then the time.

## **7.15 ACCESSIBILITY**

---

You can use the Accessibility settings to configure any accessibility plug-ins you have installed on your device.

## **7.16 ABOUT PHONE**

---

You can view system information including Status, Legal information, Model number, Android version and so on.

## 8. APPLICATIONS & UTILITIES

---

For your entertainment purpose, your device is provided with several interesting games, applications and utilities. Please ensure that you have GPRS setting in your device to access the applications. Contact your operator for GPRS settings.

### 8.1 CALCULATOR




---

Calculator helps you perform basic arithmetic functions, such as addition, subtraction, multiplication and division.

### 8.2 CLOCK

---

This function gives you an access to the alarm clock.

- Go to  → Clock
- Tap  > tap  to add alarm.

### 8.3 GMAIL

---

Gmail is Google's web-based email service. Google Mail is configured when you first set up your device. Depending on your synchronization settings, Google Mail on your device is automatically synchronized with your Google Mail account on the web.

- Go to Main Menu > Gmail.
- Select “Existing” or “New” start the Gmail.
- Follow the on screen instructions to login or create your Gmail username and password.
- Once logged in, you can begin reading and sending emails from your Gmail account.

### 8.4 PLAY STORE

---

Play store allows you to find and download applications and fun games for your device.

- Go to Main Menu > Play Store and setup your Google account.
- Select “New” to create a new account or “Existing” to sign in your existing account.



Once you are signed in you can begin searching and downloading programs from the market. Tap Apps to view the list of applications available and tap Games to view the list of games available.

## 9. SPECIFICATIONS

---

---

Screen	6.0 inch (HD)
Battery	2500 mAh
Dimensions	168x85x10mm
Weight	205g
Standby Time	Up to 320 hours*
Maximum Talk Time	Up to 9 hours*
Power Adapter	Input: 100-240V Output:5V/1A

\* The standby time and maximum talk time depend upon the network signals and settings.



## ENVIRONMENTAL CONCERN

---

---

Help us save our environment...GO GREEN!

All of our endeavors are directed towards providing environment-friendly products to you. The materials used in our devices are recyclable and can be reused to make new products. We strive to make products that are safe for our consumers as well as the environment. Come join hands with us and make world a better place to live in.

Preserve natural resources for future generations by recycling your phone. The phone contains some metals, when recycled properly; these can be put back into circulation, decreasing the need for new metal mining. Recycling reduces the need for raw materials, saves energy, helps mitigate Global Warming and reduces pollution, reduces waste products in landfills; therefore, preserves natural resources for the future and saves the planet.

Follow some simple steps and contribute towards saving the planet.

### DOs

Recycle your handset and its accessories.

To protect natural resources and to promote re-use of the material, kindly separate batteries from other type of waste.

### DON'Ts

Do not dispose of your mobile and its battery in fire.

Do not dispose your mobile with regular waste.

Do not overcharge your handset. Remove the charger when battery is full.

Don't trash your phone, instead RECYCLE it.

This logo signifies that this product and/or its constituents should not be disposed off with other household waste.

Hazards of Improper handling, accidental breakage, damage and /or improper recycling of hazardous elements

If this product is improperly handled, broken or damaged or carelessly recycled or disposed off in the fire, can result in environmental and data security concerns, including the following:

Affect nearly every system in the human body and result in birth defects, brain, heart, liver, kidney and skeletal system damage. They will also significantly affect the nervous and reproductive systems of the human body;

When burned, create cancer-producing dioxins which are released into the air we breathe; If thrown in landfills, may leach into groundwater affecting your local community;

In warm climates, the oxidation of mercury in the environment can be accelerated, leading to the creation of oxidized Hg atoms that are known to be associated with ozone depletion; and Improper recycling additionally results in data security issues, as private electronic information remains on the hard drive, if not properly removed before disposal.

#### How to Recycle



Please get your electronic devices recycled only through authorized recyclers, approved by the Pollution Control Board. We provide a facility of recycling of our products. For details of our collection centers, please visit our website or call our customer care. Help us to GO GREEN.

#### Constitution of Hazardous Elements in your Device:

Your device does not contain the following hazardous elements in a proportion higher than the limits provided hereunder: maximum concentration value of 0.1% by weight

in homogenous materials for lead, mercury, hexavalent chromium, polybrominated biphenyls and polybrominated diphenyl ethers; and maximum concentration value of 0.01% by weight in homogenous materials for cadmium.

## **FCC RF Exposure Information and Statement**

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types 3G Smart phone (FCC ID: 2ABOSSKYPLA60) has also been tested against this SAR limit. The highest reported SAR values for head, body-worn accessory, wireless router(hotspot), and simultaneous transmission conditions are 0.314 W/kg, 0.359W/kg , 0.837W/kg, and 0.851W/kg respectively. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

## **FCC Warning**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.