

In the box

EL218 speaker, User's manual, Type-C charge cable

Product Overview


1. TWS pair ON/OFF button
2. TWS function indicator
3. LED mode button
4. Play/Pause/Hold to disconnect Bluetooth
5. Single press for volume down / Hold for previous track
6. Single press for volume up / Hold for next track
7. Single press for play mode / Hold for Power ON/OFF
8. LED indicator

Bluetooth searching: Rapid flash WHITE

Bluetooth successful pairing: Slow flash WHITE


AUX mode - Solid WHITE

USB playing - Solid WHITE

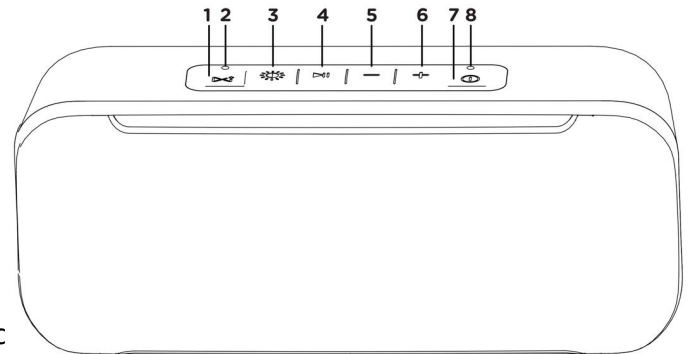

Back of Speaker Overview

1. AUX audio port (cable not included)
2. Micro SD / TF card port
3. Type-C charge port (5V / 1000mA)
4. USB play port and power bank function (5V / 1000mA)
5. Charge LED indicator
 - Red LED indicates the unit is charging
 - Red LED will turn off when fully charged

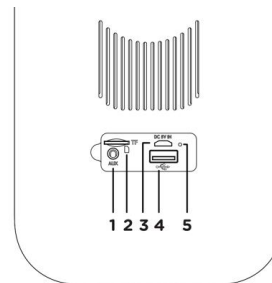

LED Mode Selection Overview


- Press ☀ button to cycle through different LED modes
- Hold ☀ button to turn off top and bottom light
- Hold ☀ button to turn off center light
- Double press ☀ button to turn on/off the side flashing lights

Charging


1. Use the included Type-C cable to connect speaker and a USB powered port.
2. The battery is fully charged in 3-4 hours. (Charge time will be longer if speaker is being used during charging).

3. The red LED light indicates that the unit is charging. The red LED will turn off when the battery is fully charged.

AUX Play Mode


1. Hold the  button to turn on the speaker.
2. Connect one end of audio cable (not supplied) to the AUX port at the back of speaker.
3. Connect the other end to audio source.
4. Speaker will go to AUX mode automatically (LED will glow solid white).

Bluetooth Play Mode


1. When using a Bluetooth enabled audio device, make sure the distance to the speaker is within 10M.
2. Press and hold the  button to turn on the speaker. The unit will give a beeping sound to indicate it is in Bluetooth mode. The LED will rapidly flash white.
3. Enable Bluetooth on your audio device.
4. Search for new device "EL218" and get paired.
5. Adjust the volume on your audio device to desired level.

Note: The speaker will automatically power off after 30 minutes if not in use or music not being played.

USB Play Mode



1. Hold the  button to turn on the speaker.
2. Plug your USB/flash drive into the USB-A port on the speaker.
3. The unit will enter USB play mode automatically.


Micro SD / TF Card Play mode

1. Hold the  button to turn on the speaker.
2. Insert the Micro SD card into the SD slot on the speaker.
3. The unit will enter Micro SD play mode automatically.

TWS (True Wireless Stereo) Connection

Two speakers can be synced and connected.

1. Hold the  button on each speaker to turn both speakers on.
2. Press and hold the  on both speakers to enter TWS mode.
3. You will hear a beep when the two speakers are paired (10 sec.)
4. The LED on the master speaker will be solid white, while the LED on the second speaker will flash white.
5. On your audio device, turn Bluetooth on and follow normal Bluetooth pairing instructions.

Note: Once speakers have been paired via TWS, they will pair again each time they are turned on. If you want to unpair them, press the  to disconnect. The speaker will beep and both LEDs will flash indicating the speakers are no longer paired.

Power Bank Mode

1. Use a charge cable that is compatible with your mobile device, making sure it has a USB-A connector on the other end.
2. Once you have connected your mobile device to the speaker's USB-A output, the charge port can provide 5V/1000mAh output.
 - If your device tries to draw more current than the speaker can output, the speaker will shut off the USB port for your safety.
 - The speaker will not charge the mobile device if the power is off.

Troubleshooting

Issue	Possible solution
No power	<ul style="list-style-type: none"> ● Make sure your speaker is turned on and make sure your speaker is completely charged.
No Sound	<ul style="list-style-type: none"> ● Make sure the volume of your speaker is not at the lowest setting. ● Make sure the connected audio device is playing audio.
Sound is distorted	<ul style="list-style-type: none"> ● Turn down the volume of speaker or the connected device.
Cannot pair the speaker with my Bluetooth device	<ul style="list-style-type: none"> ● Make sure Bluetooth mode on your device is turned on. ● Your Bluetooth device may be out of range, try moving it closer to the speaker. ● Move your Bluetooth device and/or speaker away from other devices that generate electromagnetic interference, such as phones, microwave ovens, wireless network routers or other Bluetooth devices.

To prevent the possibility of the battery from leaking, heating or catching fire, please follow those precautions:

- Please disconnect the charge cable after fully charged.
- Do not use or leave the speaker near a heat source such as fire or heater.
- Do not hit or throw the speaker.

Cautions

- Do not use or leave the speaker in very high temperatures. (i.e. in direct sunlight or in a vehicle in extremely hot conditions).
- Do not use the speaker where there is a lot of static electricity, otherwise the safety devices within the speaker can be damaged.
- The speaker should be stored at room temperature.

- The speaker battery should be charged and discharged frequently in order to activate the restore of the battery' s energy.
- Please follow battery waste recycling guidelines when disposing of the speaker.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user' s authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.