

# MANUEL

## Contents

General Notices of Use.....	2
Disclaimer.....	2
1. Introduction of Device.....	3
2. Technical Specifications.....	4
3. Operations.....	5
3.1 Turn on/Shut down the Machine .....	5
3.2 Battery status/Charging your battery .....	5
3.3 Install/Administer apps.....	5
4. Safety.....	7
5. Troubleshooting.....	8
6. Important Statement.....	10

### ● General Notices of Use

-- This devices is a highly advanced electronic device. Disassembly, customization or repairs without the appropriate knowledge and pre-cautions can lead to dangerous situations with chance of damaging the product and serious self-injuries.

-- Avoid using in extreme conditions such as high and low temperatures, high humidity or moist environments, and around magnetic fields. Also avoid long-term exposure to sunlight.

-- Only use manufacturer permitted accessories to avoid damaging the product and warranty loss.

-- Please adhere to local environmental regulations when disposing of obsolete electronics and accessories.

-- Use a protective case to help prevent extreme physical shocks to the device(i.e. dropping).

### ● Disclaimer

-- The manufacturer takes no responsibility for loss of information or data caused by hardware or software failure. The user is responsible for performing timely backups of important data.

-- All information and images used in this user manual are provided 'as is' and are subject to change without notice. -- The manufacturer accepts no liability for the information offered in this document.

### ● 2. Technical Specifications

Operating System:	Android 10
CPU:	MTK8168
DDR&Flash:	2GB&32GB
Display LCD:	10.1" 1280x800 IPS
Camera:	0.3+2.0MP
Battery:	3.7V/ 6000mAh
Adapter:	5V/ 2A
BT:	YES
WiFi:	YES
Sensor:	G-sensor
SD card:	Support to 32GB maximum
I/O port:	Micro USB*1      Micro SD card slot*2 3.5mm earphone Jack*1
Size:	188mm*107.8mm*9.9mm

**Disclaimer:** These specifications are for reference only and shall not constitute any commitment in any way. Concerning the product improvement, we shall reserve the right to change the product specifications without further notice.

### ● 3. Operations:

#### 3.1 Turn on/Shut down the Machine

To start your device, press and hold the Power button until the screen lights up. To shut down your device, press and hold the Power button for seconds and press 'Power Off'.

#### 3.2 Battery status/Charging your battery

The current battery status will be always displayed in the top right of the screen in the system information bar. The battery icon will change accordingly to the battery status.

When connected to the charger, the battery charging icon will display at the top right corner of screen. Note the lighting symbol inside the battery icon.

#### 3.3 Install/Administer apps

You can install your own apps by opening the apps shop after connected to the network. Note that not all applications could function properly for your tablet, because some are made especially for small screen devices such as phones.

After entering 'Settings', there will display an overview of the installed apps. Select an app to view its detailed information. In the detailed information you also have the options 'Force Stop', 'Uninstall', 'Clear data' and 'Move to SD card'.

1

2

3

4

5

### ● 4. Safety

Please read below information to ensure safe and proper use of this device.



**Flying**  
Using this device can distract the user and result in an accident while driving. You must fully comply with the local regulations and laws regarding the use of this kind of device whilst driving.



**Hospitals**  
Your device may interfere with the operation of medical equipment. You must observe and follow any instructions or warnings in hospitals and treatment centers.



**At Petrol Stations**  
Don't use your device in petrol stations. It's suggested to be switched off near any fuels, chemicals or explosives.



**Contact with liquid**  
Keep your device away from water (or any other liquid). Any damage caused by liquid may be irreparable.



**Making Repairs**  
Never take your device apart. Please handle the repairs with the professionals. Any unauthorized repairs would break warranty terms.



**Around Children**  
Keep this device out of children's reach. It should never be used as a toy and it might not be good for their health.



**Original Accessories**  
Only use the original accessories supplied with this device or those approved by the manufacturer. The use of unauthorized accessories may damage the device or cause a safety risk.

6

by the manufacturer. The use of unauthorized accessories may damage the device or cause a safety risk.



**Near Explosives and Fire hazard**  
Turn off your device in or near explosive materials or heat sources such as radiators or cookers. Always obey local regulations and laws. Turn off your device when requested.



**Working Temperature**  
The working temperature for the device is between 0 Degree and 40 Degree Celsius. Please don't use the device outside the range. Using the device under too high or too low temperature might cause malfunction



**Backup**  
Always make a backup or keep a written record of all important data in this device.

Information about the meaning of Logo WEEE (Waste Electrical and Electronic Equipment):



The WEEE logo on the product or on its box indicates that this product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such

hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserving natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment.



To prevent possible hearing damage, do not listen at high volume levels for long periods.

7

### ● 5. Troubleshooting

Your device can not be turned on.

Make sure your device has been charged for at least 4 hours prior to use. The battery is used up, pls fully charge your device.

Your device can not access to the internet via Wi-Fi.

- 1) Check whether your device can receive any Wi-Fi signal.
- 2) Check whether the wireless router supports DHCP. If not, please configure a static IP address.
- 3) Check whether the wireless router has been connected to the internet.

Your device responds to operations slowly.

- 1) Check whether too many applications are running in the backstage.
- 2) Check whether any incompatible-version application has been installed.
- 3) Use the anti-virus software to scan and kill the malicious programs(if any).

Your device gets warm in use.

It is normal that your device gets warm in a long-time use or in charging.

Your device crashes and its keys do not work.

Press and hold the power button for 8-10 seconds, and the system will turn off and then press the power button to start the device.

8

The total memory is smaller than the theoretical memory.

A certain space has been used to store the system files and install user applications, so it appears that the total memory is smaller than the theoretical memory.

Some video files can not be played

Your device supports most of the common audio and video file formats, except a few special formats. We suggest that you download a third-party player to play those exceptional files.

9

### ● 6. Important Statements

All contents and services obtained through your device shall belong to a third party under the protection of copyright, patent, trademark or other intellectual properties, and shall be used for your personal non-commercial purposes only. You are not allowed to use any content or service in any way without the authorization of the content or service provider.

In no case shall we e held liable for any direct, indirect or accidental loss or damage caused by your accessing any content, service, information or third-party software through your device.

Third-party services are subject to change, deletion or may stop without prior notice. We shall not imply or assure that all services and contents will be kept available at all time.

We shall not be responsible for providing any related customer service for any third-party service or content. Please refer your questions and service requests directly to the relevant content or service provider.

Please remember to backup the data when using your device. We shall not be held liable for any personal data loss or damage caused by software or hardware misoperation, product repair, battery replacement or any other unexpected situations, or for any other indirect loss arising thereof. Any misunderstandings in relation to this Manual shall be beyond our control. Consequently, we shall not bear any liability for any accidental loss caused by the use of this Manual or got any third-party claim caused by the use of your device.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part

15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However,

there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and

on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1) Reorient or relocate the receiving antenna.
- 2) Increase the separation between the equipment and receiver.
- 3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4) Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

10