

## TROUBLE SHOOTING

### **PROBLEMS, CAUSES & SOLUTIONS**

#### **No power**

- Check and make sure the connecting wires are connected correctly
- Check whether the fuse is blown. Replace with the proper value fuse if necessary.

#### **No sound**

- Check and make sure the speaker wires are connected correctly.

#### **No picture**

- Check whether the video wire is connected to the video device.

#### **Stereo Not Responding**

- Reset the unit to factory settings.

#### **Touch/Key Input Not Responding**

- Reset the unit to factory settings.

#### **No Radio Signal / Poor Radio Signal**

- Check whether the radio antenna is inserted or properly connected.
- Antenna may not be the proper length. Make sure the antenna is fully extended.
- Antenna may be poorly grounded. Check and make sure the antenna is properly grounded.

#### **No Stereo Sound in Radio Mode**

- Tune the radio frequency accurately.
- The broadcasting signal is too weak, set the mode to MONO.

#### **Remote handset does not work**

- Replace new battery of the remote handset.
- Point the remote handset directly at the remote sensor of the main unit.
- Clean the surface of the remote sensor.

#### **Bluetooth Not Working**

- Check to make sure your devices are paired correctly.

#### Note

If your unit is still not functioning normally after following the above trouble - shooting guide, consult a professional technician. Never attempt to disassemble the unit by yourself. No serviceable part inside of the unit .



**XOD1651MC**  
**7" Touch Screen**  
**Multi-Media Receiver**

## **IMPORTANT NOTICE & PRECAUTIONS**


Thank you for purchasing DP Video DBD703MC. To operate the unit correctly, please read the operation manual carefully before using. Keep this operation manual for future reference.

The unit is designed only for DC 12V negative ground operation system. Make sure your vehicle is connected to DC 12V negative ground operation system. Be sure to connect the speaker(-) leads to the speaker(-) terminal. Never connect the left and right channel speaker wires together or to the vehicle body.

The normal temperature for operation is between -4 and 140 degree Fahrenheit. Do not use in extreme high or low temperature. Do not lock vents or radiator panels of the unit, blocking them will cause heat to build up inside the unit and may cause damage or fire.

This unit can play the following media files: 1080p / RMVB / MPEG 4 / MP3 / JPEG.

## **INSTALLATION**

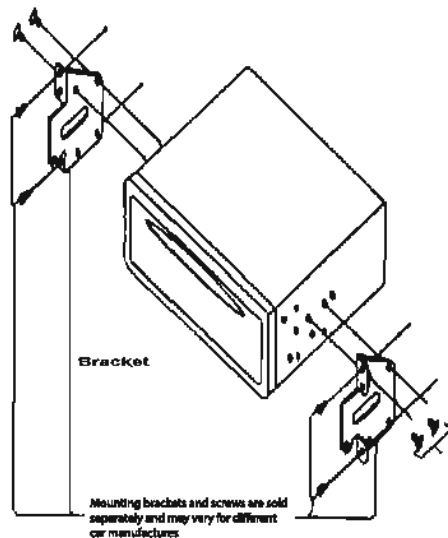

### **Notes:**

- Installation varies on type of cars and supplied parts
- Store small articles in places not accessible to children
- Install only with the supplied screws
- Installation of unit by professional technician is strongly recommended

### **Note:**

Mounting brackets and screws are sold separately and may vary for different car manufactures

## **SPECIFICATION**

### **GENERAL**

Power Requirement:	DC 12 Volts, negative ground
Load Impedance:	4 Ohms
Maximum Power Output:	30 watts x 4 (RMS)
Tone Control – Bass (at 100 Hz)	+/- 8 dB
Treble (at 10 KHz)	+/- 8 dB

### **FM RADIO**

Frequency Range	87.5 – 108 MHz
Usable Sensitivity (-20 dB)	87.5 – 107.9 MHz
Signal to Noise Ratio	15 dB
Stereo Separation (at 1 KHz)	60 dB
Frequency Response	30 dB
	30 Hz – 15 KHz

### **VIDEO**

Video System:	PAL / NTSC
Video Output Level:	1.0Vp-p 75 Ohms
Horizontal Resolution:	500

### **BLUETOOTH**

Communication type:	V2.1
Maximum Distance:	5 meters

### **AUDIO**

Maximum Output Level:	2 Vrms (+/-3 dB)
Frequency Response:	20 Hz to 20 KHz
Signal to Noise Ratio:	85 dB
Channel Separation:	80 dB

Note: Specification and design; functions and features; unit illumination; colour and display segment are subject to change without prior notice. Product photos, technical drawings and functions demonstrated in this manual may vary from your exact unit. Depending on the connected external devices, operation and functions may vary from those described in this manual.

## ON SCREEN – CALENDAR & CLOCK OPERATION



In the **MAIN MENU**, touch to shift screen to **CALENDAR MENU** for calendar & clock setup.

### CALENDAR MENU




1. Touch to select year setting mode.Touch the arrow repeatedly to set the year of the calendar.
2. Touch to select month setting mode.Touch the arrow repeatedly to set the month of the calendar.
3. Touch to select day setting mode.Touch the arrow repeatedly to set the day of the calendar.
4. Touch to select hour setting mode.Touch the arrow repeatedly to set the hour of the clock.
5. Touch to select minute setting mode. In this mode, touch the arrow repeatedly to set the minute of clock.
6. Touch to select time display in 12 / 24 hour format.
7. Touch the date directly to set for date of calendar.
8. After setting the calendar & clock, touch to save the setting.
9. Touch to cancel the setting.
10. Touch to activate the volume control bar on screen, hold & slide to adjust the output level on volume.
11. Touch repeatedly to select brightness of screen or turn off the screen. When the screen is off, touch any portion of the screen to turn it on again.
12. Touch to start Bluetooth operation (when a mobile phone is paired with the unit and this icon is highlighted).
13. Touch to shift the screen to **MAIN MENU**.

### IMPORTATION NOTICE FOR ON SCREEN OPERATION

Interfaces , photos, icons, images illustrated in this manual may vary from your exact unit. Their functions and settings will be the same regardless of their appearance.

## WIRING CONNECTION

### BACK OF MAIN UNIT

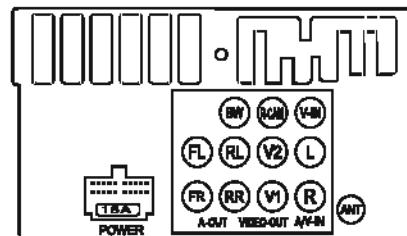

Note:

Due to the law in various countries, Video playback is not allowed while driving. To enable video playback while driving, the brown wire(brake) should be connected to the ground (B-) of the car battery.

Portion	Colour	Connection	
Connecting Socket	POWER	Red	Ignition switch (B+)
		Black (Coarse)	Ground (B-)
		Yellow	Memory back up (B+)
		White	Front left speaker (+)
		White / Black	Front left speaker (-)
		Grey	Front right speaker (+)
		Grey / Black	Front right speaker (-)
		Green	Rear left speaker (+)
		Green / Black	Rear left speaker (-)
		Purple	Rear right speaker (+)
		Purple / Black	Rear right speaker (-)
		Blue / White	Auto antenna (B+)
		Pink	Back sight (B+)
		Pink / Black	No function (not available for connection)
		Grey	Steering wheel control (1)
		Green	Steering wheel control (2)
	Black (Fine)	Steering wheel control (Ground)	
	Orange	Headlamp detection / backlight illumination (Connect to on/off control of car headlamp)	
	Blue	Amplifier control (B+)	
	Brown	Brake (B-)	
Audio output Jack	ANT	Radio antenna	
	SW	Sub-woofer output	
	FL	White	Front left speaker output
	FR	Red	Front right speaker output
	RL	White	Rear left speaker output
	RR	Red	Rear right speaker output
Audio Input Jack	L	White	Auxiliary left speaker input
	R	Red	Auxiliary right speaker input
Video output jack	V1	Yellow	Video output
	V2	Yellow	Video output
Video Input Jack	R-CAM	Yellow	Back sight camera input
	V-IN	Yellow	Video input

## MAIN UNIT OPERATION

### Symbol / Function Operations & Controls

RES / RST	Press with a pointed object (such as a ball point) to reset the unit to its initial setting by the factory (factory setting).
⏻ / POWER	When the unit is turned off, press to turn on the unit. When the unit is turned on, press & hold shortly to turn off the unit.
M/N / MENU	Press to shift screen between MAIN MENU & current operation mode.
⏪ / ⏩ / VOL+ / VOL-	press repeatedly to adjust sound output level.
MUTE / 🔇	Press to mute or unmute sound.
IR	Remote control sensor for signal reception from remote control.
AUX	Insert an external device to this jack in order to have sound output of that external device through the unit.
USB	Insert USB device to this slot for digital files playback.
MICRO SD / SD / MINI SD / 📁	Insert micro SD card to this port for digital files playback.
MIC	For voice reception under Bluetooth operation.
TFT SCREEN	Displays the current function of the unit, touch the on-screen icons for different functions. (refer to other parts of this manual for operation details).

### Note

The functions/symbols/controls shown above may or may not be available to you depending on your unit. Actual symbols and printing may vary from your unit. Refer to your exact unit for exact functions. We highly suggest the user use the touch screen display to navigate through menus. Most functions cannot be used with the tactile buttons.

## REMOTE HANDSET – GENERAL OPERATION



### BATTERY REPLACEMENT


Refer to the back of remote handset for details on how to replace the battery.

Remove this tab before using the remote handset

- Touch to shift to **BT RECORD MENU** to show Incoming calls / dialed calls/missed calls of the connected mobile phone.
- Touch to shift to **BT MUSIC MENU** for wireless music playback from the connected mobile phone.
- Touch to dial out after input the phone number or redial.
- Touch to hang up or refuse an incoming call.
- Touch to Input the phone number.
- Touch to erase an error in the input.
- Touch to shift conversation between mobile phone & stereo bluetooth.
- Touch to download the phone book / call log of the mobile phone to stereo.
- Touch to display the download phone book / call log on the unit.
- Touch to clear photo book / call record from the unit.
- Touch to shift to **BT MAIN MENU**.
- Touch to shift to previous / next track for playback.
- Touch to start / pause / resume playback.
- Touch to activate the volume control bar on screen, hold & slide to adjust the output level on volume.
- Touch repeatedly to select brightness of screen or turn off the screen. When the screen is off, touch any portion of the screen to turn it on again.
- Touch to start Bluetooth operation (when a mobile phone linked up with the unit and this icon highlighted).
- Touch to shift screen to **MAIN MENU**.

## ON SCREEN – AUXILIARY INPUT OPERATION

- In the **MAIN MENU**, touch to shift screen to **AUX INPUT MENU** to start auxiliary Input operation (when an auxiliary audio device inserted to the front auxiliary input jack of the main unit).
- In the **MAIN MENU**, Touch to start auxiliary Input operation (when an auxiliary audio/video device inserted). Touch any portion on screen to activate **AUX INPUT MENU** for operation.

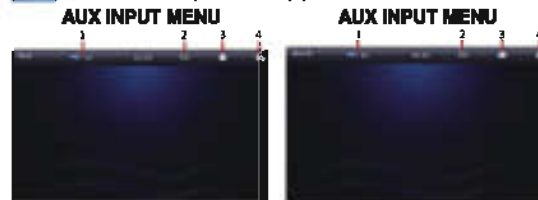

- Touch to activate the volume control bar on screen, hold & slide to adjust the output level on volume.
- Touch repeatedly to select brightness of screen or turn off the screen. When the screen is off, touch any portion of the screen to turn it on again.
- Touch to start Bluetooth operation (when a mobile phone is paired with the unit and this icon highlighted).
- Touch to shift screen to **MAIN MENU**.


6. Touch to pause or resume playback.
7. Touch to activate control menu on screen to select the duration of the photo display.
8. Touch to activate control menu to select the current photo set as a background (wallpaper) of the unit.
9. Touch to activate the volume control bar on screen, hold & slide to adjust the output level on volume.
10. Touch repeatedly to select brightness of screen or turn off the screen. When the screen is off, touch any portion of the screen to turn it on again.
11. Touch to start Bluetooth operation (when a mobile phone is paired with the unit and this icon highlighted).
12. Touch to shift screen to MAIN MENU.


## ON SCREEN – BLUETOOTH OPERATION
 
### PAIRING YOUR PHONE TO THE UNIT

To setup Bluetooth connection with the mobile phone, take your phone and follow the steps:

- Enable Bluetooth on your phone.
- Start a search for nearby devices.
- When the search is completed CAR KIT CAR BT or similar will appear. Select this device.
- If prompted, input the default passcode "0000" or "8888" on your mobile phone.
- Once completed the on-screen Bluetooth icon will be highlighted.
- Connection successful, you can now begin to use the Bluetooth function.

 In the MAIN MENU, touch to shift screen to BT MAIN MENU for Bluetooth operation (when a mobile phone has been linked up with the unit).

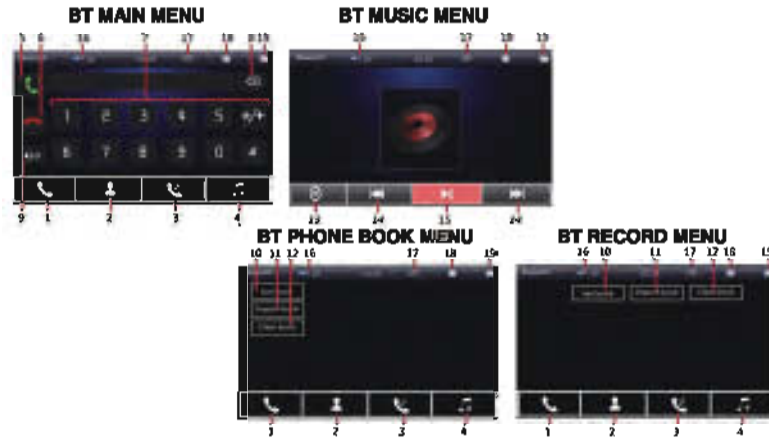

1. Touch to shift to BT MAIN MENU for dial out of phone.
2. Touch to shift to BT PHONE BOOK MENU to show the phone book of the connected mobile phone.

## SYMBOL



## OPERATION & CONTROL MODES

When the unit is turn off, press to turn on the unit.

When the unit is turn on, press & hold shortly to turn off the unit.

## MODE

Press repeatedly to select the desired mode for operation.

## MENU

Press & hold shortly then release to shift screen between MAIN MENU & current operation mode.

## VOL+ / VOL-

Press repeatedly to adjust sound output level.

## SEL

Press repeatedly to move to following control modes and when the desired mode reached, press VOL+ / VOL- repeatedly to adjust:  
 Bass Control (BAS) / Treble Control (TRE) / Balance Control (BAL) / Fader Control (FAD) / Preset EQ Control (EQ) / Loudness Control (LOUD) / Volume Control (VOL) / Brightness Control (Bright) / Contrast Control (CONTRAST) / Saturation Control (SATURATION) / Hue Control (HUE)



Press to turn on or off of sound mute control.

## EQ

Press repeatedly to select the desired preset equalization mode.

## LOUD

Press & hold shortly then release to activate loudness control. In this mode, press VOL+ / VOL- to turn on or off of loudness.

## DISP

Press to recall calendar & clock display on screen.

## BND

Press to shift current operation mode to radio mode.

In radio mode, press repeatedly to select the desired radio band for broadcasting.

## APS

### Radio Mode

Press & hold shortly to start storing the strongest signal stations into the preset memory stations. After storing the stations, the unit will start cycling through all the stations on the preset memory. Each station will be played a few seconds. The unit will stop cycling through the preset stations once the scanning is completed.

## 1-6

### Radio Mode

Press any one of the number key 1-6 to select a station that had been stored in the preset memory number key 1-6 for broadcasting.

Press & hold shortly the number key 1-6 to store the current broadcasting frequency or station into the respective preset memory key number 1-6.



### Radio Mode

Press to turn radio frequency to the upward or downward station for broadcasting. Press & hold shortly to activate manual tuning mode. In this mode, press repeatedly to fine turn radio frequency upward or downward.

### Media Playback Mode

Press repeatedly to shift track upward or downward for playback.

Press & hold to have fast forward or fast rewind mode. Release to resume normal playback. (Note: Not available for photo playback mode)

### Bluetooth Mode

Press to shift track upward or downward for playback.

## TITLE

### Media Playback Mode

Press repeatedly to shift to MUSIC playback mode / VIDEO playback mode / Photo playback mode.




In media playback & Bluetooth music mode, press to pause, resume or start playback.

- INT** In music playback mode, press to turn on or off of Intro playback of the Input device. (Note: Not available In Bluetooth music playback mode)
- RPT** In music & video playback mode, press repeatedly to select various repeat playback mode. (Note: Not available in Bluetooth music playback mode)
- RDM** In music & video playback mode, press to turn on or off of random playback of the input device. (Note: Not available in Bluetooth music playback mode)
- In music & video playback mode , press to stop playback Press ►►► to resume playback at the beginning of the last playback track. (Note: Not available in Bluetooth mode)
- AUDIO** In music & video playback mode, press repeatedly to select audio output channels. (Note: Not available in Bluetooth music playback mode)
- ☎ **Bluetooth Mode**  
Press to pick up an Incoming call; dial out after Inputting a phone number; redial last dialed number.
- ☎ **Bluetooth Mode**  
Press to hang up or refuse an Incoming call.
- CLR** **Bluetooth Mode**  
Press & hold shortly to clear the input digit .
- 0 - 9 / # / **Bluetooth Mode**  
Press directly to input the number / symbol for dial out.

Note: Depending on the input devices and media files type , certain functions may or may not be available.


### ON SCREEN – MAIN MENU OPERATION

 During unit operation and when this icon appears on screen, touch to shift screen to **MAIN MENU** for selection of various operation or setup modes.

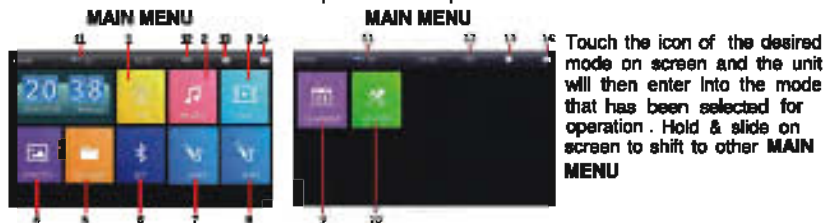

1. Touch to shift screen to **RADIO MENU** to start radio operation.
2. Touch to shift screen to **MUSIC MENU** to start music playback (when device with music files/tracks is inserted).
3. Touch to shift screen to **DVD MENU** for selection of device for video files playback (when device with video files is inserted).
4. Touch to shift screen to **PHOTO MENU** for selection of device for photo files (when device with photo files is inserted).
5. Touch to shift screen to **FOLDER MENU** for selection of device for media files/tracks (when device with media files/tracks is inserted).


### VIDEO MENU

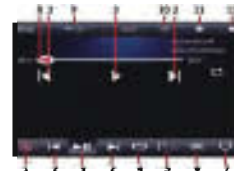

1. Touch to shift to **EXPLORER MENU** or **EXPLORER SUB-MENU**.
2. Touch to shift to previous or next track for playback.  
Touch & hold shortly to have fast forward / fast rewind playback. In this mode, press ◀ to resume normal playback.
3. Touch to pause / resume playback.
4. Touch to activate control menu on screen to select various repeat & random playback modes.
5. Touch to activate key pad screen and directly input the track number for playback.
6. Touch to activate control menu on screen to select screen display ratio.
7. Touch to turn off the screen. This mode will toggle the video output between the connected device and the stereo screen. To turn the screen back on press any portion of the screen.
8. Hold & slide to the desired time for playback, release to resume to normal playback.
9. Touch to activate the volume control bar on screen, hold & slide to adjust the output level on volume.
10. Touch repeatedly to select brightness of screen or turn off the screen. When the screen is off, touch any portion of the screen to turn it on again.
11. Touch to start Bluetooth operation (when a mobile phone is paired with the unit and this icon highlighted).
12. Touch to shift screen to **MAIN MENU**.

### PHOTO PLAYBACK

In photo playback mode, touch any portion of screen to activate **PHOTO MENU** for various settings & controls.

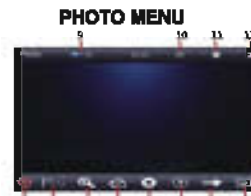

1. Touch to shift to **EXPLORER MENU** or **EXPLORER SUB-MENU**.
2. Touch to activate key pad on screen and directly input the track number for playback.
3. Touch to show control options for positioning , rotation and zoom controls for viewing photos .
4. Touch to access photo slide show and transition effects on shifting photos .

4. Touch to select music files/tracks for playback.
5. Touch to select video files for playback.
6. Touch to select photo files for playback.
7. Touch to select the photo for desired playback.
8. Touch to activate the volume control bar on screen, hold & slide to adjust the output level on volume.
9. Touch repeatedly to select brightness of screen or turn off the screen. When the screen is off, touch any portion of the screen to turn it on again.
10. Touch to start Bluetooth operation (when a mobile phone is paired with the unit and this icon highlighted).
11. Touch to shift screen to **MAIN MENU**.

### MUSIC PLAYBACK

In music playback mode, **MUSIC MENU** will appear on screen.



1. Touch to turn random playback on or off.
2. Touch to turn repeat mode on or off for the current track.
3. Touch to shift to previous track for playback. Touch & hold to have fast rewind of track, release to resume to normal playback.
4. Touch to pause / resume playback.
5. Touch to shift to next track for playback. Touch & hold to have fast forward of track, release to resume to normal playback.
6. Touch to activate number pad on screen and directly input the track number for playback.
7. Touch to shift to **EXPLORER MENU** or **EXPLORER SUB-MENU**.
8. Hold & slide to the desired time for playback, release to resume to normal playback.
9. Touch to activate the volume control bar on screen, hold & slide to adjust the output level on volume.
10. Touch repeatedly to select brightness of screen or turn off the screen. When the screen is off, touch any portion of the screen to turn it on again.
11. Touch to start Bluetooth operation (when a mobile phone is paired with the unit and this icon highlighted).
12. Touch to shift screen to **MAIN MENU**.


### VIDEO PLAYBACK

In video playback mode, touch the upper and/or lower portion of screen to activate **VIDEO MENU** for various settings & controls.

6. Touch to shift screen to **BT MAIN MENU** for Bluetooth operation (when a mobile phone is paired with the unit).
7. Touch to shift screen to **AUX INPUT MENU** to start auxiliary input operation (when an auxiliary audio device inserted to the front auxiliary input jack of the main unit).
8. Touch to start auxiliary input operation (when an auxiliary audio / video device is inserted)
9. Touch to shift screen to **CALENDAR MENU** for calendar & clock setup.
10. Touch to shift screen to **SETTING MENU** for various setting of the unit.
11. Touch to activate the volume control bar on screen, hold & slide to adjust the output level of volume.
12. Touch repeatedly to select brightness of screen or turn off the screen. When the screen is off, touch any portion of the screen to turn it on again.
13. Touch to start Bluetooth operation (when a mobile phone is paired with the unit and this icon highlighted).

### ON SCREEN – SETUP OPERATIOPN

In the **MAIN MENU**, touch to shift screen to **SETTING MENU** for various system settings of the unit.

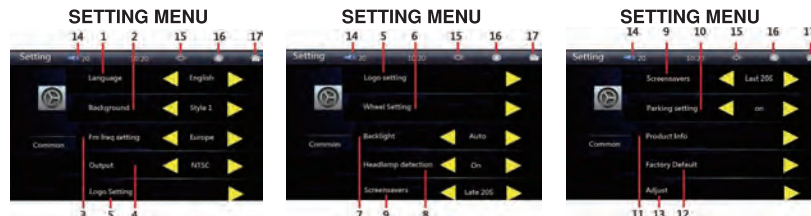


Hold & slide up/down on screen to show **SETTING MENU** for various settings of the unit.

1. Touch to enter system language setup. In this mode, touch repeatedly the arrow to select the desired system language on screen.
2. Touch to enter background setup. In this mode, touch repeatedly the arrow to select the background theme of the unit.
3. Touch to enter radio frequency setup. In this mode, touch repeatedly the arrow to select the radio frequency range that best suits your location.
4. Touch to enter video system setup. In this mode, touch repeatedly the arrow to switch between PAL/NTSC settings.
5. Touch to enter boot up logo setup. In this mode, touch the arrow to activate the on screen keyboard input the password 1234 and LOGO INTERFACE appears on screen. Select the desired logo for boot up screen.
6. Touch to enter steering wheel control setup. In this mode, touch the arrow to activate STEERING WHEEL CONTROL MENU for setting up of steering wheel control. The steering wheel control wires – grey & green as well as the ground wire should be connected.
7. Touch to enter backlight illumination setup. In this mode, touch repeatedly the arrow to select the illumination color of the unit. When "AUTO" is selected, the illumination colour of the unit will be shifted automatically.

8. Touch to enter headlamp detection setup. In this mode, touch the arrow to turn on or off of headlamp detection of the car (when the orange is wire connected with the on/off of car headlamp).  
ON mode: when the headlamp of the car turned on, brightness of screen will be dimmed.  
OFF mode: when the headlamp of the car is turned on, brightness of screen will not be affected
9. Touch to enter screensaver setup. In this mode, touch the arrow repeatedly to select the desired time to have the screen saver on during operation.
10. Touch to enter video display setup. In this mode, touch the arrow to enable or disable video playback while driving (when the brake – brown wire has not been connected).  
ON mode: Video playback is prohibited  
OFF mode: Video playback is allowed
11. Touch to enter model information display. In this mode, touch the arrow and unit information will be displayed on screen.
12. Touch to enter reset setup. In this mode, touch the arrow to reset the unit to its factory settings.
13. Touch to enter screen calibration setup. In this mode, touch the arrow and CALIBRATION INTERFACE will appear on screen. Follow the 「+」 mark, touch to complete the calibration.
14. Touch to activate the volume control bar on screen, hold & slide to adjust the output level of volume.
15. Touch repeatedly to select brightness of screen or turn off the screen. When the screen is off, touch any portion of the screen to turn it on again.
16. Touch to start Bluetooth operation (when a mobile phone is paired with the unit and this icon highlighted).
17. Touch to shift screen to **MAIN MENU**.

## ON SCREEN – RADIO OPERATION

 In the **MAIN MENU**, touch to shift screen to **RADIO MENU** for radio function.




1. Touch repeatedly to select radio the band for broadcasting.
2. Touch to start storing the strongest signal stations into the preset memory stations. After storing the stations, the unit starts scanning all the preset stations on memory and stop for a few seconds for broadcast preview Intro broadcasting will stop after cycle scanning is completed.
3. Touch to start scanning all the preset stations on memory and stop for a few seconds for broadcasting. Intro broadcasting will stop after one cycle scanning completed or touch again to stop the intro broadcasting.

4. Touch to tune the radio frequency to upward or downward station for broadcasting. Touch & hold shortly to activate manual tuning mode. In this mode, touch repeatedly to fine tune radio frequency upward or downward.
5. Hold & slide to select the desired frequency for broadcasting.
6. Touch the desired preset station to start broadcasting. Touch & hold shortly to store the current broadcasting station (frequency) into that preset.
7. Touch to save the current broadcasting station (frequency) into the highlighted preset station.
8. Touch to select local (LOC) setting for reception of strong signal stations and a distant (DX) setting for reception of non - local stations.
9. Touch to select stereo (STEREO) or mono (MONO) mode In FM radio band. When stereo signal is received, ST indicator will be highlighted on screen.
10. Touch repeatedly to select desired preset equalization mode.
11. Touch to activate the volume control bar on screen, hold & slide to adjust the output level on volume.
12. Touch repeatedly to select brightness of screen or turn off the screen. When the screen is off, touch any portion of the screen to turn it on again
13. Touch to start Bluetooth operation (when a mobile phone is paired with the unit and this icon highlighted).
14. Touch to shift screen to **MAIN MENU**.
15. Touch to shift screen to **MAIN MENU**.

## ON SCREEN – MEDIA PLAYBACK OPERATION

-  In the **MAIN MENU**, touch to shift screen to **FOLDER MENU** for selection of device for media files/tracks playback (when device with media files /tracks are inserted).
-  In the **MAIN MENU**, touch to shift screen to **MUSIC MENU** to start music playback (when device with music files/tracks is inserted).
-  In the **MAIN MENU**, touch to shift screen to **DVD MENU** for selection of device for video files playback (when device with video files/tracks are inserted).
-  In the **MAIN MENU**, touch to shift screen to **PHOTO MENU** for selection of device for photo files /tracks playback (when device with photo files/tracks is inserted).

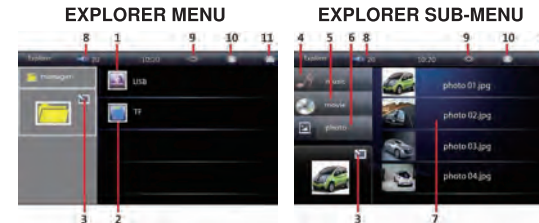

1. Touch to select USB device for playback (available when USB device is inserted).
2. Touch to select SD card for playback (available when SD card is inserted).
3. Touch to shift screen to previous menu or shift back to **MAIN MENU**



# FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment

generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.