 


► Package Contents

SC200 / Pouch / Remote Control / 4x AAA Batteries / User Manual

 
Positioning

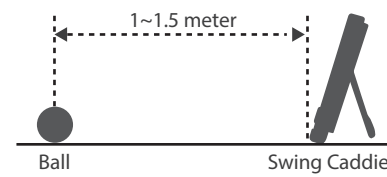

Positioning Swing Caddie :
1~1.5 meters (40~60 inches)
directly behind the ball

Range : 30~300 meters / yards

Remote Control

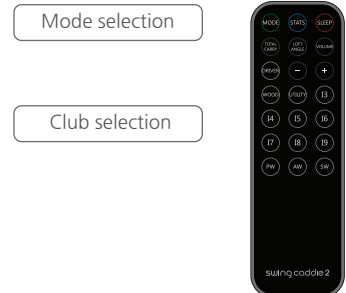


MODE : Select the desired mode in 3 modes (Practice > Target > Approach)

STATS : Displays your average stats for each club (STATS > Club selection)

SLEEP : Power saving mode (Saves energy and prolongs battery life during breaks) Press any button on the device or remote control to out of sleep mode

Club selection : Press the button with club number

 Tip

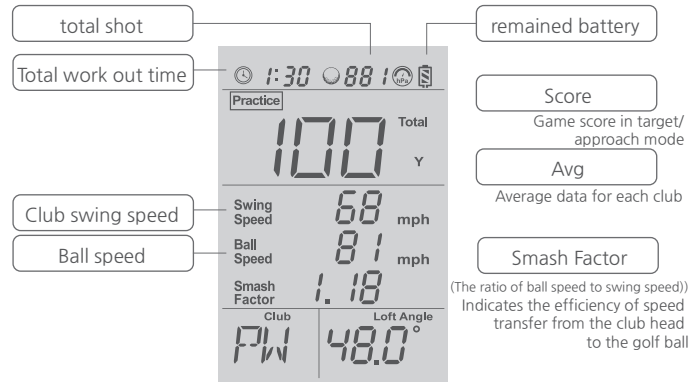

► Basic Usage

Unit Selection: Press and hold the - button on the Swing Caddie. YARD ↔ METER MPH ↔ KM/H
Device only : unit selection is only available on the device, not remote control.

Mode Selection: Press the M (mode) button on the Swing Caddie or on the remote control. PRACTICE → RANDOM → TARGET

 
Club Selection: Press the C (club/stats) button on the Swing Caddie or select your desired club on the remote control.

PRACTICE RANDOM TARGET
W1 → W3 → W4 → W5 → W6 → W7 → U3 → U4 → U5 → U6 → U7 → I4 → I5 → I6 → I7 → I8 → I9 → PW → AW → SW

* Select club directly using Remote control

► Practice Mode

Displays immediate feedback on the preceding shot.

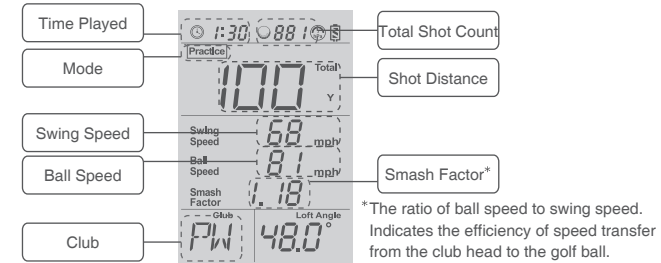


Ball Speed / Smash Factor Selection: Press and hold the + button or press the BALL/SMASH button on the remote control.

► Target Mode

Before the shot: Displays your target distance.

 After the shot: Displays your shot (carry) distance.

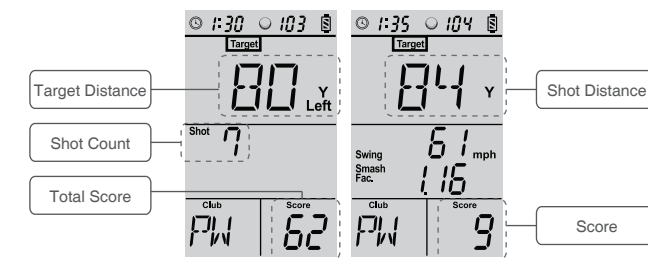

Use the + and - buttons to set your target distance. (range: 40~200 meters/yards) (increment: 5 meters/yards)

In Target Mode, Swing Caddie scores each shot for accuracy.

*The pre-shot display shows your total score for the round. (perfect score: 100)

*The post-shot display shows your score for the preceding shot. (perfect score: 10)

*Tip: A bonus point (+1) will be awarded for matching the exact target distance!

*One round in Target Mode is 10 shots.

< Approach Mode : >

Before the shot: Displays a randomly generated target distance. (range: 40~100 meters/yards)

After the shot: Displays your shot (carry or total) distance.

Use the + or - button to generate a new target distance

 
In Random Mode, Swing Caddie scores each shot for accuracy

* The pre-shot display shows your total score for the round. (perfect score: 100)

* The post-shot display shows your score for the preceding shot. (perfect score: 10)

* Tip: A bonus point (+1) will be awarded for matching the exact target distance!

* One round in Random Mode is 10 shots.

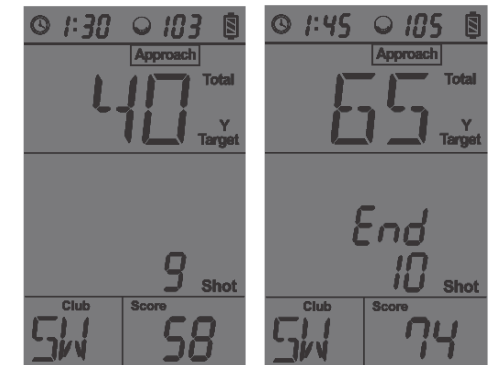

< Stats >

- Displays your average stats for each club.

(shot distance, swing speed, ball speed, smash factor) 클럽별 평균 샷 정보 보기

-Press and hold the C (CLUB/STATS) button or press the STATS button on the remote control to enter Stats Mode.

-Use the + or - button to switch between average stats for the last

100 shots (ALL) and average stats for the day (DAY).

-Press and hold the + button or press the BALL/SMASH button on the

remote control. to switch between ball speed and smash factor

-Press and hold the C (CLUB/STATS) button to reset stats.

Display

Picture 1 : Accumulated average stats


Club(I4) avg. carry distance (182yards) avg. swing speed (85mph) avg.

ball speed (118mph) Avg. smash factor 1.39 max carry distance (210 yards)

Picture 2 : Avg. in today

Club(I4) avg. carry distance (170 yards) avg. swing speed (80mph) avg.

 ball speed (104mph) Avg. smash factor 1.30 min carry distance (140 yards)

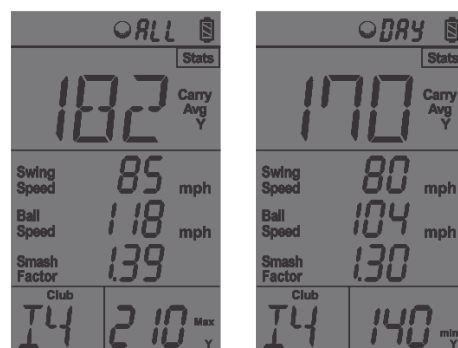

► Notes

- Swing Caddie measures carry distance and does not account for run.
- The range of the remote control may be reduced in direct sunlight.
- Data for practice swings are not stored or displayed.
- Data for aberrant shots are not stored or displayed.
- Data for shots that fly to the far left or right may not be accurate.
- Swing Caddie is recommended for indoor use.
- Caution: Inserting the battery reversely may result in explosion.

► Specification

- Sensor : Doppler radar sensor
- Frequency : K band 24 GHz
- Power : 4ea *1.5 V-AAA Battery
- Battery : About 25 hours
- Dimension : 77(W) X 150(H) X 25(T) mm
- Weight : Approx, 206 g (including battery)
- Operating temperature : 0°C ~ 50°C

(Caution) The user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure set forth for an uncontrolled environment. This equipment should be installed and operated with minimum 20 cm between the radiator and your body. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter unless authorized to do so by the FCC.

Warranty

One Year Limited Warranty

Voice Caddie warrants this hardware product against defects in materials and workmanship for a period of one year from the date of original retail purchase. If a defect exists, at its option Voice Caddie will (1) repair the product at no charge, (2) exchange the product with a product that is new or like-new and is at least functionally equivalent to the original product, or (3) refund the purchase price of the product. Voice Caddie shall have no obligation to repair, replace or refund until the customer returns the defective product to Voice Caddie. This warranty does not apply: (1) to damage caused by accident, abuse, misuse, misapplication, or non-Voice Caddie products; (2) to damage caused by service performed by anyone who is not a Voice Caddie Authorized Service Provider; or (3) to a product or part that has been modified without the written permission of Voice Caddie.

For more information on Voice Caddie's warranty and return policy, please visit www.voicecaddie.com

Product Name	Swing Caddie	Warranty Period	
Model Name	SC200	1 year after the date of purchase (Excludes battery and other components)	
Serial Number			
Purchase Date			
Purchaser's Address			
Full Name		Telephone	

FCC CERTIFICATION

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Customer Center

Toll free : +1-888-939-3978

Email: support@voicecaddie.com

Website: www.voicecaddie.com

"MAKE GOLF Practice FUN!"

Swing Caddie User Manual



- Distance Voice Output
- Loft angle selectable
- Instant feedback via LCD display
- Practice swing measurement.
- Distance adjustment by atmospheric pressure
- 3 Modes : Practice, Target, Approach.
- Daily and overall stats for each club
- Shot count and time display
- Simultaneous display

- Carry Distance
- Swing Speed
- Ball Speed
- Smash Factor