

T6

GOLF MODE Quick Guide Book

It is available to check the details for the present product at the website of VOICECADDIE.


www.voicecaddie.co.kr



How to Set Time

- Automatic Setting (Available at outdoor only)

Tap SETTING MENU on MENU screen.

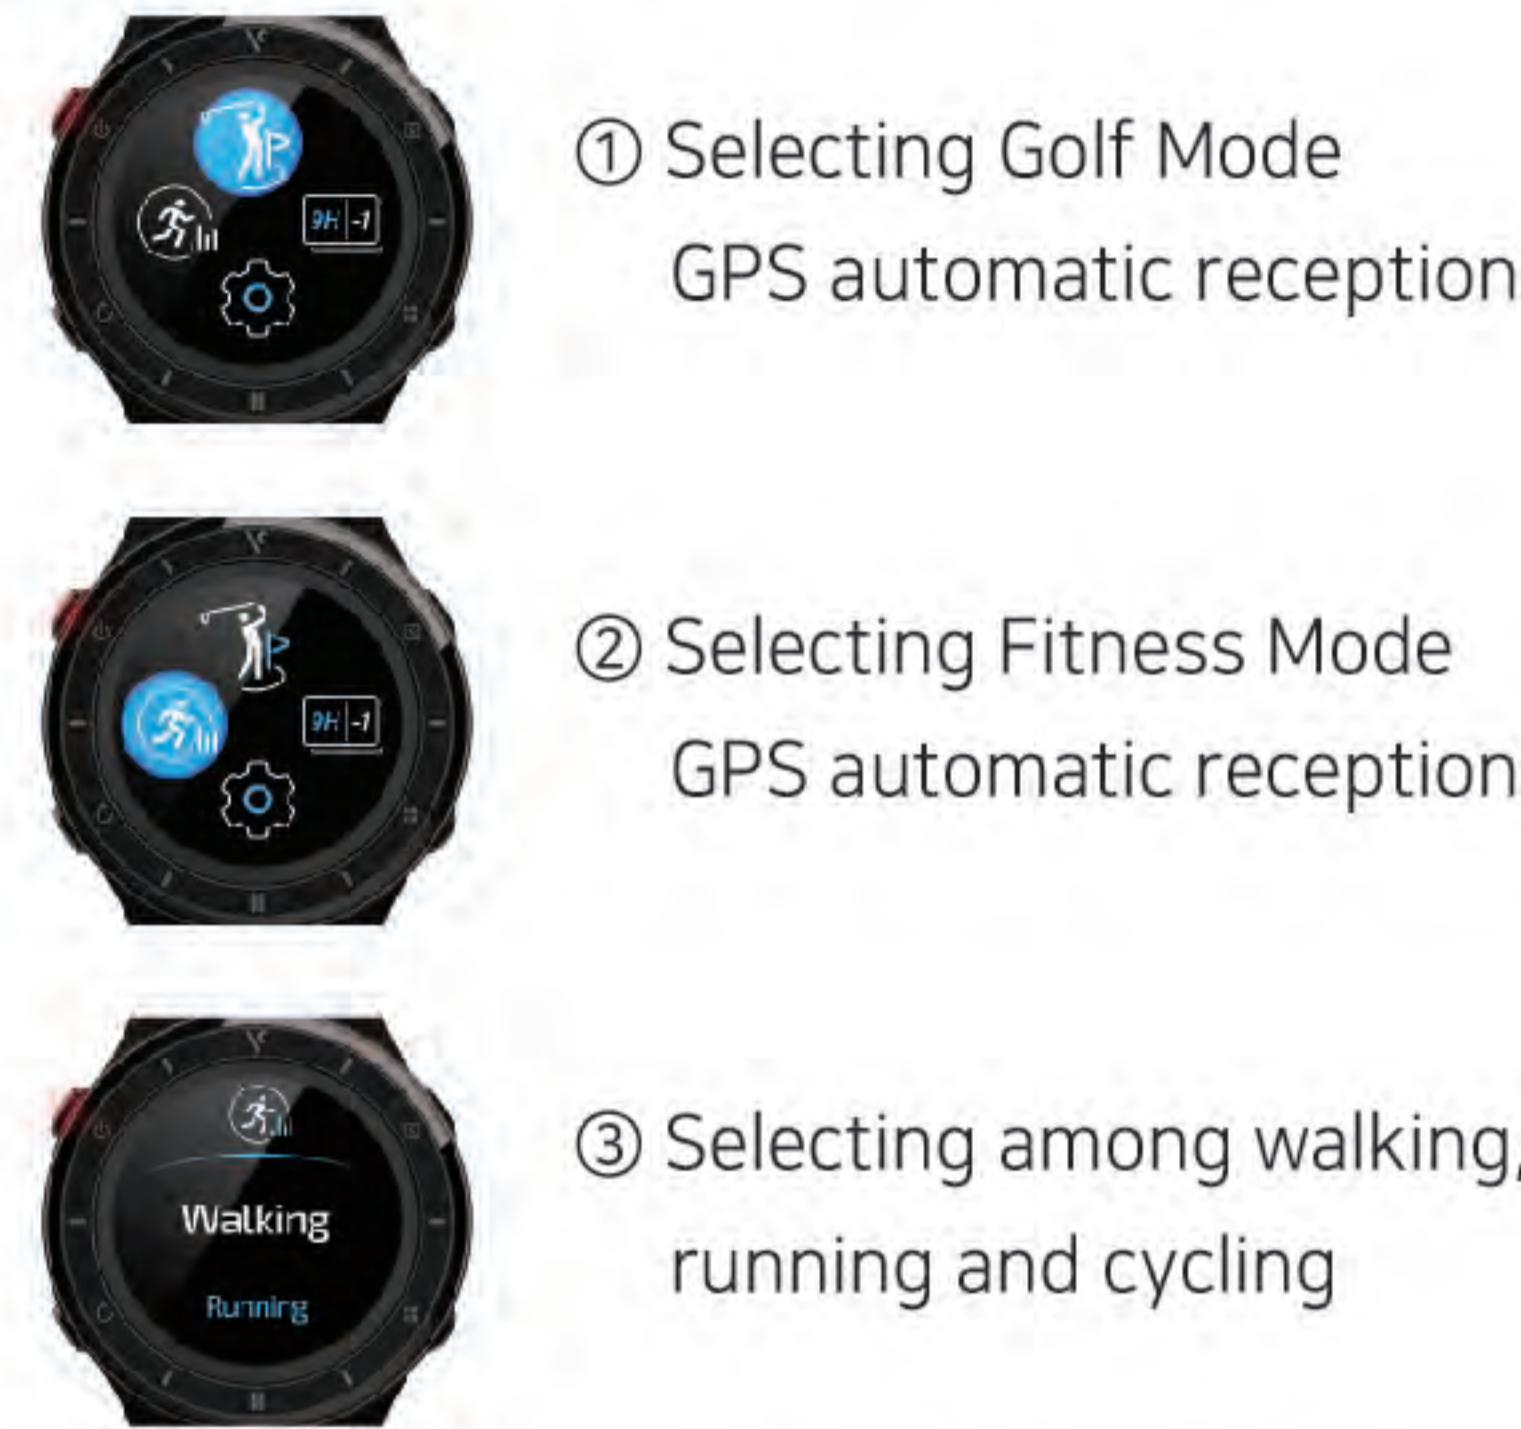

* Automatic application of summer time at automatic setting

How to Set Time

- Manual Setting (Available at Indoor/Outdoor)

Tap SETTING MENU on MENU screen



How to Set Time

- Manual Setting (Available at indoor/outdoor)

Tap SETTING MENU on MENU screen



Functions of Major Buttons

- Power ON/OFF: Press the power button about long 3 seconds

► FULL TOUCH Screen



Easy Mode

Hot to set easy mode:

Tap 'SETTING' on MENU > Tap 'GOLF SETTING' > Tap 'EASY MODE' > Tap 'USE'



* Setting for Easy Mode at rounding, expand to show numbers of image view

How to enter GOLF MODE

Slide from a CLOCK screen to left direction and tap an icon of 'GOLF MODE' on the MENU screen



Golf Range and Hole Recognition

Touching an icon 'GOLF MODE' to recognize the hole automatically after the GPS transmission

► FULL TOUCH Screen



COURSE VIEW, GREEN VIEW, YARDAGE VIEW SCREEN GUIDE

- Slide from 'COURSE VIEW' toward the left to enter 'GREEN VIEW'
- Slide from 'COURSE VIEW' toward the right to enter 'YARDAGE VIEW'



How to Use COURSE VIEW (Enlarge screen)

Enlarging COURSE: Press ⊕ to enlarge COURSE
Returning to previous screen: Press ⊖ to return



How to use USER IP

Check the remaining distance with tap from target location and pin



Tap target location

Change target location

How to Use Pin Reload

Tap the screen on the desired pin location to change the location



Tap the location to change

Change the pin location

How to Use SMART GREEN VIEW

Automatic setting of green target direction by the location of each player



PIN POINTING VIEW

- * Display the pin direction of selected GREEN
- * Show popup for 10 seconds when tapping the icon of Pin Pointing
- * Guide the remaining distance to the pin



Tapping Pin Pointing Icon

Pin Pointing Popup

BUNKER/HAZARD

Guide the distance to the front and back of BUNKER/HAZARD

Tap corresponding BUNKER or HAZARD

*It is more convenient to tap on the enlarged screen



Changed when tapping after 10 seconds or other range or clicking 'BACK' button

* Show the distance to the front and back of BUNKER or HAZARD

- Caution -

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

How to connect APP Bluetooth

▶ 'SETTING' on Menu screen



① Tap up and down on CLOCK screen



② Activate Tap Bluetooth of 'CONNECTING'



③ Check T6 original number

▶ Please search and install My Voice Caddie at PLAY STORE

[Function of Tap Provision] Quick GPS/Download the information and FW of latest golf ranges/Share the score statistics/Manage round tracking and history/Notify the reception through phone or text message

* Screen contents at the reception through phone, text and SNS/Tel: Sender number + Reception Notice/Text, SNS: Reception notice

How to Reset



Press two buttons at the same time for RESET to restart



The small hole on the side of the clock is not a RESET button. There is a risk of breakdown if pressing with sharp object. Please do not press.

- Precautions -

- The time to take until finding the satellite at Golf Mode is subject to change by the reception environment. (weather, topography)
- The use hours of battery can be decreased for rounding at the areas of poor satellite reception and cold weather. To increase the use hours of the product, it is recommended to turn on the power outdoor.
- If the product is left at the place of high humidity such as the vehicle with high temperature or golf bag in summer time, it may cause the breakdown.

- Warranty -

1. The present product has been manufactured through the strict quality management and inspection process. We will compensate the damage for consumers according to the compensation regulation on consumer damage in the public notice of the Ministry of Economy and Finance.
2. You may receive a free of charge service in case of a breakdown occurred in normal use within the warranty period.
3. It is available to repair the product with charge if any abnormality occurs in the product out of negligence by a user even within the warranty period for free repair.
4. Please present the said warranty and proof of purchase (receipt) at the request of A/S and damage compensation.

- Warranty -

Product Name	Voice Caddie	Warranty Period	
Model Name	T6	One year after the product purchase(Except, 6 months for battery and other components)	
Serial Number		Name	
Date of Sale		TEL	
Purchaser's Address			

Battery Use Period	· Average (Watch) Use Period: 9 to 10 days · For Golf Mode: 10 hours
--------------------	---

Responsible Party - U.S. Contact Information
Ucomm Technology Inc.

Street Address : 13951 Valley View Ave.

City, State : La Mirada, CA

Postal Code : 90638

United States : United States

Telephone number : 562-926-3978

Internet Contact Information : swoo@voicecaddie.com



- Caution -

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.