

T9

Quick Guide Book



YOUTUBE

Go to Voice Caddie YouTube
Check the video on how to use T9

Detailed description of this product is
available on the website of Voice Caddie.

www.voicecaddie.com

 **VOICE CADDIE**

Button Functions


T9 Watch



Power button

Long press:
Watch Mode (power ON/OFF)
Golf Mode (end the mode)

Short press:
backlight ON

 The small hole on the top of the watch is not a reset button.
How to reset: press and hold for 10 seconds to restart.

Screen Description

Shot & putt indicator



Shot indicator

- Recognizes and displays automatic/manual shots in a hole during a round

Putt indicator

- Recognizes and displays automatic/manual putts in a hole during a round

e.g., tee shot



e.g., 7 shots and 5 putts



Screen Description

How to change watch face



- Touch and hold on the watch face to enter the watch face setting screen
- Change watch face with touch slide to left and right
- Touch the dot at the top of the screen to change color
- When setting is complete, touch the V at the bottom of the screen

Time / Date Settings

Automatic setting (outdoor only)



- ▶ When Golf Mode is selected Time is automatically set after GPS signal is received

Manual setting (indoor/outdoor possible)

- ▶ On the Menu screen, touch  > touch 'Time'



Touch 'Current Time' in the list to enter, then swipe up and down to set the time

- ▶ On the Menu screen, touch  > touch 'Time'



Touch 'Date' in the list to enter, then swipe up and down to set the date




V.AI 3.0

What is V.AI™?

An AI-based golf service that automatically provides necessary information by detecting the golfer's location and situation so that the golfer can focus on his or her swing during a round.

e.g., teeing area, entering fairway after tee shot, entering green attack area, on green

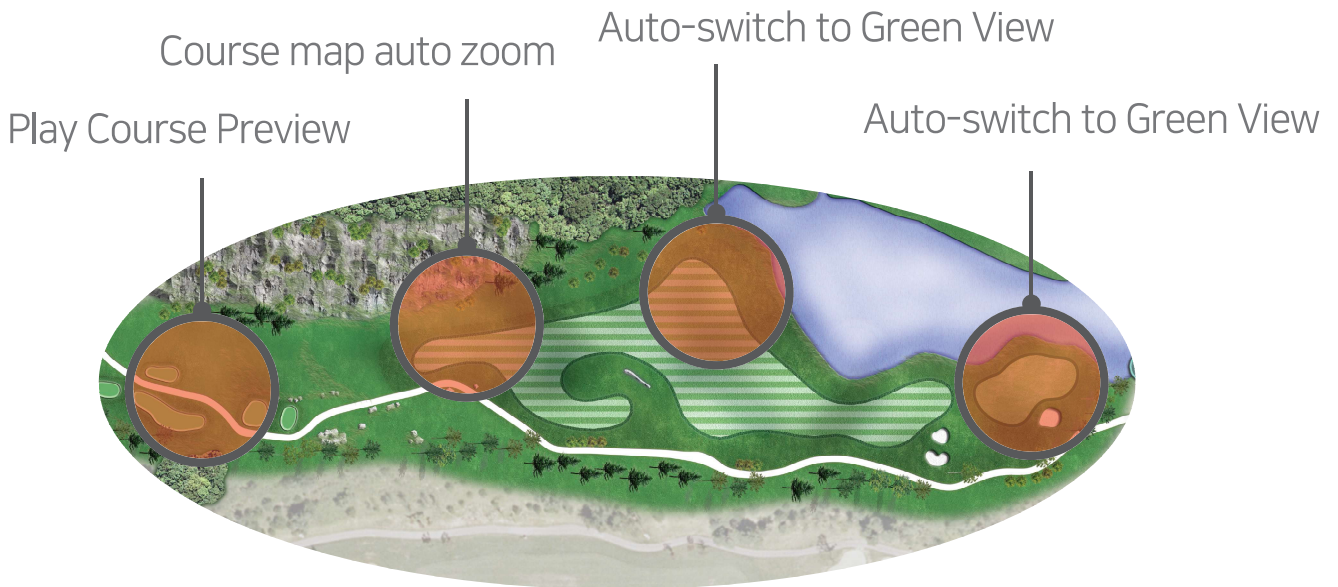

Shot Feedback View - detects a shot and displays distance and tempo

Shot & Putt Indicator - automatically detects and displays shots & putts

※ How to deactivate V. AI

Menu > Settings > Golf Setting > V. AI > OFF


Enter Golf Mode

- When the 'Golf Mode' icon is touched, it received GPS signal before it automatically detects a hole




Switch to the 'Course View, Green View, Yardage View' screen

- When running Golf Mode for the first time, swipe the 'Course View' screen to enter Green View, Putt View, and Yardage View

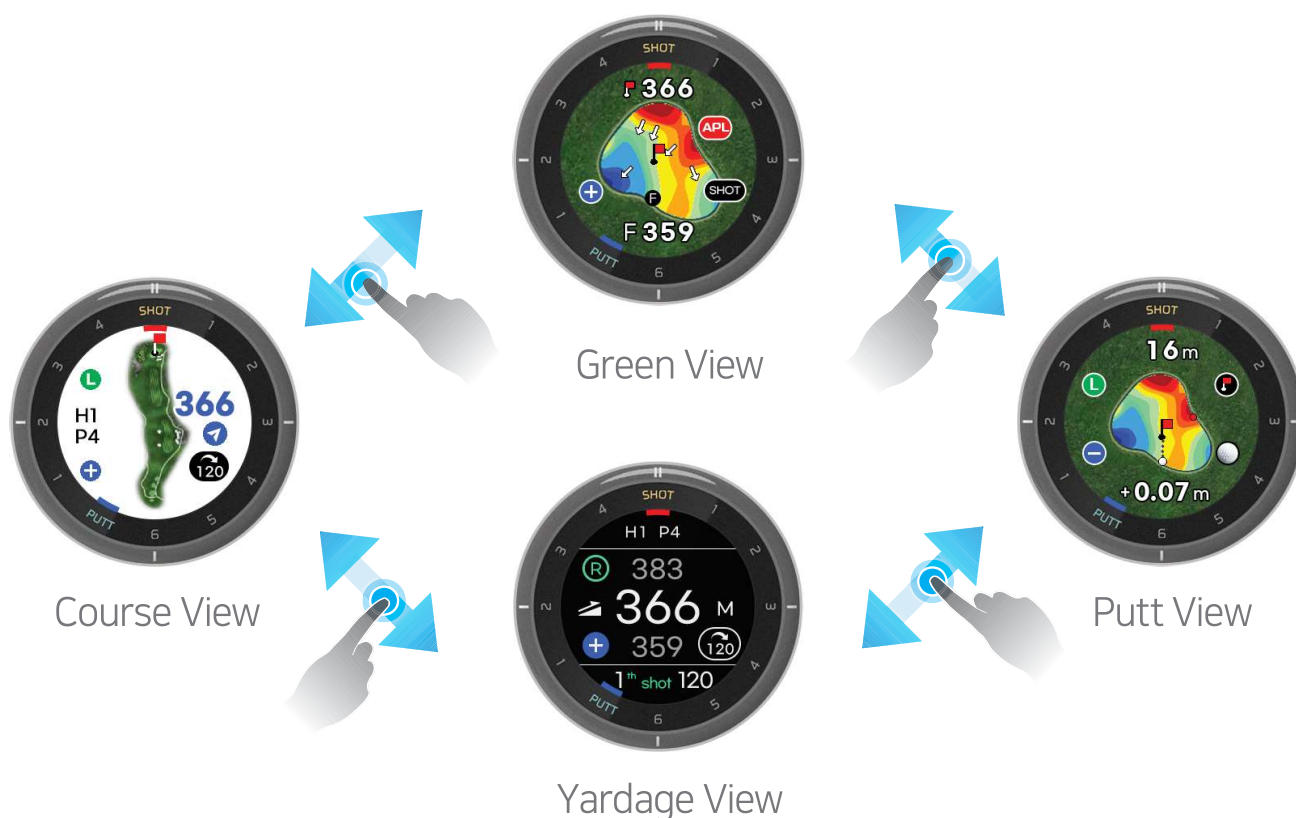


Course View, Green View, Putt View images may vary with regions and golf course situations.

※ 'Yardage View' displays key data in large numbers when the + button icon is tapped

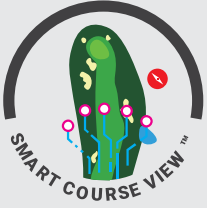


Course Preview

- If you touch the 'Course Preview' icon  at the teeing area, the device will play 'Course Preview'.
- It shows the distance to a bunker close to where the tee shot lands

Once the playback is finished, the screen returns to Golf Mode

* If the screen is touched during playback, it immediately returns to Golf Mode

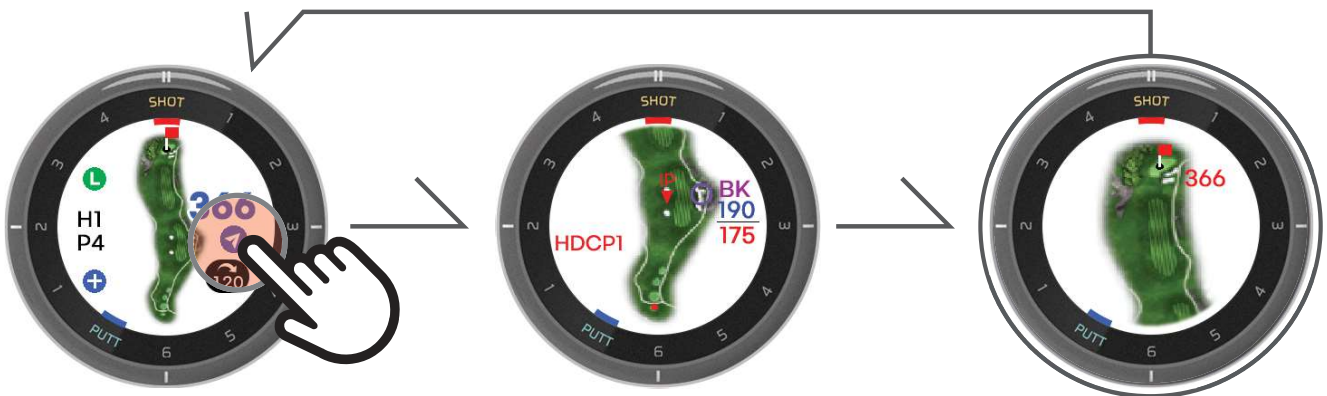

HDCP / IP / Driver Distance
It shows information on
bunkers and hazards

It shows distance
to the pin



Green View

Real Green Undulation

It indicates in 11 stages, using the actually measured green undulation data

- Green Zoom (2-stage)
When the **+** icon is touched, the green is expanded ('Pin Reload' is supported)



Real Green Undulation

Touch the icon ↘

↙ Touch the icon



Green Zoom


Green Zoom (2-stage)

※ Touch the icon once: Stage 1, twice: Stage 2



Active Green View

- The shape of the green automatically rotates as the golfer's location changes

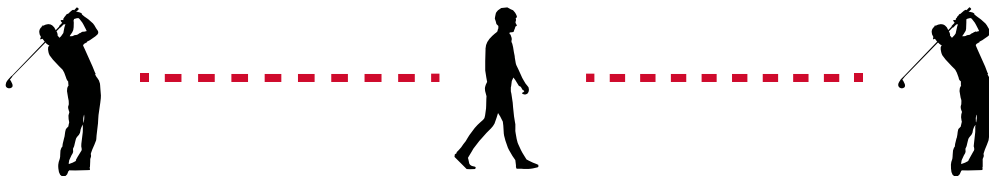



Putt View


- It shows the height and distance from the ball to the pin



Touch the
desired spot



- **Default use** : When a spot on the green is touched, the ball moves and the distance to the pin is provided
- **When APL is active**: When you move to where the ball lies and touches the ball icon (●), information is provided
- **When APL is not active**:
 - ① Move to where the ball lies and touches the ball icon (●).
 - ② Return to where the pin lies and touch the pin icon (🚩), and height and distance are provided.
- Zoom in or out with the +/- tap. You can toggle between screens by dragging on the expanded screen

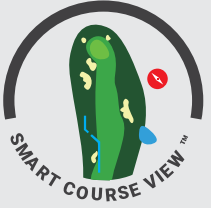

Indication of Bunkers / Hazards

- It indicates the distance to the front or rear of bunkers / hazards

Touch a specific bunker or hazard



When touching a bunker/hazard



It returns to the previous screen in 5 seconds



* Touch on the enlarged screen is easier

Shot Feedback View

- Shot Tempo: automatically provides the swing tempo of the shot immediately before a shot just taken




Automatically provides backswing, downswing, and tempo by detecting the golfer's swing

- Golf ball distance: When the icon is touched, the distance and tempo of the previous shot are shown.



Touch the **SHOT** icon or the distance number icon to see distance and shot tempo

※ You can measure the distance manually by touching the  icon


Tempo Practice Mode

What is tempo practice mode?

A mode that provides practice in timing the tempo by setting a target tempo, so that you can practice for a consistent swing.

- On the menu screen, touch  >
Choose from among 'Full Swing, Approach, and Putt'

Menu screen

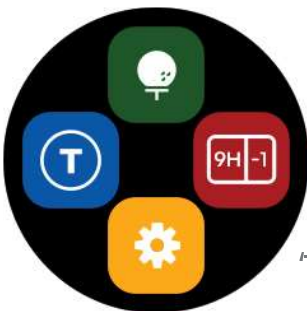

Tempo Mode items



Late practice average



Touch
'Tempo Mode'

Select an
'item'

Touch the
'Start' button

Summary of
current status



Displays tempo and
number of swings
after each swing



Tempo Mode



Slide from
right to left

When taking
a swing

Tempo Practice Mode

2 ways to set target tempo

- Amidst the Tempo Mode items, touch 'Target Tempo' > Choose from among 'Full Swing, Approach, and Putt'

Tempo Mode items



Target Tempo items



Touch
'Target Tempo'

Set Target Tempo



- Touch and hold the center of the screen in Tempo Mode

Tempo Mode screen



Long-press
the screen

Set Target Tempo



- ※ When setting the Target Tempo, the target speed is displayed as a color circle.
 - Fast (Red), Accurate (Blue), Slow (Yellow)



APL – Pin Here and Now

APL (auto pin location)?

The function that automatically updates real-time pin positions in T9

※ However, syncing with the 'My Voice Caddie' app is required (see the website for a list of supported golf courses)

* All smartphones are supported, regardless of their carrier.

- APL alert

Real-time pin location notification pop-up is provided (once) only at the initial reception



How to Download My Voice Caddie



QR code to go to
My Voice Caddie app download



Android



ios

1. Search "My Voice Caddie" in the app search screen
2. Download and execute the app
3. When executing the app, log in for the first time or sign up for membership
4. Touch **Connect** on the home screen
5. After activating Bluetooth on the device, enter the security number displayed on the device into the app to connect

App Connection

Bluetooth Activation



① Swipe down the watch face



② Touch 'Connect' to activate Bluetooth



③ Check the identification number of T9




④ After checking the security number displayed on the device when connecting to the app, enter it into the app

* An interworked app brings features including phone, text message, Social media reception, Tempo Practice Mode, APL (Pin here & now), quick GPS, score management, updated golf course information, and firmware download

How to Connect APL in the App

Simple Mode (only for Android)

- Touch 'Start APL' on the login screen
It can be used right away;
login not necessary

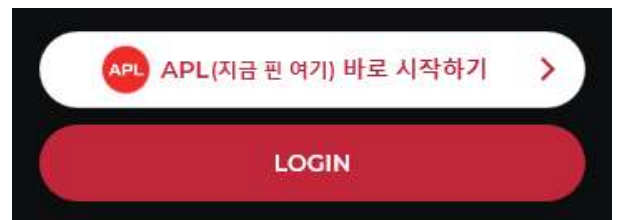

※ Bluetooth, location authorization, and allow service notification need to be set up

How to Connect after Logging in (for Android and iOS)

- ① Touch the watch image or 'MY VC' (🕒) at the bottom of the main screen
- ② Execute 'APL Golf Mode' from the menu



※ APL use requires the authorization of service notification and consent to location service.



- Product Specifications -

Product	Voice Caddie T9
Key Features	V-algorithm TM, APL, Course Preview, Real green Undulation, 2-Step Green Zoom, Putt View, Tempo Practice Mode, My Voice Caddie app
Size/Weight	45x45x14.7mm / 30.8g
Supported Courses	all golf courses around the world (except some / about 800 courses in Korea)
Supported Languages	Korean, English
Margin of Error	±3m
Included in the Package	main unit, USB cable, User's Manual

- Precautions -

- The time it takes to find a satellite in Golf Mode may vary depending on the reception (as affected by weather and terrain).
Please turn on Golf Mode outdoors (Start Square, etc.).
- The battery life may be shortened when used in areas with poor satellite reception or in cold weather.
- Leaving the device in a high-temperature place such as a vehicle in summer or a high-humidity place such as a golf bag may cause malfunction.
- If you take a shower or enter the bathroom while wearing the watch, it may cause malfunction.

Caution

This equipment has been tested and found to comply with The limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Caution

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - 1) This device may not cause harmful interference, and
 - 2) This device must accept any interference received, including interference that may cause undesired operation.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- The device has been evaluated to meet general RF exposure requirement.
- The device can be used in portable exposure condition without restriction
 - * Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

- Warranty -

1. This product has been produced through strict quality control and thorough inspection. In accordance with the Consumer Damage Compensation Regulations announced by the Ministry of Finance and Economy, we will properly compensate consumers for damage.
2. You can receive free service in case of a malfunction that occurs under normal use within the warranty period.
3. Even if it is within the warranty period that provides free repairs, paid repairs are possible if a problem occurs due to the user's negligence.
4. When requesting after-sales service and damage compensation, be sure to present this warranty and proof of purchase (receipt).

- Warranty -

Product	VOICE CADDIE T9
Serial number	
Date of purchase	
Vendor	
Vendor phone	
Buyer's name and phone	
Warranty	1 year after purchase (however, 6 months for battery and other components)
Replacement and refund period	within 14 days of product purchase in unused condition

Battery Duration	<ul style="list-style-type: none">· Average duration in Watch Mode: about 9 to 10 days· Average duration in Golf Mode: about 27 holes of play
-------------------------	--

Battery life may vary depending on usage and environmental factors.



Call : 1577-2862

A S : 5F, Sunya Building, 145, Nonhyeon-ro, Seocho-gu, Seoul