

Quick Start Guide

Introduction

Thank you for your purchase and use of our products.

Please read carefully all the attached data prior to usage. Functions, product description and method of use etc will be introduced in this guide, which can help you to operate it easily.

The company will not take any responsibility for direct or indirect personal data loss or damage caused by misoperation of software and hardware, maintenance and repair, battery replacement and other accidents.

Besides, the company will not take any responsibility for any accident, loss and third-party claims arising from the use of this product since misunderstanding of users is uncontrollable during usage.

Information in this guide is subject to actual product, which is subject to change without prior notice.

Information in this guide is copyrighted and prohibitive to print or copy in any way unless getting prior permission from the company.

The company reserves the right of final explanation of this guide, documents of three guarantees and relevant information.

(Note: There may be some omission in this guide and sincerely welcome your criticism and correction. Any problem found during your usage, please timely contact with distributor to solve.)

Thank you again for choosing our products. By the way, our other products are waiting for your interest.

Attentions

Please keep the tablet away from high magnetic fields to avoid damage.

Please avoid fall, friction with hard objects and collision to prevent scratches, battery detached, data loss and hardware damaged.

Please don't expose the tablet to rainy or damp environment. Tablet got damp or water inside might result in malfunction and irreversible damage.

Never deploy any chemical or detergent to clean up the tablet to prevent erosion of the surface and paintwork.

Please choose an appropriate volume and use it within a reasonable time to prevent hearing harm or even damage.

Please avoid disconnect or shutdown during software upgrading, uploading and downloading to prevent data loss or APP error.

Over-voltage, power cable strain, bending or squeezing by heavy objects is not allowed to avoid overheating or fire disaster.

Wet hand is not allowed to touch power to avoid shock.

Some videos, music, photos are born copyrighted, unauthorized play will infringed copyright.

Switch off wireless device in any places where forbid using it or may bring disturbance or danger, which means wireless devices are subject to interference resulting in poor performance.

Please observe any related rules: Consult the airline first and use with caution in flight if you have to use the device for wireless device may interfere with airplane.

Please don't use the device in gas station or nearby combustibles and chemicals.

Please observe any related rules: Never use the device in explosive operation environment.

Only qualified personnel are permitted to install or repair the device.

Please use original accessory and battery and avoid using incompatible products.

Please keep the device dry as it is not waterproof.

 
PPlease backup or keep a written record of the essential information in MID to avoid data loss.

Before connecting to other device, please read carefully the guide for safety and do not connect incompatible products.

Please charge for no more than 24 hours, After 3 to 5 times charging and discharging circulation, the battery will get the best results.


Operating Instruction of Gestures

(Note: Gestures applied to a specific APP might not be workable on other APPs.)



[Click]

 Click like using your mouse to access further information.




[Move Icon]

Press and hold the icon and drag it to a new location or other APPs.



[Long Tap]

 Long press the touch screen to enter option menu page.




[Scroll]

It helps to scroll content up or down in the active window. Slide your finger up or down to activate this feature.



[pan]

 It helps to scroll content right or left in the active window. Slide your finger right or left to activate this feature.



[Zoom In]

Two fingers pinch to zoom in the active window and screen contents.



[Zoom out]

Two fingers pinch to zoom out the active window and screen contents.



[Select]

Long press the blankly space and drag to select screen contents.



[Rotate]

Keep a finger or thumb unmoved, draw arc with another finger right or left to rotate active contents.

How to Use

Power On

Press and release the On/Off button to boot.

Note: If no response after pressing, please charge the device.

Power Off

Press to enter or wake up standby mode.

Press the On/Off button for 4 seconds to enter shutdown page.

Standby

Under power-on, press the On/Off button for power-saving and quickly return to normal state.

Sleep, Wake, Lock

Press the On/Off button quickly back to normal state if needed.

FAQ

Charging

Once "Low Battery" warns, please connect USB power adapter soon to a plug socket to charge device.

Charging mode showed when charging; full battery showed when charged completely. It usually takes 5 straight hours to charge completely.

(In the first two times charging, please make sure charge 8 straight hours to activate battery for best results.)

Fail to power on

Please check battery level before and after connecting power adapter. If still fail to power on, please contact the seller.

No sound in earphones

Please check the volume and connection of the earphones.

Terrible noise

Please keep earphones clean to avoid dirt affecting sound quality. Besides, music file damaged might result in terrible noise or staccato and confirm it by playing other music.

**Fail to access the Internet and play audio or video online
Please make sure the WIFI is connected and signal is good.
Crash during operating should be forced to shut down via pressing the On/Off button for 10 seconds.**

Warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.