(Fold Inward) - - - - **▶**

(Back Cover)

(Front Cover)

Using the FM Radio

Plug the micro-USB connector into the micro-USB charging port, and place the other connector where it will have a clear line of sight to the sky. This will allow the speaker to better receive radio frequencies.

Change input modes until you enter FM radio mode.

In FM radio mode, all playback will be controlled by the buttons on the speaker. . Press the center of the [Playback] dial to start or stop automatically scanning &

saving available radio stations. If it is not stopped, the radio will make a complete scan of and save all nearby radio stations with good reception.

• Press the [Playback] dial to the left and to the right skip through saved stations.

Using a TF Card or USB Device

To insert a TF card, insert a TF card into the TF card slot on the speaker with the metal contacts facing down, and push in until it clicks.

To insert a USB device, such as a USB flash drive containing audio files, insert the

Change input modes until you enter TF or USB mode. The speaker will automatically begin playing music off the device. Note: You must have a TF card or USB device inserted to switch to TF or USB input mode.

In TF card and USB mode, all playback is controlled by the buttons on the speaker.

• Press the **center** of the **[Playback]** dial to pause and resume playback.

. Press the [Playback] dial to the left and to the right skip tracks

Compliance Information

FCC Information
This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the

Nate: The equipment has been tested and found to comply with the limits for a Class 8 digital device, pus-sant to part 15 of the 15 Chilles. These limits are longing to to prodic responsible proposition against interesting south to part 15 of the 15 Chilles. These limits are longing to the prodict responsible proposition against interesting annealy and, if not installed and used in accordance with the instruction, may cause install interesting to add commitments. However, there is no guarantee that reference will not cook in a particular installation, by turning the equipment off and on, the case is encouraged to try to correct the interference by one or more of the following measures: of the following measures: Increased the second between the excuprent and receive.

**Connect the objectment rate or outside on a creat different from that to which the receiver is connected.

Connect the device or an expensive address? the creates of the should be a connected.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WashING Libe Darkey hald
The conducts frend with a Libe Darkey, Do not during a cook or dismanth the battery
The cook of frend with a Libe Darkey, Do not during a cook or dismanth the battery
The cook of the co





This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

(BC) This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.



Bluetooth This symbol signifies that this is a wireless device powered by Bluetooth® technology. This symbol represents FCC Declaration of Conformity and compliance.

Warranty Information

1-Year Limited Warranty Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER
This product as supplied and distributed new by an authorized retailer is warranted by Southern Telecom. Inc. to the original consumer purchaser agents offerts in materials and workmanship ("Warranty") as follows:

- To obtain warranty service:

 Visit our customer support portal: www.customersupport123.com

 Select the braid and model of your device

 Select TService Request* and fill out the form to begin your inquiry

 Select TService Request* and fill out the form an authorized retailer

 Exchanges require dated proof of purchase from an authorized retailer

four product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received demanded as a result of shipping will require you to

Warranty service not provided
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, but of
This warranty does not cover damage resulting software modifications such as the installation of custom firmware.
This warranty is voicide in the warrant and variationated person covers, where one register this product. All products being
returned to the activitied deviated entering forms must be suitably packaged.

NOW THE AUTHOR WHICH PROPERTY ON THE PROPERTY OF THE PROPERTY

Some countries, states or provinces do not allow the enclusion of limitation of incidental or consequential damages or allow Institution on warranties, so initiation or exclusions may not apply to you. This warranty gives you specific logal rights, and you may have often rights that very from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

ART+SOUND



Instruction Manual

Bazooka Speaker

-with smart phone stand

Before You Begin...

READ CAREFULLY AND KEEPTHIS MANUAL

To ensure safe and proper use, read all safety information before using the device. Only use with manufactures appeared to the safety information before using the device. use with manufacturer-approved batteries, chargers, accessories, and supplies.

• THIS DEVICE IS NOT A TOY, keep away from children and pets.

- . Do not disassemble, modify, or repair the device,
- Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet
- . Do not submerge in water.
- Low power may cause poor Bluetooth connection or sound distortion.
 Do not overcharge battery.
 If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.
- The speaker contains a built-in battery and should not be disposed of with regular. household waste. Please consult the local authorities on the correct way to dispose of

In the Box

- ARBT22 Wireless Speaker (x1)
- 2-in-1 Charging/AUX Cable (x1)
 User Manual (x1)

Location of Controls

Micro-USB [Playback] Dial: Charging /AUX Port KM- MI MM+ TF USB . DC 5V ON OFF Side of Speaker TF Card USB Device [Power] Switch Power ON/OFF

ARBT22

Charging the Speaker

Plug the micro-USB connector of the included 2-in-1 charging/AUX cable into the charging/AUX port on the side of the speaker. Plug the USB (largest) connector into the USB port on a computer, or a 5V USB adapter (not included) and plug into a wall outlet.

The LED indicator will turn RED while charging and turn OFF when fully charged. When the speaker is low on power, a tone will be heard indicating that it needs to he recharged

- Move the [Power] switch to power the speaker ON and OFF.
 When powered ON, the speaker will enter Bluetooth pairing mode, and will automatically re-pair to any available previously-paired device nearby.

Changing Input Modes

Press and hold the center of the [Playback] dial to switch between input modes.

ATF card or USB device must be inserted or connected to switch to these modes.

Adjusting Volume

In all modes, overall volume can be adjusted with the Adjust Volume [Playback] dial on the side of the speaker. In AUX and Bluetooth modes, volume can also be controlled by your

Getting Started

- Press and hold the [Playback] dial to the right to increase volume.
- . Press and hold the [Playback] dial to the left to decrease volume

Adjusting Playback

- In Bluetooth, FM radio, TF Card and USB Device modes, playback can be
- controlled by the [Playback] dial on the side of the speaker.

 Press the center of the [Playback] dial to pause audio. Press again to resume.
- . Press the [Playback] dial to the right to skip to the next track/station.
- . Press the [Playback] dial to the left to skip to the previous track/station.

- Bluetooth Pairing

 1. Power the speaker ON. A tone will be heard and the speaker will enter Bluetooth pairing mode. The LED indicator will **quickly flash BLUE**.

 2. Set your mobile device to search for Bluetooth devices. When the list appears,
- select ARBT22 from the found devices.

 3. After a successful pairing, a tone will be heard, and the LED indicator will turn
- solid BLUE. After you begin playing music on the speaker, the LED indicator will begin slowly flashing BLUE.

Using the AUX Input

Insert the micro-USB connector of the included 2-in-1 charging/AUX cable into the charging/AUX port on the side of the speaker. Insert the 3.5 mm AUX jack end (smallest, round) into the headphone lack or 3.5 mm AUX output port on your media-playing device

Switch input modes until you reach AUX mode.

In AUX mode, all playback will be controlled by your connected device.