


User Manual

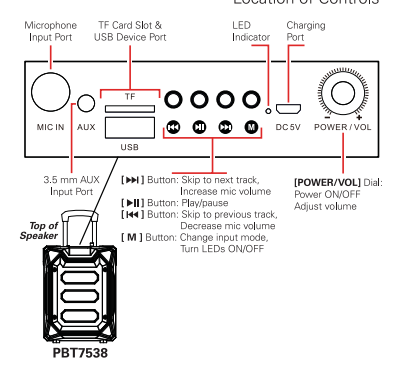
PBT7538

(Fold Inward) - - - - - ▶

(Back Cover)

(Front Cover)

<p>Using the FM Radio Change input modes until you enter FM radio mode.</p> <p>In FM radio mode, all playback will be controlled by the buttons on the speaker.</p> <ul style="list-style-type: none">Press the [M] button to start or stop automatically scanning & saving available radio stations. If it is not stopped, the radio will make a complete scan of and save all nearby radio stations with good reception.Press the [14] and [M] buttons to skip through saved stations. <p>Using a Microphone A microphone may be used in any mode.</p> <p>Plug the 1/4" connector of a wired microphone (not included) into the microphone input port on the top of the speaker. Switch the mic ON.</p> <ul style="list-style-type: none">Press and hold the [M] button to increase mic volume.Press and hold the [14] button to decrease mic volume.Adjust overall volume with the [POWER/VOL] dial on the speaker. <p>Note: In order to avoid loud feedback, keep the microphone behind the speaker and pointed away from the speaker, and switch it off when not in use.</p>	<h3>Compliance Information</h3> <p>FCC Information This device complies with Part 15 of the FCC Rules.</p> <p>Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.</p> <p>Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none">Reorient or relocate the receiving antenna.Increase the separation between the equipment and receiver.Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.Consult the dealer or an experienced radio/TV technician for help. <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Radiation Exposure Information The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.</p> <p>WARNING: Li-ion Battery Inside This product is fitted with a Li-ion battery. Do not damage, open or dismantle the battery and do not use it in damp and/or explosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).</p> <p>Rating Label Definitions</p> <ul style="list-style-type: none">⊞ Direct current symbol.♻️ The symbol signifies the product must not be discarded as household waste and should be offered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.♻️ The symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.Bluetooth The symbol signifies that this is a wireless device powered by Bluetooth® technology.FCC The symbol represents FCC Declaration of Conformity and compliance.	<h3>Warranty Information</h3> <p>90-Day Limited Warranty Tenneco, United States/Canada</p> <p>LIMITED WARRANTY TO ORIGINAL CONSUMER The product as depicted and distributed here by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty 1") as follows:</p> <p>To obtain warranty service:</p> <ul style="list-style-type: none">Visit our customer support portal: www.customersupport123.comSelect the brand and model of your device.Select "Service Request" and click the form to begin your inquiry.Exchanges require dated proof of purchase from an authorized retailer. <p>Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines the product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.</p> <p>Warranty service not provided The warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. The warranty is voided in the event any unauthorised person alters, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.</p> <p>NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE, SHALL APPLY. DISTRIBUTOR FURTHER DECLARES ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE AND OTHER EXPRESS WARRANTY OR GUARANTEE SHALL BE ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR, REPAIR, REPLACEMENT OR REFUND OF THE ORIGINAL PURCHASE PRICE, AT DISTRIBUTOR'S SOLE DISCRETION AND THE EXCLUSIVE REMEDY OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS SAVINGS, DATA OR RECORDS CAUSED BY THE USE, ABUSE OR INABILITY TO USE THE PRODUCT) EXCEPT AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY, NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THE WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.</p> <p>Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or limitations on warranties, so limitation or exclusion may not apply to you. The warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.</p> <p>Designed in US Printed in China V1.12-0309</p>	<h2>Polaroid</h2> <p>Have questions? We've got answers.</p> <p>Visit us at customersupport123.com</p>  <p>Polaroid, Polaroid Color Spectrum and Polaroid Classic Border Logo are trademarks of PULP IP Holdings, LLC, used under license. PULP IP Holdings, LLC does not manufacture this product or provide any manufacturer's warranty or support.</p>	<h2>Polaroid</h2> <p>PBT7538 Rugged Tailgate Sport</p> <p>User Manual</p>
---	---	---	---	---

<h3>Before You Begin...</h3> <h4>READ CAREFULLY AND KEEP THIS MANUAL</h4> <p>Customer Support For any questions or problems with your product, please visit our website at SouthernTelecom.com and click on Product Support.</p> <p>Caution To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.</p> <ul style="list-style-type: none">THIS DEVICE IS NOT A TOY. Keep away from children and pets.Do not disassemble, modify, or repair the device.Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.Do not submerge in water.Low power may cause poor Bluetooth connection or sound distortion.Do not overcharge battery.If using with a USB adapter, make sure the adapter is not damaged.Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.The speaker contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device. <p>In the Box</p> <ul style="list-style-type: none">PBT7538 - Wireless Speaker (x1)USB Charging Cable (x1)User Manual (x1)	<h3>Location of Controls</h3>  <p>Microphone Input Port, TF Card Slot & USB Device Port, LED Indicator, Charging Port, MIC IN, AUX, USB, M, M, M, DC 5V, POWER/VOL, 3.5 mm AUX Input Port, [M] Button: Skip to next track, Increase mic volume, [M] Button: Play/pause, [14] Button: Skip to previous track, Decrease mic volume, [M] Button: Change input mode, Turn LEDs ON/OFF, [POWER/VOL] Dial: Power ON/OFF, Adjust volume</p>	<h3>Getting Started</h3> <p>Charging the Speaker Plug the small connector of the included charging cable into the charging port on the top of the speaker. Plug the large connector into the USB port on a computer, or into a 5V USB adapter (not included) and plug into a wall outlet.</p> <p>The LED indicator will turn RED while charging and turn OFF when fully charged. When the speaker is low on power, a tone will be heard indicating that it needs to be recharged.</p> <p>Powering ON/OFF</p> <ul style="list-style-type: none">Turn the [POWER/VOL] dial clockwise until it clicks to power the speaker ON.When powered ON, the speaker will enter Bluetooth pairing mode, and will automatically repair to any available previously-paired device nearby.Turn the [POWER/VOL] dial counter-clockwise until it clicks to power the speaker OFF. <p>Adjusting Volume In all modes, overall volume can be adjusted by turning the [POWER/VOL] dial on the top of the speaker. In AUX and Bluetooth modes, volume can also be controlled by your connected device.</p> <ul style="list-style-type: none">Turn the [POWER/VOL] dial clockwise to increase volume.Turn the [POWER/VOL] dial counter-clockwise to decrease volume.	<p>Adjusting Playback In Bluetooth, FM Radio, TF and USB modes, playback can be controlled by the buttons on the top of the speaker.</p> <ul style="list-style-type: none">Press the [M] button to pause playback. Press again to resume.Press the [M] button to skip to the next track/station.Press the [14] button to skip to the previous track/station. <p>Changing Input Modes Press the [M] button on the top of the speaker to switch input modes.</p> <p>A TF card or USB device must be inserted or connected to switch to these modes.</p> <p>Using the LED Lights Press and hold the [M] button on the top of the speaker to turn the LED Lights ON and OFF.</p> <p>Bluetooth Pairing</p> <ol style="list-style-type: none">Power the speaker ON. A tone will be heard and the speaker will enter Bluetooth pairing mode.Set your mobile device to search for Bluetooth devices. When the list appears, select PBT7538 from the found devices.After a successful pairing, a tone will be heard and you will be able to play music on the speaker.	<p>Using the AUX Input Insert one end of a 3.5 mm auxiliary cable (not included) into the AUX input port on the top of the speaker. Insert the other end into the headphone jack or 3.5 mm aux output port on your media-playing device.</p> <p>Switch input modes until you reach AUX mode.</p> <p>In AUX mode, all playback will be controlled by your connected device.</p> <p>Using a TF Card or USB Device To insert a TF card, insert a TF card into the TF card slot on the speaker with the metal contacts facing down, and push in until it clicks.</p> <p>To insert a USB device, such as a USB flash drive containing audio files, insert the USB device into the USB device port on the top of the speaker.</p> <p>Change input modes until you enter TF or USB mode. The speaker will automatically begin playing music off the device. Note: You must have a TF card or USB device inserted to switch to TF or USB input mode.</p> <p>In TF card and USB mode, all playback is controlled by the buttons on the speaker.</p> <ul style="list-style-type: none">Press the [M] button to pause and resume playback.Press the [14] and [M] buttons to skip tracks.
--	--	--	---	--