


## Introduction

Sonostar SmartWatch allows you to keep your phone in your pocket and stay up to date. It connects with your smartphone via Bluetooth and displays notifications such as incoming calls, messages, calendar reminders, email, Facebook updates, tweets, and more.

The SmartWatch is compatible with iOS (iPhone) and most Android operating systems. Compatibility information for your SmartWatch is available at [www.sonostar.com](http://www.sonostar.com).

## Overview

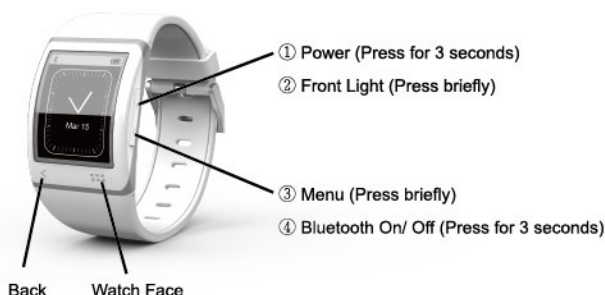

### 1 Power/ Front Light Button:

- ① Press for 3 seconds to turn the watch on/off.
- ② Press briefly to turn the front light on and off.

### 2 Menu/ Bluetooth Button:

- ③ Press briefly to go back to the application screen.
- ④ Press for 3 seconds to turn the Bluetooth connection on/off.


### 3 Watch Face:

Touch to go back to Watch Face (Time Mode).

### 4 Back:

Touch to go to the previous screen.

## Charging

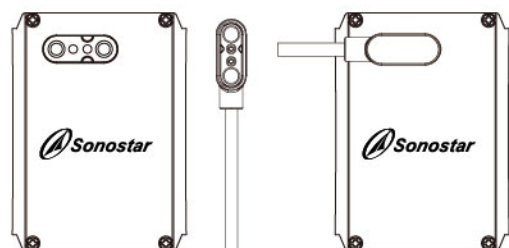

(Fig.a)

Please charge your Sonostar Watch for 3 hours before using it for the first time.

### Charging Your Smartwatch:

- Please attach the magnetic side of the USB charging cable to the underside of SmartWatch (Fig.a).
- The charging cable must be plugged into the USB Hub of your computer.
- The Sonostar Smartwatch should be charged for 3 hours.

\* Warning: Please do not charge the SmartWatch over 24 hours.

## Getting Started

### Step 1 Turning on the Sonostar Watch

Turn on your watch by pressing the power button for 3 seconds.

### Step 2 Install the Sonostar App

Download and install the Sonostar Watch App on your phone from the App Store or Google Play.

\*Note: The Sonostar App is available for phones running Android version 2.3 and later/ iOS 6 and later.

### Step 3 Pairing the Sonostar Watch with Your Smartphone

#### 3.1


Go to the smartphone settings and turn the Bluetooth on. Place your smartphone close to your SmartWatch. The distance between SmartWatch and smartphone should be within 10m (30 feet) with no walls or obstructions.

#### 3.2

Search and tap the "Sonostar" from the Bluetooth devices list on your phone.

#### 3.3

A group of codes will be displayed on both your smartphone and watch. If the codes match, tap "Pair" on the watch first and the phone.

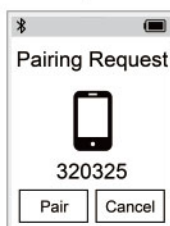

#### 3.4

A pop-up message will appear and you will be prompted for permission to access the information on your smartphone. Tap "OK" to initialize the Bluetooth connection.

#### 3.5

After the Bluetooth is connected, you will be able to use the Sonostar Apps.

## Definitions of the Watch Touch Screen

There are two main views on the watch, the watch face (Time mode screen) and the Application menu. You can switch between these two views by pressing the Menu button briefly, and then tap one of the app icons to launch it.



## Using Sonostar SmartWatch

The Time mode screen will be displayed after you turn on the SmartWatch. Once the unit has been paired with your phone, you can then switch between the Time mode and the Application screen.

### Receiving lifestyle and social networking notifications

When you get calls, messages and other updates on your phone, you can receive notifications on your SmartWatch with a slight vibration. The Sonostar App gives you selective control of the notifications you would like to receive, or not receive on the SmartWatch.

You can use the functions of your SmartWatch by downloading the "Sonostar" App from Google Play or the Apple App Store.

### Calls

Incoming caller ID along with a decline button will appear on the Sonostar screen with a vibrating alert.

### Messages

A vibrating alert informs you when messages come in. You can receive and read your texts directly on your SmartWatch.

### Email

Don't miss a single e-mail: lets you read and manage your e-mail in any situation.

### Music

You can control your music volume, play, pause, and stop your music and switch songs directly on Sonostar display.

### Facebook

All your friends' posts will be shown on your wrist. Sonostar gives you notifications of all the updates you receive, without having to check your phone. Check and like all your friends' posts directly on the SmartWatch.

For more detailed features, please visit [www.sonostar.com](http://www.sonostar.com).

## Updating SmartWatch

Update your SmartWatch to the most recent software version to optimize performance and get the latest enhancements. If available, a pop-up window may appear on your phone,

asking you to update your SmartWatch to the latest firmware version. Tap "Update" to confirm.

## Customer Support

### SmartWatch shut down unprompted.

- The battery level is too low. Charge your SmartWatch device.
- Pairing has failed. You need to restart the device and re-enter the pairing mode.

### Unexpected behavior

Reset your SmartWatch by pressing down the power and menu buttons for 4 seconds at the same time. Then press the power button for 3 seconds to restart.

Please visit [www.sonostar.com](http://www.sonostar.com) to learn more about Sonostar SmartWatch. If you have further questions, please contact us directly: [smartwatch@sonostar.com](mailto:smartwatch@sonostar.com)

## Legal Information

### FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by Sonostar Inc. may void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

### Disposal of Old Electrical & Electronic Equipment



1. **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
2. The battery (battery or batteries of battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
3. Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

The guide is published by Sonostar SmartWatch, without any warranty. Improvements and changes to this guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment may be made by Sonostar Smartwatch at any time and without notice. Such changes will, however, be incorporated into new editions of this guide. All rights reserved.