

CONNECTING

1. This set applies to AC 100V-240V, 50/60Hz
2. AC power: battery can be charged when connected to AC power. Red light on battery is charging, it will change to green once battery complete charge.
3. Internal battery will be charged even device switch off when plugged in to AC power
4. Speaker battery can be charged using 12V external car battery as well(connect cable not included) by "DC 12V input". Please make sure "+" and "-" in right connection.
5. Adjust function keys to your personal audio preference.

BATTERY & CHARGING

1. The units takes approximately 8 hours to fully charge. It will automatically begin charging once the power cord is connected.
2. If the battery power is low may caused sound distortion or stop play, please charging the battery on time.
3. To maximize the battery's lifespan, please charging the battery immediately. When the unit is not used for prolonged periods of time,the battery will gradually lose its power. It is recommended to fully charge the battery at least every 30days.
4. To saving battery, please power off once stop using.

Warranty

Supersonic Inc. warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety(90)DAYS from the date of original purchase. proof of purchase (receipt)required.
Please visit <http://www.supersonicinc.com/warranty> for additional information.

148.5mm
5

IQ sound[®]

USER MANUAL



IQ-4115DJTWS

PROFESSIONAL SPEAKER

 
PLEASE READ THIS USER MANUAL CAREFULLY BEFORE SYSTEM CONNECT

FC CE MADE IN CHINA

148.5mm

IMPORTANT SAFETY MEASURES

Before using this machine, please read all the safety and operating instructions, meanwhile, please observe all the indications about safe operating. These safety and operating instructions should be kept in condition of consultation.



1. Protection of electric power supply line: Be aware that the electric power supply line is not tramped, pressed by heavy objects. Pay special attention to the plug of power supply line and outlet on the machine. DO NOT lengthen the electric shock, DO NOT pull or drag or the power supply line.
2. Ventilation: This set must be put in ventilated place. DO NOT put disk on it or cloth to cover it. The distance away from the wall should not be less than 10 centimeters. DO NOT put this set on the bed, sofa, carpet or other objects with similar surface in case of good ventilation.
3. Casing Dismantling: DO NOT dismantle the casing. If one touches the inner components, he will probably get serious electric shock.
4. Unusual smell: When you discover unusual smell and smoke, cut power supplies immediately and pulls out the plus from the outlet on the wall. Contact the sell shop or nearest repairing center.

Attention: This set applies to AC 110V~240V / 50Hz~60Hz power supply. Use standard power supply. Please be sure for te correct power supply before use it.

PRODUCT FEATURES

- Wireless
- Plays Mp3 files stored in SD card/USB drive/external audio device.
- FM radio •Guitar input •Microphone inputs
- Wireless microphone included •With remote control
- Built-in rechargeable battery •Super dynamic sound speaker

 
REAR PANEL FUNCTION INSTRUCTION

REMOTE CONTROL



- ① Standby
- ② USB/SD/LINE (Audio input)
- ③ Prev/FM CH-
- ④ Play/pause/FM tuner
- ⑤ Next/FM CH+
- ⑥ Repeat
- ⑦ Stop
- ⑧ Volume up
- ⑨ Volume down
- ⑩ Mute
- ⑪ Equalizer
- ⑫ Number

148.5mm
1

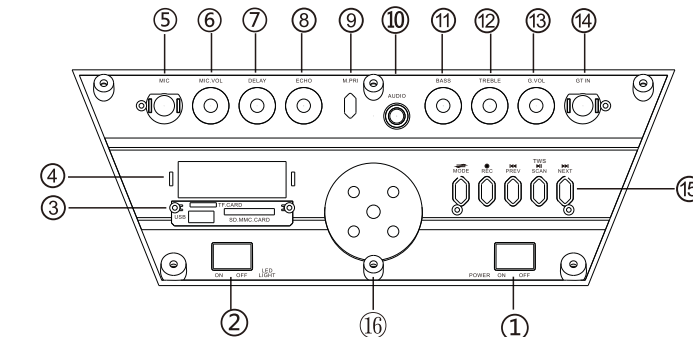


- ① **POWER SWITCH**
- ② **LED LIGHT ON/OFF SWITCH**
- ③ **USB/SD/TF INPUT JACK**
- ④ **DISPLAY SCREEN**
- ⑤ **MIC IN:** MICROPHONE INPUT
- ⑥ **MIC VOL. :** MICROPHONE VOLUME ADJUST
- ⑦ **MIC DELAY:** MICROPHONE DELAY VOLUME ADJUST
- ⑧ **MIC. ECHO:** MICROPHONE ECHO ADJUST
- ⑨ **MIC PRI.:** MICROPHONE PRIORITY ON/OFF SWITCH
- ⑩ **AUX INPUT**
- BASS:** BASS ADJUST
- TREBLE:** MICROPHONE TREBLE VOLUME ADJUST
- G. VOL. :** GUITAR VOLUME ADJUST
- GUITAR IN:** MICROPHONE INPUT
- MODE:** MODE SELECT
- REC:** RECORD: INSERT THE USB MEMORY/SD CARD AND PRESS THIS BUTTON TO START RECORDING. PRESSING THE BUTTON AGAIN STOPS RECORDING.
- ⏪ :PREVIOUS
- ⏩ :PLAY/PAUSE; FM STATION AUTO SEARCHING
- ⏭ :NEXT
- ⑬ **VOLUME:** MASTER VOLUME ADJUST

Remote control distance:6M

BLUETOOTH INSTRUCTION

Change the mode into "BLUE" the bluetooth sign light twinkles and speaker will give an alarm. Ensure you enable the Bluetooth function on your Bluetooth device Search for Bluetooth connection until you find device model and pair

 TWS CONNECTION

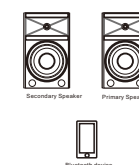

In Bluetooth mode, press the TWS button and hold it down for three seconds, the primary speaker will sound an alarm and the screen will show "BTST". The secondary speaker switch to Bluetooth mode will automatically connect to the primary speaker, and the screen will show "BT".

148.5mm
2

210mm

FM RADIO

Short press "Mode" button to switch between WIRELESS / USB / SD / FM
Please ensure that your speaker is fully charged & correct source has been selected.
To control volume Long Press "VOL -" (volume down) or "VOL + " (volume up).
Short Press "▶||" to Auto Scan and preset available frequencies
To switch between preset frequencies Short Press "◀◀" or "▶▶".

WIRELESS INSTRUCTION

Change the mode into "BLUE", the wireless sign light twinkles, and speaker have sound "di". Set on mobile phone, connect to wireless data, search equipment and match properly. The proper connect wireless lights keep on, and music work on speaker normally.



Connect a microphone with a 6.3mm plug through the "MIC" input

USB/SD

Plug in your USB Disk and/or SD Card in the slots provided. Please make sure you use the correct file format in your media devices – MP3 FILES ONLY and correct mode has been selected.


Short press "M" (Mode) button to switch between WIRELESS / USB / SD / FM / . Please ensure that your speaker is fully charged & that your files are MP3 format, or correct source has been selected.

To control volume Long Press "VOL -" (volume down) or "VOL + " (volume up).

To change tracks Short Press "◀◀" (Previous Track) or "▶▶" (Next Track).

To Pause or Release Pause Short Press "▶||"

 Please remember to turn off the power of the Speaker before removing the USB Disk or SD Card.

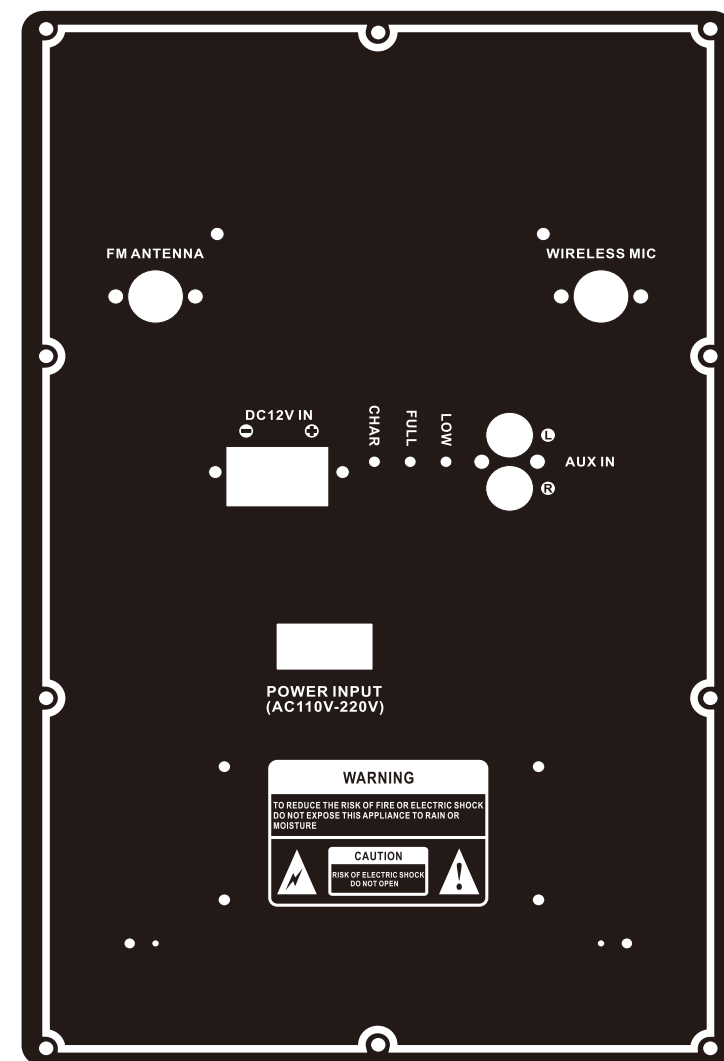

PACKAGE CONTAINS

Wireless microphone
Remote control
Power cord
Audio cable
Instruction manual

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

210mm

148.5mm