



#### FEATURES:

- 80 Watt Soundbar speaker system
- Wireless Bluetooth® Music Streaming
- Powerful dual 3" woofers and full range 2.5" drivers for incredible home theater effects
- Efficient Ported subwoofer design delivers realistic bass impact
- Compatible with your TV, DVD, Cable/Satellite Box, MP3 player, game console or computer
- Enjoy movies, music, and games
- Excellent choice for full range audio entertainment
- 1 Analog RCA input, 1 digital coaxial input and 1 digital optical input (PCM 2-Channel)
- Includes wall mounting brackets for convenient placement options

Congratulations on your purchase of the AudioSource® S350 Soundbar—the latest in high resolution Home Theater technology.

Please take a few moments to read this entire manual, and be sure to retain this document for future reference. Please read and observe all safety instructions detailed below.

**NOTE:** if any part of this product is damaged or missing, please call your dealer or AudioSource® directly at 1.877.715.5439.

Please read your warranty and retain your receipt and original carton for possible future use.

For more information about AudioSource® electronics, speakers and accessories please visit [www.audiosource.net](http://www.audiosource.net)



#### IMPORTANT SAFETY INSTRUCTIONS


1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the appliance.
11. Only use attachments or accessories specified by the manufacturer.
12. Unplug the apparatus during lightning storms or when unused for long periods of time.

13. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
15. **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
16. **WARNING:** To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instruction.
17. **WARNING:** The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
18. **WARNING:** The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
19. **□** This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
  - TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE
  - TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE
  - TO PREVENT ELECTRICAL SHOCK, MATCH WIDE BLADE PLUG TO WIDE SLOT, FULLY INSERT.




## Functions

## S350 Top View

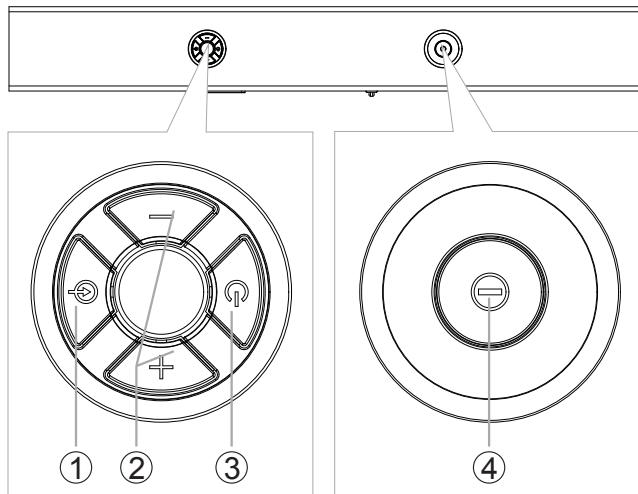

1. Input Mode: Select Input mode (RCA, Digital Coax, Optical, or Bluetooth®)
2. Volume +/-: Adjust the Soundbar's volume to the desired level
3. Mute/Standby: Press to activate/deactivate system audio
4. Main Power Switch: Press to turn unit on or off

## S350 Remote Control

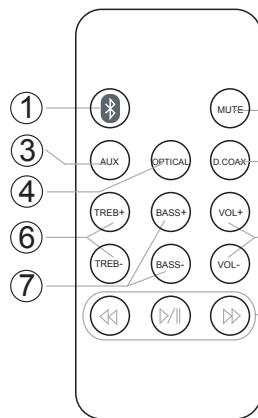


1. Bluetooth® Input: Push to activate Bluetooth feature and pair
2. MUTE: Press the key to mute the system
3. AUX Input: Push to activate analog RCA input
4. OPTICAL Input: Push to activate Digital Optical input
5. DIGITAL COAX Input: Push to activate Digital Coaxial input
6. TREB +/-: Adjusts the systems treble frequencies
7. BASS +/-: Adjusts the systems bass frequencies
8. VOL +/-: Adjusts the overall system volume level
9. TRACK CONTROLS: Controls Track Back, Play/Pause, and Track Forward On Bluetooth device

## Bluetooth® Pairing S350

1. Ensure S350 power is "On"
2. Push Bluetooth button on Remote until Blue front panel LED flashes.
3. Turn on the Bluetooth feature on your mobile device or Computer. Enable device discovery if not automatically enabled.
4. Search and select "S350" in the list on your device. Note: Some devices may require a pass code. Please use 0000 if prompted.
5. Status Indicator LED will stop flashing once paired.
6. Play music from your mobile device, adjust volume to taste.

## S350 Back View

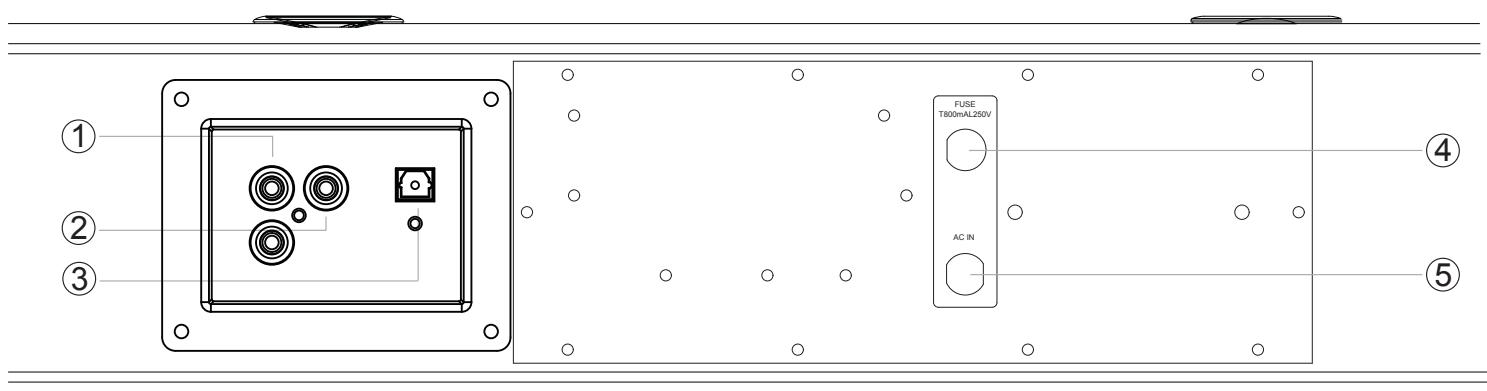

1. Input 1: Analog RCA- Connect to audio source 1 (TV, etc.)
2. Input 2: Digital Coaxial- Connect to audio source 2 (DVD, etc.). Please be sure to set the source to PCM 2-Channel
3. Input 3: Optical Input: Connect to PCM 2-Channel digital outputs.

4. Fuse
5. Power cord


## IMPORTANT!

Please refer to your TV or other source manual to configure the digital out to PCM 2-Channel and for compatibility.





## System Connections

## Diagram 1- Standard Audio Connections

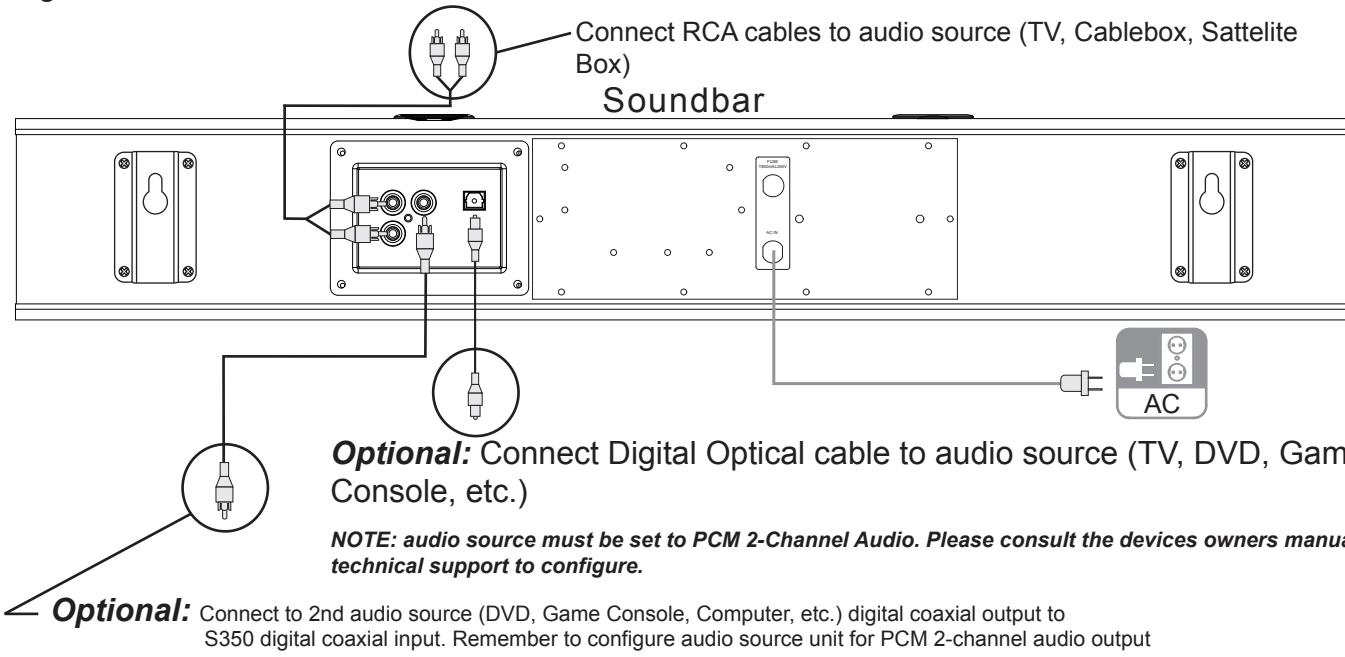

## Diagram 2- Wall Mounting

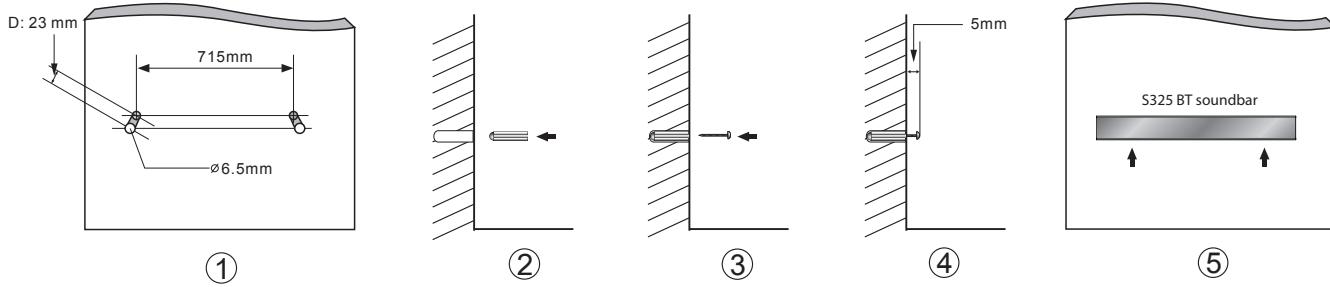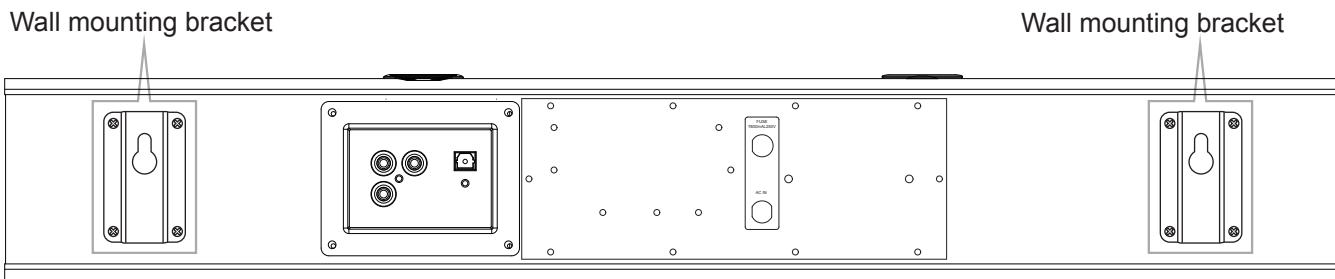

## TO Wall Mount S350

1. Drill two holes in the drywall (see figure 1)
2. Push the two drywall anchors into the wall (see figure 2)
3. Install 2 screws into the each drywall anchor. Note: please use anchors rated for a minimum of 20 lbs each.
4. Carefully hang the S350 on the screws mounted to the drywall anchors (see figure 5).

## Specifications

- Audio Power: 2 x 20 Watts, 2 x 20 Watts (Bass Drivers)
- Speakers: 2 x 2.5" High Efficiency Full Range Drivers, 2 x 3" Subwoofers
- S/N: > 80dB
- Distortion: < 1%
- Power Supply: 120VAC, 60Hz
- Product Dimensions: 33.9"W x 4.3"H x 6.2"D
- Net Weight 12.6 lbs
- Gross Weight 14.5 lbs

## Trouble Shooting

If you experience problems with your S350 Soundbar, the following trouble shooting guide may help

Trouble	Solution
Power LED won't light up	Verify both Power and Mute buttons are "ON" (both located on the top of the S350)
	Verify unit power cord is connected to wall outlet, and wall outlet is functional
No Sound	Verify the audio source is playing audio
	Check if the audio cables are connected correctly to the audio source
	Check if the volume is at the right level
One or more speakers no sound	Check if both right and left RCA cables are connected correctly to the audio source
Bluetooth will not pair	Ensure mobile device Bluetooth is on and paired, Ensure another device is not paired to S350
Optical or Digital Coax Input not Functioning	Verify audio source digital output is set to "PCM 2-Channel". Consult audio source's manual
Remote control not working	Check if the battery is in the remote control, Verify battery is charged
If the problem still exists, please contact AudioSource for Technical Support	

## Limited Warranty

AudioSource® warrants its electronics products against defects in materials and workmanship for a limited period of time. For a period of two years from date of original purchase, we will repair or replace the product, at our option, without charge for parts and labor. Customer must pay all parts and labor charges after the limited warranty period expires. The limited warranty period for factory refurbished products expires after ninety (90) days from date of original purchase.

This limited warranty applies only to purchases from authorized AudioSource® electronics retailers. This limited warranty is extended only to the original purchaser and is valid only to consumers in the United States.

Consumers are required to provide a copy of the original sales invoice from an authorized AudioSource® dealer when making a claim against this limited warranty. This limited warranty only covers failures due to defects in materials or workmanship that occur during normal use. It does not cover failures resulting from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, modification, service by anyone other than AudioSource®, or damage that is attributable to Acts of God. It does not

cover costs of transportation to AudioSource® or damage in transit. The customer should return his defective product, freight prepaid and insured, to AudioSource® only after receiving a Return Authorization.

This warranty will become void if the serial number identification has been wholly or partially removed, altered or erased. Repair or replacement under the terms of this warranty does not extend the terms of this warranty. Should a product prove to be defective in workmanship or material, the consumer's sole remedies will be repair or replacement as provided under the terms of this warranty. Under no circumstances shall AudioSource® be liable for loss or damage, direct, consequential or incidental, arising out of the use of or inability to use the product. There are no express warranties other than described above.

## Technical Support

If any part of this product is damaged or missing, please call your dealer or AudioSource® directly at toll free 1.877.715.5439 or locally 503.914.4688.



**FCC WARNING**

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FCC STATEMENT**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

 **WARNING****DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD**

[The remote control supplied with] This product contains a coin/button cell battery, if the coin/button cell battery is swallowed it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

