

# **uCloudlink M3B Mini PCIe-C**

## Hardware Design Guide

GLMM20A01

LTE Module

Version: uCloudlink M3B Mini PCIe-C\_Hardware Design Guide\_V1.0

Date: 06/10/2020

uCloudlink was found by some senior international communications experts. uCloudlink has its headquarter, R&D center and call center located in Shenzhen, various branch offices and operations centers in the United States, United Kingdom and Hong Kong(China).

uCloudlink has been focusing on Cloud SIM technology and providing more convenient, fast and cheap data services for mobile users and enterprise users with the coverage more than 100 countries and regions globally so they can access the Internet at local rate anywhere, anytime. Meanwhile, setting up the world's leading Cloud SIM PaaS brings the benefits of winning and serving customers with lower cost to these global mobile data providers. uCloudlink has achieved success in the wireless industry by providing Internet access for more than a hundred million users. Now we are on our way to enter Internet of Things (IoT) market with the aim to provide global connectivity for billion IoT links.

M3B is the M2M module based on Cloud SIM technology launched by uCloudlink providing SIM-free wireless access services for Industrial IoT (IIoT), Connected Car, Vending Machine, Advertising Machine and POS Machine and more across different network operators.

uCloudlink always strives to provide our customers with the fastest and most comprehensive services. Should you have any questions, please contact our headquarter in Shenzhen as follows:

Shenzhen uCloudlink Network Technology Co., Ltd

Address: 3rd Floor, A Zone, Building 1, High-tech Zone, Shenzhen.

E-mail: [IOT@ucloudlink.com](mailto:IOT@ucloudlink.com)

Tel: 0755-2639-920

## Preface

This guide can help our customers to design their products. They shall design the product according to the specifications and parameters contained herein. We shall not be liable or responsible for any loss or damage resulting from their improper operation. We reserve the right to make any updates and any other modifications to this manual at any time without prior notice.

## Copyright

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Shenzhen uCloudlink Network Technology Co., Ltd (“uCloudlink”).

***Copyright © Shenzhen uCloudlink Network Technology Co, Ltd 2018. All Rights Reserved***

## Revision History

Revision	Date	Author	Description
1.0	2020/06/10	Simon Wen Yan Yonghong	Initial Release

---

# Contents

<b>Revision History</b> .....	<b>4</b>
<b>Contents</b> .....	<b>5</b>
<b>Table Index</b> .....	<b>6</b>
<b>Figure Index</b> .....	<b>7</b>
<b>1 Introduction</b> .....	<b>8</b>
1.1 Safety Information .....	8
<b>2 Product Overview</b> .....	<b>9</b>
2.1 About This Chapter .....	9
2.2 Product Introduction.....	9
2.3 Key features .....	10
2.4. Function Overview .....	13
<b>3. Interface Application</b> .....	<b>14</b>
3.1. About This Chapter .....	14
3.2. M2 Module Interface .....	14
3.3. Power Interface.....	19
3.4. UART Interface .....	20
3.5. USIM Card Interface.....	21
3.6. USB Interface .....	22
3.7. Signal Control Signal .....	23
3.7.1. W_DISABLE# Signal .....	24
3.7.2. PERST# Signal .....	24
3.7.3. LED_WWAN# Signal .....	25
3.8. Antenna Interface .....	25
3.8.1. Antenna Requirements.....	25
3.8.2. Antenna Connector Specification .....	26
<b>4 Electrical Interface and RF Specifications</b> .....	<b>26</b>
4.1. About This Chapter .....	26
4.2. Power Supply Ratings.....	26
4.3. I/O Interface .....	27
4.4. RF Specifications.....	27
4.5. Electrostatic Discharge Characteristics .....	28
<b>5 Mechanical Dimensions</b> .....	<b>31</b>
5.1. Installation Instruction of M3B Module.....	31
5.1. Outer Dimension of M3B Module.....	31

5.2. Standard Dimension .....	31
<b>6 Appendix Terms and Abbreviation .....</b>	<b>33</b>

## Table Index

Table 1 M3B module features.....	9
Table 2 Key Features.....	9
Table 3 Definition of I/O Parameters .....	13
Table 4 Definition of pins on the M3B module .....	14
Table 5 Definition of power interfaces.....	17
Table 6 UART interface signals.....	18
Table 7 USIM Card interface signals.....	19
Table 8 Definition of USB Interfaces.....	20
Table 9 Definition of the pins on the signal control interface.....	22
Table 10 Operating status of radio frequency.....	23
Table 11 Network status indication.....	24
Table 12 Antenna requirements.....	25
Table 13 Input power range.....	26
Table 14 I/O Interface.....	27
Table 15 RF output power.....	27
Table 16 RF receiving sensitivity.....	28
Table 17 ESD Characteristics.....	29
Table 18 Terms and Abbreviations.....	29

# Figure Index

Figure 1 Functional Diagram .....	12
Figure 2 Pin Assignment (Top View).....	16
Figure 3 Recommended Power Circuit of the M3B module .....	17
Figure 4 Recommended Power Circuit of Level Match.....	18
Figure 5 Circuit of the 6-pin USIM Card interface.....	19
Figure 6 Recommended Circuit of USB Interface.....	21
Figure 7 Timing sequence of module reset.....	23
Figure 8 Driving circuit.....	24
Figure 9 Antenna Interface.....	25
Figure 10 Dimension of Antenna Connector .....	25
Figure 11 Installation I of the nstruction M3B module .....	30
Figure 12 Outer dimension of the M3B module .....	30
Figure 13 Standard dimension of MINI PCI EXPRESS card.....	31
Figure 14 Mini PCI Express Connector .....	31

# 1 Introduction

This document gives a general introduction of key features, functions, interface description, electrical characteristics and RF characteristics and layout of the M3B Mini PCIe-C module (“M3B”).

## 1.1 Safety Information

The following safety precautions shall be observed to ensure your safety and protect your device and working environment from potential damage.



Road safety comes first! Using a mobile device while driving is prohibited even it has speakerphone. Please pull over your car in a safe place first then make or receive a call.



Switch your phone off before take-off. Electromagnetic waves emitted by your phone may affect the electronic navigation equipment in the aircraft. The ignorance of this tip may affect flight safety or even break the law.



Be aware if there are any restrictions on mobile device use during a hospital or healthcare facility. All medical equipment may be susceptible to radio frequency interference, which could affect performance, so you shall switch off your mobile device.



It cannot guarantee that mobile device can access Internet under any circumstances. For example, when you run out of credits or insert invalid SIM card. For any emergency situations, remember to make the emergency call and make sure your device is powered on and you are in an area with known-good signal strength.



Your mobile device would send and receive radio frequency signal when switched on. The interference occurs when you place the device near television, radio, computer and other electronic devices.



Do not place your mobile device near inflammable gas. Always switch off your mobile device near gas station, oil depot, chemical plant or explosion areas. Operating the mobile device in potential explosion areas has risk.



---

# 2 Product Overview

## 2.1 About This Chapter

M3B module is the LTE module with the PCI Express Mini Card 1.2 standard interface providing FDD-LTE/TDD-LTE/WCDMA / network connections and compatible with embedded operating system, such as Linux or Android.

M3B module is available for the following occasions:

- Tablet, notebook
- Remote monitoring
- Car-mounted device
- Wireless POS machine
- Intelligent metering
- Wireless router, exchanger
- Other wireless devices

This chapter gives a brief introduction of the M3B module including:

- Product Introduction
- Key Features
- Function Overview

## 2.2 Product Introduction

The M3B module is only available with Data Only version.

**Table 1 M3B module features**

---

Name	Description
uCloudlink M2 Mini PCIe-C	LTE-FDD: B2/4/5/7/12/13/17/25/26/66 TDD-LTE: B41 WCDMA: B2/B4/B5 GSM Band: GSM 850, PCS 1900

## 2.3 Key features

The following table describes detailed features of the M3B module.

**Table 2 key features**

Feature	Description
Mini PCIe Interface	Standard PCI Express Mini Card 1.2 interface
Power Voltage	3.3~3.6V
Output Power	Class 4 (33dBm±2dB) for GSM900 Class 1 (30dBm±2dB) for DCS1800 Class E2 (27dBm±3dB) for GSM900 8-PSK Class E2 (26dBm±3dB) for DCS1800 8-PSK Class 3 (24dBm+1/-3dB) for WCDMA bands Class 3 (23dBm±2dB) for LTE FDD bands Class 3 (23dBm±2dB) for LTE TDD bands
LTE	Up to non-CA CAT4 Support 1.4~20MHz RF bandwidth Support downlink multi-user MIMO

---

FDD: Max uplink speed 50Mbps, max downlink speed 150Mbps

TDD: Max uplink speed 35Mbps, max downlink speed 130Mbps

---

#### WCDMA

Support 3GPP R8 DC-HSPA+

Support 16-QAM, 64-QAM and QPSK modulation

3GPP R6 CAT6 HSUPA: max uplink speed 5.76Mbps

3GPP R8 CAT24 DC-HSPA+: max downlink speed 42Mbps

---

---

#### Internet Protocol

Support TCP/UDP/PPP/FTP/HTTP/SMTP/MMS/NTP/PING/QMI

Support PAP (Password Authentication Protocol) and CHAP  
(Challenge Handshake Authentication Protocol)

---

#### USIM Interface

Support USIM/SIM: 1.8V and 3.0V

---

#### UART Interface

Support RTS and CTS hardware flow control

Baud rate can reach up to 230400bps, 115200 bps by default

Used for AT command and data transmission

---

---

USB Interface	Compliant with USB2.0 specification (slave only) , the data transfer can reach up to 480 Mbps. Used for firmware upgrade, AT command, data transmission, log output; USB driver: Support Windows 7, Windows 8/8.1, Linux 2.6 or Later, Android 4.0/4.2/4.4/5.0
AT Commands	Compliant with 3GPP TS 27.007, 27.005 and enhanced AT commands
Antenna Interface	Support main antenna pad, diversity antenna pad
Dimension and weight	Dimensions (L x W x H): 51.0 mm ×3 0.0 mm×4 .9 mm Weight: about 11 g
Operating Temperature	Normal operating temperature: -20°C ~+65°C <sup>1)</sup> Extended operating temperature: -40°C ~ +85°C <sup>2)</sup>
Firmware upgrade	USB interface or FOTA interface
RoHS	All hardware components meet the EU RoHS standard

---

## Note

<sup>1)</sup> when M3Bmodule works within this temperature range, and all its RF performances comply with the 3GPP standard requirements.

## 2.4 Function Overview

Figure 1 shows the functional diagram of the M3B module. The major functions are following:

- Support line 1 of USIM card interface
- Support line 1 of USIM 2.0 interface
- Support line 1 of UART interface
- Support LED status indication
- Support RF shut-down feature
- Support external reset feature
- Support 2 RF antenna interfaces

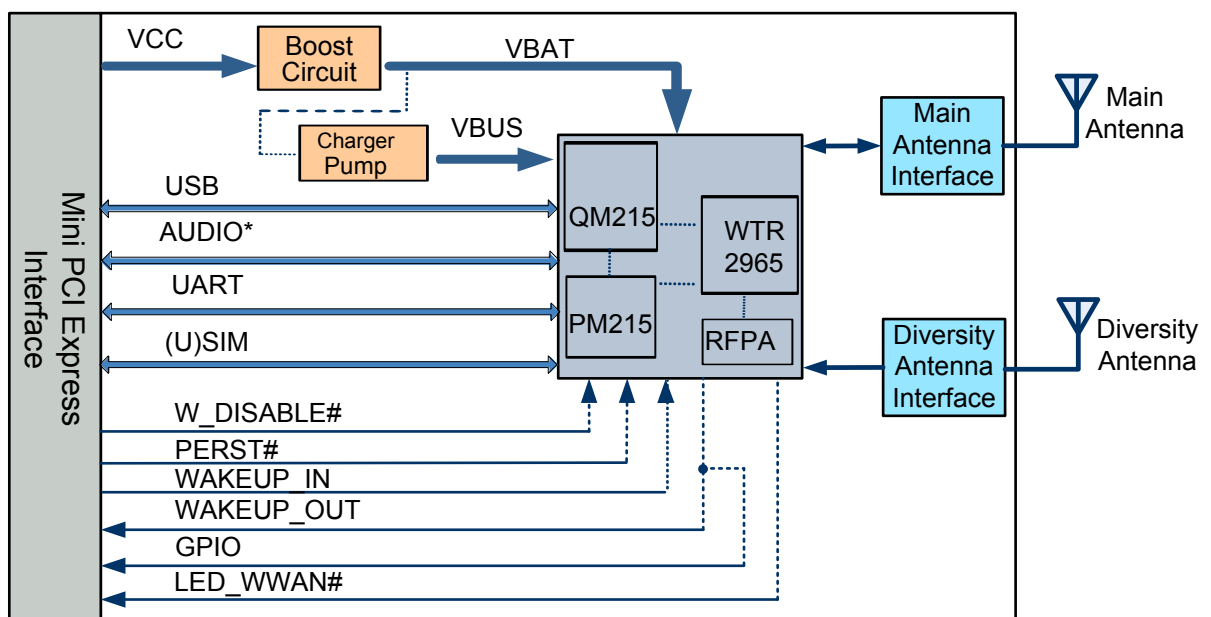


Figure 1 Functional Diagram

# 3 Interface Application

## 3.1 About This Chapter

This chapter mainly gives the external application interfaces of the M3B module, including:

- Power Interface
- UART Interface
- USIM Interface
- USB Interface
- Control Signal
- Antenna Interface

## 3.2 M3B Module Interface

### 3.2.1 Interface Definition

The interface of the M3B module is the standard Mini PCI Express interface. For details about the 52-pin interfaces, see table 3 I/O parameters definition.

**Table 3 Definition of I/O parameters**

Mark	Description
IO	Bidirectional input/output
DI	Digital Input
DO	Digital Output
AI	Analog Input

AO	Analog Output
PI	Power Input
PO	Power Output
OC	Open Collector

**Table 4 Definition of pins on the M3B module**

Pin No.	Status	Pin Name	I/O	Description	Note
1	WAKE#	MIC_P*	AI	Audio Input(Positive)	
2	3.3Vaux	VBAT	PI	Power Input	
3	COEX1	MIC_N*	AI	Audio Input(Negative)	
4	GND	GND		Ground	
5	COEX2	SPK_P*	AO	Audio Output(Positive)	
6	1.5V	RESERVED	—	—	
7	CLKREQ#	SPK_N*	AO	Audio Output(Negative)	
8	UIM_PWR	USIM_VDD	PO	USIM Power Output	
9	GND	GND		Ground	
10	UIM_DATA	USIM_DATA	IO	USIM data signal	
11	REFCLK-	VDD_EXT	PO	1.8V Power Output	

12	UIM_CLK	USIM_CLK	DO	USIM Clock Signal	
13	REFCLK+	RESERVED	—	Reserved	
14	UIM_RESET	USIM_RST	DO	USIM Reset Signal	
15	GND	GND		Ground	
16	UIM_VPP	RESERVED	—	Reserved	
17	RESERVED	RESERVED	—	Reserved	
18	GND	GND		Ground	
19	RESERVED	WAKEUP_IN	DI	Module Sleep Control Pin	Allows to sleep when low level
20	W_DISABLE#	W_DISABLE#	DI	Disable RF Communication	Valid when low level
21	GND	GND		Ground	
22	PERST#	PERST#	DI	Reset Control Pin	Valid when low level
23	PERn0	UART_RXD	DI	Module receiving end	
24	3.3Vaux	VBAT	PI	Power Input	
25	PERp0	UART_RTS	DO	Module request to send	
26	GND	GND		Ground	
27	GND	GND		Ground	
28	1.5V	UART_CTS	DI	Module request to delete	



29	GND	GND		Ground
30	SMB_CLK	UART_DCD	DO	Module Carrier Sense
31	PETn0	UART_TXD	DO	Module sending end
32	SMB_DATA	WAKEUP_OUT	DO	Module Sleep Indication
33	PETp0	PERST#	DI	Reset Control Pin Valid when low level
34	GND	GND		Ground
35	GND	GND		Ground
36	USB_D-	USB_DM	IO	USB Differential Signal (-)
37	GND	GND		Ground
38	USB_D+	USB_DP	IO	USB Differential Signal (+)
39	3.3Vaux	VBAT	PI	Power Input
40	GND	GND		Ground
41	3.3Vaux	VBAT	PI	Power Input
42	LED_WWAN#	LED_WWAN#	OC	Status Light Indication
43	GND	GND		Ground
44	LED_WLAN#	RESERVED	—	Reserved
45	RESERVED	RESERVED	—	Reserved
46	LED_WPAN#	UART_DTR	DI	DTE is ready
47	RESERVED	RESERVED	—	Reserved
48	1.5V	RESERVED	—	—
49	RESERVED	RESERVED	—	Reserved
50	GND	GND		Ground
51	RESERVED	RESERVED	—	Reserved


52	3.3Vaux	VBAT	PI	Power Input
----	---------	------	----	-------------

**Note**

1. Besides USIM interfaces, the voltage domain of other digital interfaces is 1.8V, and the USIM interface is available with 1.8V and 3.0V.
2. Please suspend all of NC, RESERVED and unused pins.
3. “\*” indicates the audio feature is not available and reserved function.

**3.2.2 Pin Assignment**

The following figure shows the pin assignment of the M3B module, and the top face is for sticking antenna connector and opposite face is the BOT.

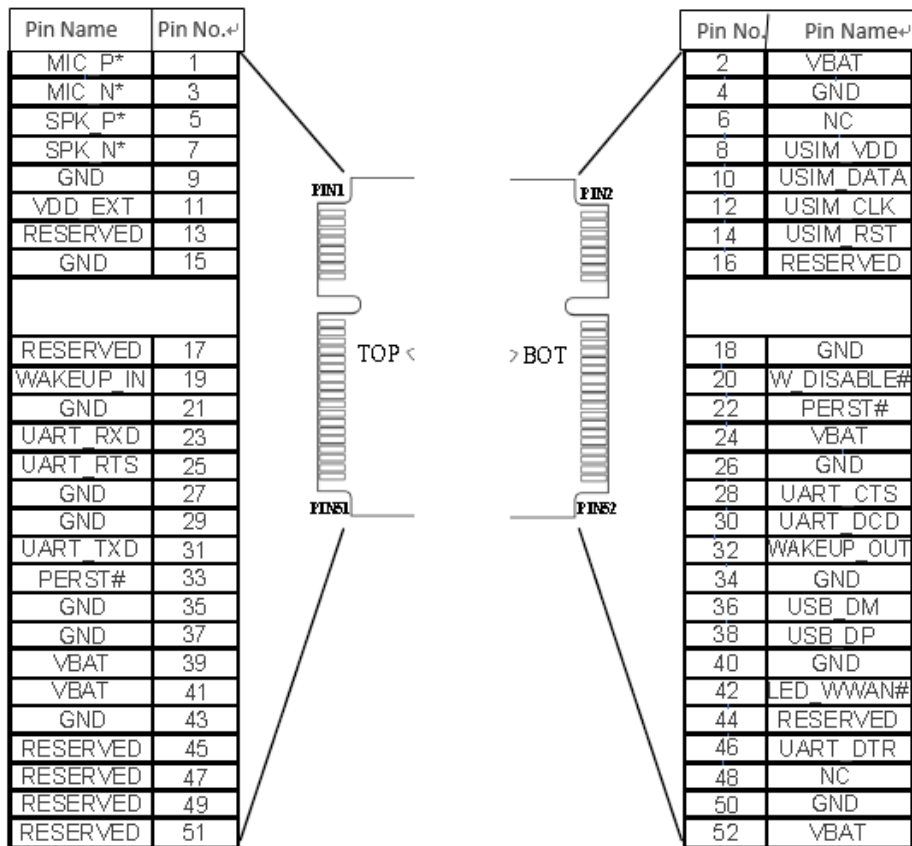

**Figure 2 Pin Assignment (Top View)**

### 3.3 Power Interface


Table 5 lists the definitions of the pins on the power supply interface.

**Table 5 Definition of power interfaces**

Pin No.	Pin Name	I/O	Description
2, 24, 39, 41, 52	VBAT	PI	3.3~4.2V Power Input
4, 9, 15, 18, 21, 26, 27, 29, 34, 35, 37, 40, 43, 50	GND		Ground

When the M3B module works normally, power is supplied through the VBAT pins. When it works at EGSM900 mode and transmits current may reach the transient peak value of about 3 A. To make sure that the voltage does not decrease below 3.3V, a low-dropout (LDO) regulator or switch power with current output of more than 3 A is recommended for external power supply. Furthermore, it is recommended that customers add the 1000uF or above energy storage capacitor to connect in parallel at the power interface of the M3B module. And keep the power device and power cable away from antenna to avoid EMI interference.

Figure 3 shows the recommended power circuit of M2 module using DC-DC power supply. The resistance accuracy of R3 and R4 is 1%. The capacitance E1 needs to use high polymer tantalum capacitor to add the drive capability of pulse current in dialing process.

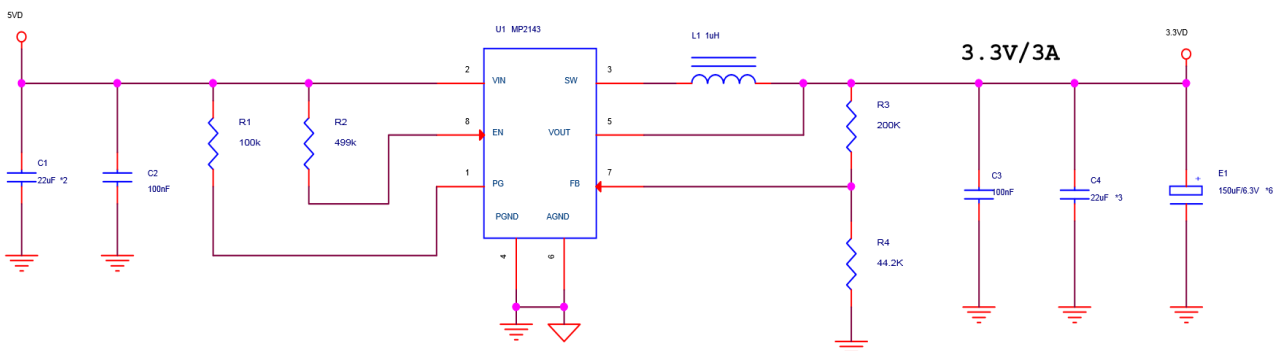

**Figure 3 Recommended Power Circuit of the M3B module**

### 3.4 UART Interface


Table 6 lists the UART interface signals.

**Table 6 UART interface signals**

Pin No.	Pin name	- I/O	Typ.(V)	Description
23	UART_RXD	DI	1.8V	Receive data
31	UART_TXD	DO	1.8V	Send data
28	UART_CTS	DI	1.8V	Clear to Send
25	UART_RTS	DO	1.8V	Ready for Receive

The M3B module is available with 1-wire hardware flow control UART (DSR and R1 signal are not supported), which supports 9600, 19200, 38400, 57600, 115200, 230400bps and the default value is 115200bps.

Figure 4 shows the recommended power circuit of level match in the 3.3V power. Pay attention to the connection direction. The dotted circuit and full circuit can be used as reference to each other.

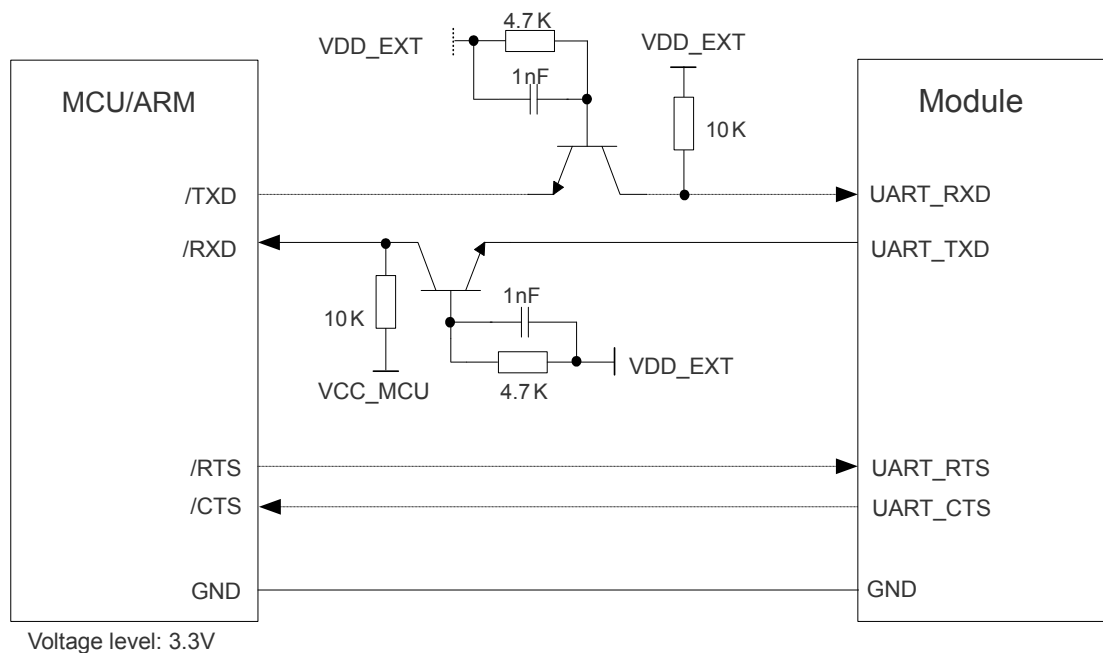

**Figure 4 Recommended Power Circuit of Level Match**

### 3.5 USIM Card Interface


The signal definition of the M3B module USIM card interface is as below.

**Table 7 USIM card interface signals**

Pin No.	Pin Name	I/O	Typ.(V)	Description
8	USIM_VDD	PO	1.8V/3.0V	Output Power supply for USIM card
10	USIM_DATA	IO	1.8V/3.0V	USIM/SIM Data
12	USIM_CLK	DO	1.8V/3.0V	USIM/SIM Clock
14	USIM_RST	DO	1.8V/3.0V	USIM/SIM Reset

The M3B module is available with 1.8V and 3.0V USIM/SIM card.

Figure 5 shows the circuit of the 6-pin USIM card interface.

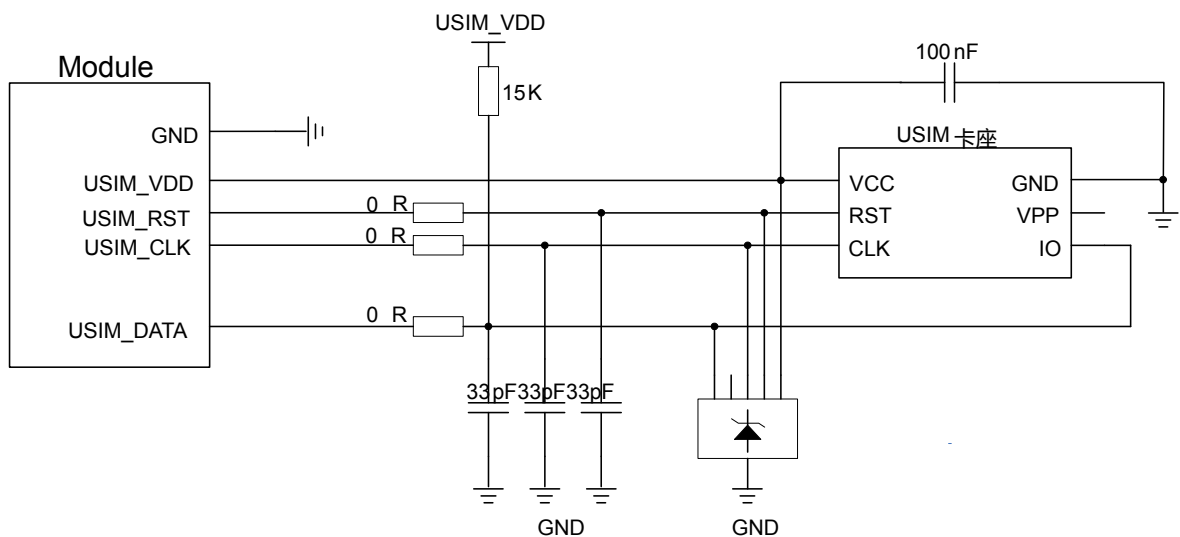

**Figure 5 Circuit of the 6-pin USIM Card Interface**

In order to enhance the reliability and availability of the USIM card, please pay attention to these key points:

1. The USIM socket should be placed near the USIM interface and it is recommend that PCB circuit connecting the USIM interface to the USIM socket does not exceed 200 mm.
2. Keep USIM card signal cable away from RF antenna and module power cable.
3. The decouple capacitor of USIM\_VDD should be less than 1uF and placed near the USIM socket.
4. To avoid the mutual interference between USIM\_DATA and USIM\_CLK, keep them away with each other and shield them with surrounded ground including USIM\_RST.
5. In order to ensure ESD protection in good performance, it is recommended to place the TVS with stray capacitance of less than 50pF near USIM card socket.
6. It is recommended to connect the 0Ω resistors to USIM\_CLK, USIM\_DATA and USIM\_RST to avoid EMI interference and enhance ESD protection. Meanwhile, connecting the 33pF capacitor in parallel to filter interference from EGSM900 RF signals, and keep these components close to the USIM card socket.
7. USIM\_DATA is pulled up internally, which is good for improving the anti-jamming capability. When the PCB circuit of USIM card is too long or the interference is nearby, the pull-up resistor is recommended to be placed close to the USIM socket.

### 3.6 USB Interface


The Pin definition of the M3B module USB interface is as below.

**Table 8 Definition of the USB interface**

Pin No.	Pin Name	Pad Type	Description	Comment
36	USB_DM	IO	USB differential data bus(minus)	Require differential impedance of 90ohm
38	USB_DP	IO	USB differential data bus(positive)	Require differential impedance of 90ohm

The M3B module is compliant with USB 2.0 High Speed Mode (480Mbps) and Full Speed Mode (12Mbps). And only can be used as slave device. The USB interface is mainly for AT commands, data transfer, catch log, and software upgrade.

Figure 6 shows the circuit of the USB interface

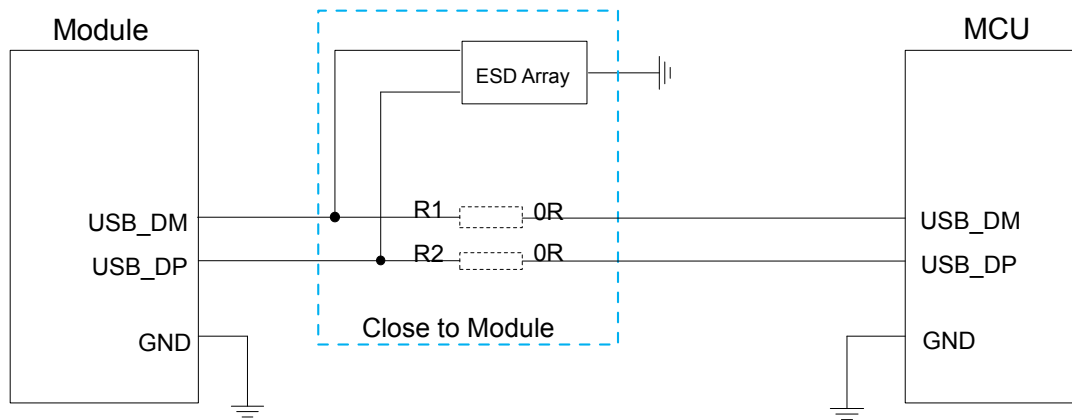

**Figure 6 Recommended Circuit of USB Interface**

In order to meet the requirement for completeness of USB signal trace, R1 and R2 shall be placed near the M3B module and ESD protection components.

Based on the USB 2.0 specification, please comply with the following requirements:

1. It is required to control the differential impedance -90ohm.
2. Do not route the USB signal trace under the following components: crystals, oscillator, electromagnetic component and RF signal. Keep it away from interference sources and signals susceptible to disturbance and shielding with ground.
3. If the USB interface of the M2 module is connected to the USB socket, place ESD protection component with no more than of 2pF capacitance near the USB socket.
4. Avoid the coupled noise on the USB signal trace, keep the testing stubs as short as possible. If possible, add resistor of 0 ohm or common mode choke to the USB signal trace.

### 3.7 Signal Control Signal

Table 9 lists the pins on the signal control interface.

**Table 9 Definition of the pins on the signal control interface**

Pin No.	Pin Name	Pad Type	Typ.(V)	Description
20	W_DISABLE#	DI	1.8V	Disable RF communication, effective low level (inside pull up)
22, 33	PERST#	DI	1.8V	Reset control, low level reset (internal pull up)
42	LED_WWAN#	OC	—	Status Indication

### 3.7.1 W\_DISABLE# Signal


The W\_DISABLE# signal can be used to disable the RF communication, which can be controlled through hardware and software. Table 10 shows the operating status of radio frequency.

**Table 10 Operating status of radio frequency**

W_DISABLE#	AT command	RF status
High Level	AT+CFUN=1	Enable RF
High Level	AT+CFUN=0 AT+CFUN=4	Disable RF
Low Level	AT+CFUN=0 AT+CFUN=1 AT+CFUN=4	Disable RF

### 3.7.2 PERST# Signal

PERST# signal can be used externally to reset the module. PERST# 150~460ms can be pulled down to reset the module. PERST# signal is sensitive to interference, so keep the route on the module interface board as short as possible and shield with ground.

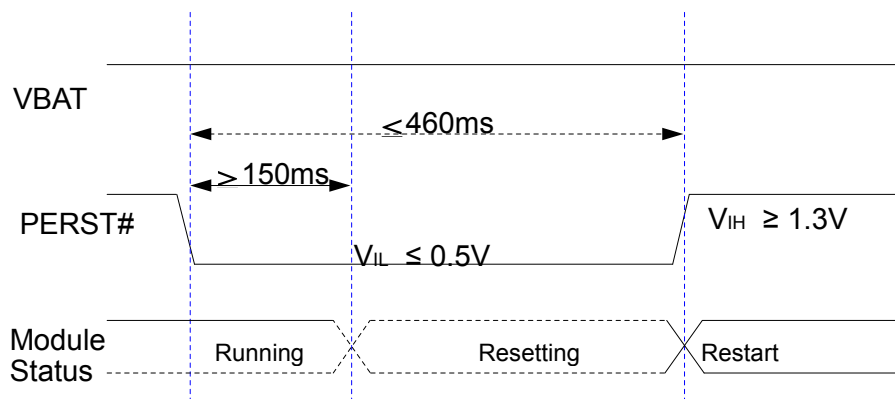


**Figure 7 Timing Sequence of Module Reset**



### 3.7.3 LED\_WWAN# Signal

The LED\_WWAN# signal interface is OC output format and the max current can reach up to the 40mA. When it connects to LED externally, connects the resistor in serial. You can adjust the LED brightness by adjusting the resistance of resistor. When it is low, the external LED lights up.

Figure 8 shows the recommended circuit of the LED\_WWAN# pin.

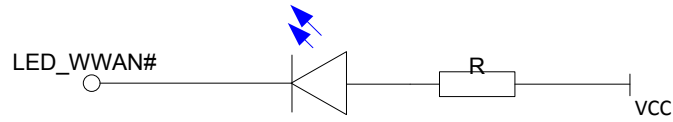

**Figure 8 Driving Circuit**

Check the LED\_WWAN# signal network status indicator as below, when the M3B module is successfully registered, the LED is on. When the RF is disabled, turned off or error (No SIM card or registration failed), the LED is off.

**Table 11 Network status indication**

LED_WWAN#	Description
Low Level ( LED is on )	Successfully registered
High Impedance ( LED is off )	<ol style="list-style-type: none"> <li>No Internet or registration failed</li> <li>W_DISABLE# pin is pulled down(disable RF)</li> </ol>

### 3.8 Antenna Interface

The M3B module provides two antenna pads (main antenna pad and DIV antenna pad) for connecting the external antennas.

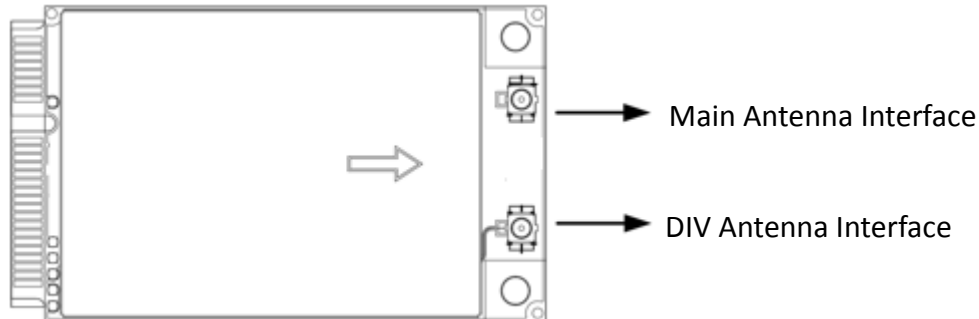


Figure 9 Antenna Interface

#### 3.8.1 Antenna Requirements


Table 13 lists the requirements for main antenna, diversity antenna .

Table 12 Antenna requirements

Type	Requirements
	VSWR: $\leq 2$
	Gain (dBi): $< 3\text{dBi}$
	Max input power (W): 50
	Input resistance(ohm): 50
WCDMA/ TD-SCDMA/ LTE	Polarization type: vertical
	Cable insertion loss: $< 1\text{dB}$
	(WCDMA B8, LTE B8) Cable insertion loss: $< 1.5\text{dB}$ Cable insertion loss: $< 2\text{dB}$

### 3.8.1 Antenna connector specification

Figure 10 shows specification for antenna connectors

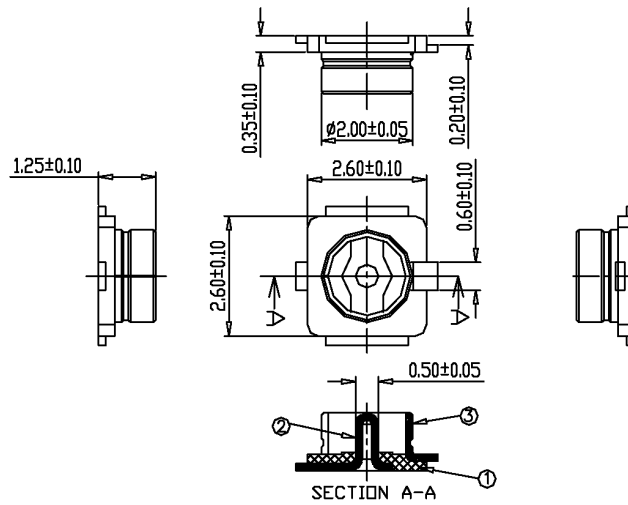

## 4 Electrical Interface and RF Specifications

### 4.1 About This Chapter

This chapter describes the mainly gives the electrical interface and RF specifications of the M3B module, including:

- Power Supply Ratings
- IO Interface
- Working Current
- RF Performance
- ESD Feature

### 4.2 Power Supply Ratings

M3B module comes with VBAT voltage with the input voltage 3.3~3.6V and the input power at least meets the requirement of 2.3A capacity. Table shows the power range of the M3B module.

Table 14 Input Power Range

Parameter	Description	Min.	Typ.	Max.	Unit
-----------	-------------	------	------	------	------

VBAT	Module power supply	3.3	3.6	V
------	---------------------	-----	-----	---

### 4.3 I/O Interface

Table 15 shows the I/O interface of the M3B module

**Table 15 I/O Interface**

Parameter	Description	Min.	Max.	Unit
V <sub>IH</sub>	High Level Input Voltage	0.7*VDDIO <sup>1)</sup>	VDDIO <sup>1)</sup> +0.3	V
V <sub>IL</sub>	Low Level Input Voltage	-0.3	0.3*VDDIO <sup>1)</sup>	V
V <sub>OH</sub>	High Level Input Voltage	VDDIO <sup>1)</sup> -0.5	VDDIO <sup>1)</sup>	V
V <sub>OL</sub>	Low Level Input Voltage	0	0.4	V

### Notes

1. The voltage of PERST# and W\_DISABLE VIL<sub>(max)</sub> is 0.5V.
2. VDDIO voltage is 1.8V

### 4.4 RF Specifications

Table 16 shows the RF output power and RF receiving sensitivity of the M3B module.

**Table 16 RF Output Power**

Band	Max	Min
GSM900	33dBm±2dB	5dBm±5dB
DCS1800	30dBm±2dB	0dBm±5dB
GSM900 (8-PSK)	27dBm±3dB	5dBm±5dB
DCS1800 (8-PSK)	26dBm±3dB	0dBm±5dB
WCDMA B1/B8	24dBm+1/-3dB	<-49dBm

LTE FDD B1/B3/B8	23dBm±2dB	<-39dBm
LTE TDD B38/B39/B40/B41	23dBm±2dB	<-39dBm

**Table 16 RF Receiving Sensitivity**

Band	Receiving		Master set	
	Sensitivity(Typ.)		+Diversity	3GPP(Main+Diversity)
GSM850	-108dBm	NA	NA	-102dBm
EGSM900	-108dBm	NA	NA	-102dBm
DCS1800	-108dBm	NA	NA	-102dBm
PCS1900	-108dBm	NA	NA	-102dBm
WCDMA Band1	-109dBm	NA	NA	-106.7dBm
WCDMA Band2	-110dBm	NA	NA	-104.7dBm
WCDMA Band4	-110dBm	NA	NA	-106.7dBm
WCDMA Band5	-111dBm	NA	NA	-104.7dBm
WCDMA Band8	-110dBm	NA	NA	-103.7dBm
LTE-FDD B1(10M)	-96dBm	-97dBm	-99dBm	-96.3dBm
LTE-FDD B2(10M)	-96dBm	-97dBm	-99dBm	-94.3dBm
LTE-FDD B3(10M)	-96dBm	-97dBm	-99dBm	-93.3dBm
LTE-TDD B4(10M)	-96dBm	-98dBm	-99dBm	-96.3dBm
LTE-TDD B5(10M)	-98dBm	-99dBm	-101dBm	-94.3dBm
LTE-TDD B7(10M)	-94.5dBm	-95dBm	-97dBm	-94.3dBm
LTE-TDD B8(10M)	-97dBm	-98dBm	-100dBm	-93.3dBm
LTE-TDD B9(10M)	-96dBm	-97dBm	-98dBm	-95.3dBm
LTE-TDD B12(10M)	-98dBm	-99dBm	-101dBm	-93.3dBm
LTE-TDD B13(10M)	-98dBm	-99dBm	-101dBm	-93.3dBm

LTE-TDD B17(10M)	-98dBm	-99dBm	-101dBm	-93.3dBm
LTE-TDD B18(10M)	-98dBm	-99dBm	-101dBm	-96.3dBm
LTE-TDD B19(10M)	-98dBm	-99dBm	-101dBm	-96.3dBm
LTE-TDD B20(10M)	-97dBm	-98dBm	-100dBm	-93.3dBm
LTE-TDD B25(10M)	-96dBm	-97dBm	-99dBm	-93.3dBm
LTE-TDD B26(10M)	-98dBm	-99dBm	-101dBm	-93.3dBm
LTE-TDD B28(10M)	-96dBm	-97dBm	-99dBm	-94.3dBm
LTE-TDD B34(10M)	-96dBm	-98dBm	-99dBm	-96.3dBm
LTE-TDD B38(10M)	-96dBm	-98dBm	-99dBm	-96.3dBm
LTE-TDD B39(10M)	-97dBm	-99dBm	-99dBm	-96.3dBm
LTE-TDD B40(10M)	-94dBm	-95dBm	-97dBm	-96.3dBm
LTE-TDD B41(10M)	-94dBm	-95dBm	-96dBm	-94.3dBm

## 4.5 Electrostatic Discharge Characteristics

Table 17 lists the ESD (Electrostatic Discharge) characteristics of the M3B module


**Table 17 Electrostatics discharge characteristics**

Parameter	Contact Discharge	Air Discharge	Unit
Power and grounding interface	+/-5	+/-10	kV
Antenna Interface	+/-4	+/-8	kV
USB Interface	+/-4	+/-8	kV
USIM Card Interface	+/-4	+/-8	kV
Other Interface s	+/-0.5	+/-1	kV

# 5 Mechanical Dimensions

This chapter gives the mechanical dimensions of the M3B module.

## 5.1. Installation Instruction of M3B Module

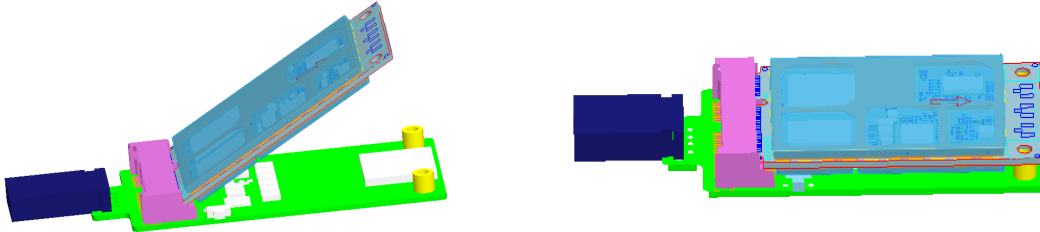

## 5.2. Outer Dimension of M3B Module

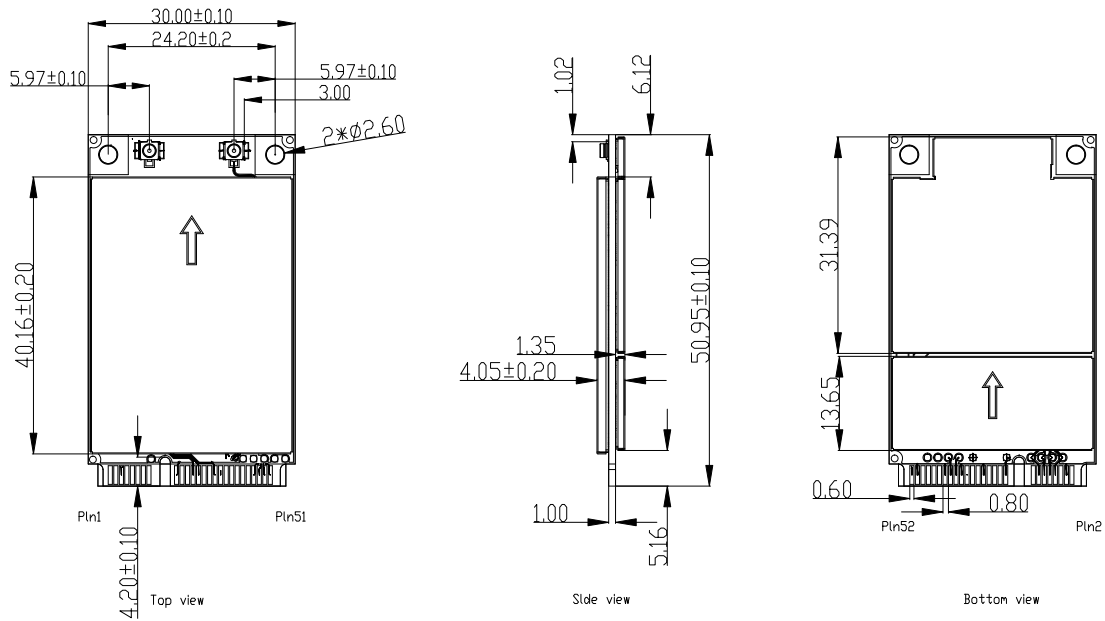


Figure 12 Outer Dimension of M3B Module (Unit: mm)

## 5.3 Standard Dimension

The M3B module comes with standard interfaces.

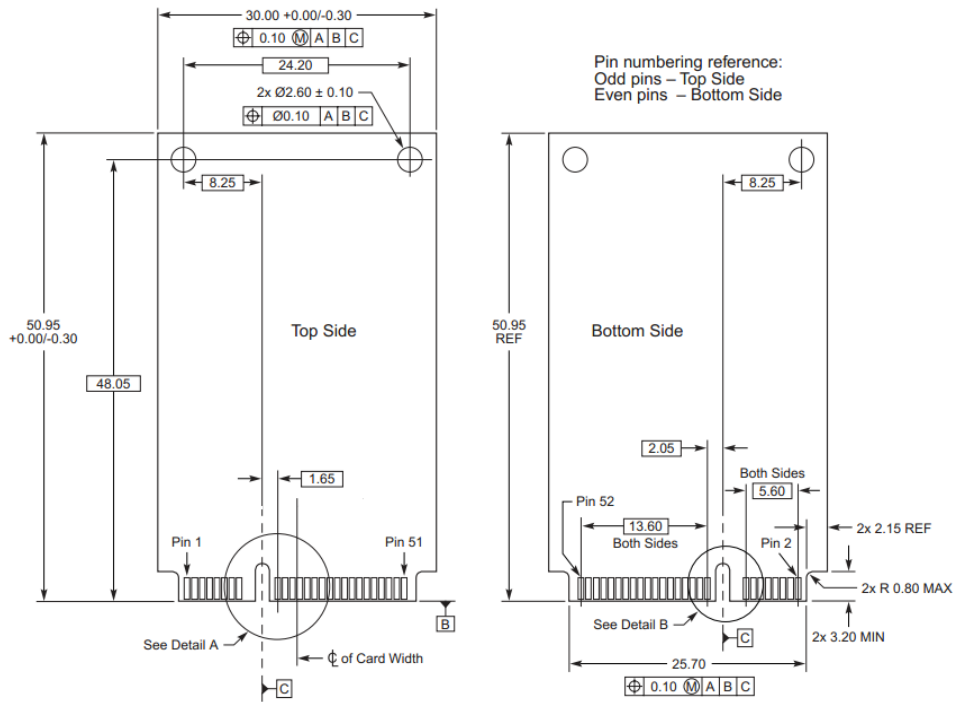


Figure 13 Standard Dimension of Mini PCI Express (Unit: mm)

Any qualified PCI Express Mini Card connectors are compatible with the M3B module. Figure 14 shows the connector 679100002 made of Molex Company.

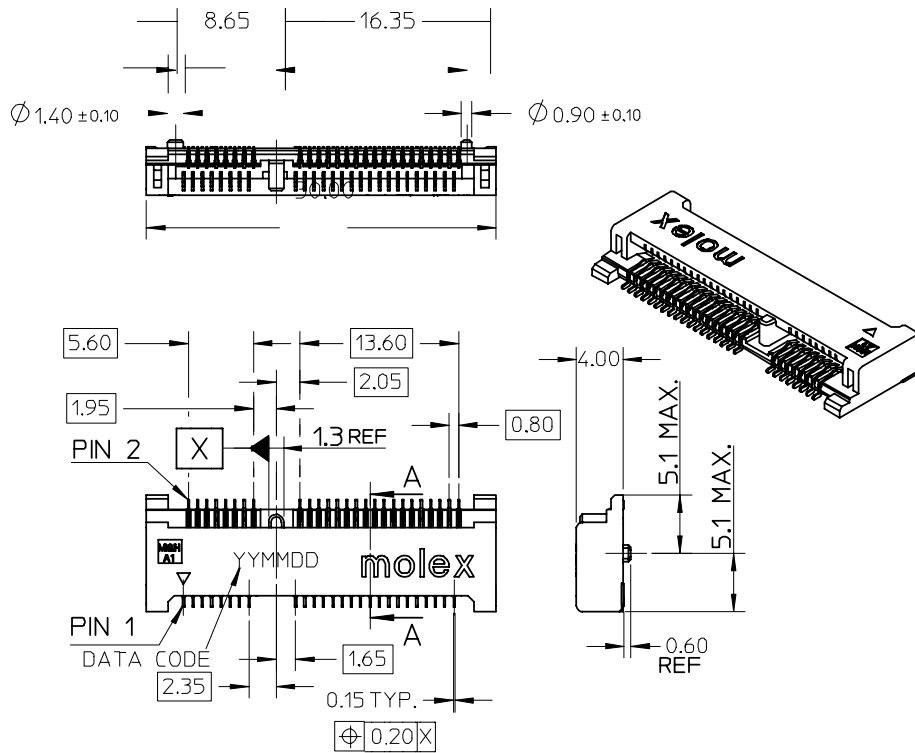


Figure 14 Mini PCI Express Connector (Unit: mm)



# 6 Appendix Terms and Abbreviation

**Table 19 Terms and Abbreviation**

<b>Abbr.</b>	<b>Description</b>
8-PSK	8-Phase Shift Keying
bps	Bits Per Second
CS	Coding Scheme
CSD	Circuit Switched Data
CTS	Clear To Send
DCE	Data Communications Equipment (typically module)
DL	Down Link
DTE	Data Terminal Equipment (typically computer, external controller)
DTR	Data Terminal Ready
EMC	Electromagnetic Compatibility
ESD	Electrostatic Discharge
FDD	Frequency Division Duplexing
GLONASS	GLObalnayaNAvigatsionnayaSputnikovaya Sistema, the Russian Global Navigation Satellite System
GMSK	Gaussian Minimum Shift Keying
GNSS	Global Navigation Satellite System
GPS	Global Positioning System
HSPA	High Speed Packet Access

PAD TYPE	Input/Output
kbps	KiloBitsPer Second
LED	Light Emitting Diode
LTE	Long Term Evolution
Mbps	Million Bits Per Second
MCS	Modulation and Coding Scheme
ME	Mobile Equipment
MMS	Multimedia Messaging Service
MO	Mobile Originated
MS	Mobile Station ( engine)
MT	Mobile Terminated
PAP	Password Authentication Protocol
PDU	Protocol Data Unit
PPP	Point-to-Point Protocol
RF	Radio Frequency
RX	Receive Direction
SIM	Subscriber Identification Module
SMS	Short Message Service
TDD	Time Division Duplexing
TD-SCDMA	Time Division-Synchronous Code Division Multiple Access
TE	Terminal Equipment
TTF	Time to First Fix
TX	Transmitting Direction
UART	Universal Asynchronous Receiver & Transmitter
UL	Up Link
UMTS	Universal Mobile Telecommunications System

---

URC	Unsolicited Result Code
-----	-------------------------

---

USSD	Unstructured Supplementary Service Data
------	---

---

WCDMA	Wideband Code Division Multiple Access
-------	--

---

## FCC Statement

**NOTICE:** This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Please notice that if the FCC identification number is not visible when the module is installed inside another device, then the outside of the device into which the module is installed must also display a label referring to the enclosed module. This exterior label can use wording such as the following: "Contains FCC ID:2AC88-GLMM20A01" any similar wording that expresses the same meaning may be used.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The module is limited to OEM installation ONLY.

The OEM integrator is responsible for ensuring that the end-user has no manual instruction to remove or install module.

The module is limited to installation in mobile application.

A separate approval is required for all other operating configurations, including portable configurations with respect to Part 2.1093 and difference antenna configurations.

There is requirement that the grantee provide guidance to the host manufacturer for compliance with Part 15B requirements.

The finished product is required to comply with all applicable FCC equipment authorisations, regulations and equipment. We will provide guidance to the host manufacturer for compliance with the FCC part 15B requirements.

The OEM integrator is responsible for ensuring that the end-user has no manual instructions to remove or install module.

The module is limited to installation in mobile or fixed application.