 
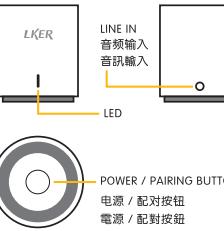
 


Grace	User Guide 用户指南 用户指南			
	External View / 外观及特征 / 外觀及特徵	Connect Wireless / 无线连接 / 無線連接	Connect Wireless / 无线连接 / 無線連接	Connect Wireless / 无线连接 / 無線連接
	 <p>LINE IN 音频输入 音訊輸入</p> <p>POWER / PAIRING BUTTON 电源 / 配对按钮 電源 / 配對按鈕</p>	<p>The first your device needs matching connection 第一次与您的设备连接时需要配对 第一次與您的設備連接時需要配對</p> <p>TURNED OFF / 在关机状态下 / 在關機狀態下</p>  <p>HOLD 5 Sec / 5秒 Hold 5 Sec, to the red and blue light flashing to release the button 長按5秒，直至紅藍燈閃爍才松開按鈕 長按5秒，直至紅藍燈閃爍才鬆開按鈕</p>	<p>Please go to Bluetooth settings on your smartphone, tablet, computer or other devices and connect to "Grace". Enter "0000" if asked for a passcode.</p> <p>请打开手机、平板电脑、计算机或其它设备上的蓝牙设置，并连接到“Grace”。如需要输入密码时，请输入“0000”。</p> <p>請打開手機、平板電腦、計算機或其它裝置上的藍牙設定，並連接到“Grace”。如需要輸入密碼時，請輸入“0000”。</p> <p>Power Off / 关闭电源 / 關閉電源</p> <p>TURNED ON 在开机状态下 在開機狀態下</p>  <p>HOLD 5 Sec / 5秒 Hold 3 Sec, to the blue light flashing to release the button 長按3秒，直至藍燈閃爍才松開按鈕即可 長按3秒，直至藍燈閃爍鬆開按鈕即可</p>	<p>Connected again / 再次连接 / 再次連接</p> <p>TURNED OFF / 在关机状态下 / 在關機狀態下</p>  <p>HOLD 3 Sec / 3秒 Hold 3 Sec, to the blue light flashing to release the button 長按3秒，直至藍燈閃爍才松開按鈕即可 長按3秒，直至藍燈閃爍鬆開按鈕即可</p>
PLUG & PLAY / 音频线连接 / 賓插隨播	CHARGE IT UP / 充电 / 充電	SAFETY INFORMATION		
<p>Connect Grace to any device with a headphone output using the supplied 3.5mm audio cable.</p> <p>使用附带的3.5mm音频线将Grace连接至任何具有音频输出的设备上。</p> <p>使用附带的3.5mm音频线将Grace连接至任何具有音频输出的装置上。</p>	<p>Insert charging cable USB to power output connector or computer. Red light on when charging, red light off when charged fully.</p> <p>使用USB充电线将USB端插入具有电源输出的USB接头或电脑。充电时红灯亮起，充满电后灯灭。</p> <p>使用USB充电线将USB端插入具有电源输出的USB接头或电脑。充电时红灯亮起，充满电后灯灭。</p> <p>Full charge takes about 3 hours 完全充满电需时约3小时 完全充滿電需時約3小時</p>	<p>WARNING Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.</p> <p>Fire and Electric Shock Hazard</p> <ul style="list-style-type: none"> Do not expose your Grace Speaker to liquid, moisture, humidity, or rain. Do not use the Grace Speaker near a swimming pool, hot tub, or near an open fire. Exposure of the Grace Speaker to liquid or moisture could result in electric shock. Do not drop, disassemble, open, crush, bend, deform, puncture, shear, microwave, incinerate, paint, or insert foreign objects in the Grace Speaker. Such actions could result in electric shock. Do not expose your Grace Speaker to extremely high or low temperatures. Do not leave your Grace Speaker in direct sunlight for extended periods of time. Clean the Grace Speaker only with a dry cloth. Do not leave your Grace Speaker near open flames such as cooking burners, candles, or fireplaces. Do not clean your Grace Speaker in the microwave. <p>Fall Hazard</p> <ul style="list-style-type: none"> Do not expose your Grace Speaker on high surfaces such as shelves. During a fall, the Grace Speaker may move which could cause the Grace Speaker to shift and fall off the edge. <p>The Risk of Traffic Accidents</p> <ul style="list-style-type: none"> Do not leave or store the Grace Speaker or any of its accessories near or over your automobile's air bag because serious injury may result when an air bag deploys. <p>Automobile Accidental Hazard</p> <ul style="list-style-type: none"> Do not leave or store the Grace Speaker or any of its accessories near or over your automobile's air bag because serious injury may result when an air bag deploys. 	<p>Battery / Charger Hazard</p> <ul style="list-style-type: none"> Do not dispose of your Grace Speaker in a fire. The battery could explode causing injury or death. Only charge the battery in accordance with the user instructions supplied with the Grace Speaker. Do not charge the Grace Speaker in direct sun or in extremely high or low temperatures because this could result in electric shock. Do not attempt to repair, modify, or disassemble your Grace Speaker yourself, it does not contain any user serviceable components. Do not clean the Grace Speaker when it is being charged. Always unplug the charger first before cleaning the Grace Speaker. <p>The Risk of Traffic Accidents</p> <ul style="list-style-type: none"> Do not leave Grace Speaker when crossing the road, it may be distracting and endanger personal safety. <p>Automobile Accidental Hazard</p> <ul style="list-style-type: none"> Do not leave or store the Grace Speaker or any of its accessories near or over your automobile's air bag because serious injury may result when an air bag deploys. 	<p>CAUTION</p> <ul style="list-style-type: none"> Do not use bring your Grace Speaker in contact with any sharp objects because this could cause scratches and damage. Do not insert anything into your Grace Speaker unless otherwise specified in the user instructions. This may damage the internal components. Do not attempt to repair, modify, or disassemble your Grace Speaker yourself, it does not contain any user serviceable components. Volume input to highest, result in damage to the Grace Speaker. Do not crush your Grace Speaker top of loudspeaker. It'll be a damage. Keep ear to reach of children. Do not allow children to play with the your Grace Speaker or its accessories. They could hurt themselves or others or could accidentally damage the your Grace Speaker. The your Grace Speaker or its accessories may contain small parts that could become detached and create a choking hazard. Dispose of the Grace Speaker and the Grace Speaker's battery in accordance with local regulations. Do not dispose of the battery with regular household waste.

Warranty	安全信息		保修
<p>Grace provides 12 months warranty. We supply free warranty for operational problems due to the design, materials or workmanship of this product with correct use. Please contact your dealer. Warranty is only supplied for the speaker, accessories are not included.</p> <p>Due to following states, we don't supply free warranty service:</p> <ul style="list-style-type: none"> Incorrect use, such as drop, water and so on. Grace diaphragm destruction caused by extrusion, puncture, scratch, or insert materials which is not allowed in the user guide. 	<p>警告 请认真阅读下面这些安全警告和注意事项，确保您的人身安全并预防财产损失。</p> <p>火灾和雷电危险</p> <ul style="list-style-type: none"> 请勿将Grace音箱暴露在液体和潮湿的环境中。请勿在浴缸、水槽、桑拿房、游泳池等潮湿地方附近使用。暴露在潮湿空气中可能導致觸電。 请勿将Grace音箱长时间放置在阳光直射下。 请勿拆卸、拆解、打开、挤压、扭曲、烘烤、焚烧Grace音箱或向其中塞入异物，这样操作可能导致触电。 请勿将Grace音箱暴露于过高或过低的温度下。 请勿将Grace音箱长时间放置在阳光直射下。 只可用干布清洁Grace音箱。 请勿将Grace音箱靠近明火。 请勿将Grace音箱放置于微波炉中。 <p>跌落危险</p> <ul style="list-style-type: none"> 请勿将Grace音箱或任何附件放置于汽车气囊附件，因为气囊打开时可能会使该设备造成人身伤害。 	<p>电池/充电器危险</p> <ul style="list-style-type: none"> 请勿将Grace音箱投入火中，电池可能会爆炸，引发伤亡。 只可按Grace音箱所附的用户使用说明给电池充电。 请勿在液体和潮湿的环境中或过高/过低的温度条件下给Grace音箱充电，可能会导致火灾或触电。 请勿拆解Grace音箱内置电池，可能会导致火灾或触电。 请勿在充电时清洁Grace音箱，请务必在拔掉充电器插头后清洁Grace音箱。 <p>交通事故危险</p> <ul style="list-style-type: none"> 请勿将Grace音箱长时间放置在阳光直射下。 只可用干布清洁Grace音箱。 请勿将Grace音箱靠近明火。 请勿将Grace音箱放置于微波炉中。 <p>汽车事故危险</p> <ul style="list-style-type: none"> 请勿将Grace音箱或任何附件放置于汽车气囊附件，因为气囊打开时可能会使该设备造成人身伤害。 	<p>Grace音箱提供十二个月保修服务，若在保修期内本产品正常使用下因设计、材料或工藝缺陷而出現的操作問題需要保修時給予免費保修。請與經銷商聯繫。保修只針對音箱本身，所附其他附件不屬於保修範圍。</p> <p>因如下問題，我們未能給予免費保修服務：</p> <ul style="list-style-type: none"> 由于擅自進行拆卸维修 非正常因素導致的產品損壞，如跌落、進水等因素 由挤压、刺穿、刮傷導致喇叭振膜損壞 插入非用戶指南說明許可的導物導致的損壞
安全信息		注意事项	LKER
<p>警告 請認真閱讀下面這些安全警告和注意事項，確保您的人身安全并預防財產損失。</p> <p>火災和雷電危險</p> <ul style="list-style-type: none"> 請勿將Grace音箱暴露在液体和濕潤的環境中。請勿在浴缸、水槽、桑拿房、游泳池等濕潤地方附近使用。暴露在濕潤空氣中可能導致觸電。 請勿將Grace音箱長時間放置在陽光直射下。 請勿拆卸、拆解、打開、擠壓、扭曲、烘烤、焚燒Grace音箱或向其中塞入異物。這樣操作可能導致觸電。 請勿將Grace音箱暴露於過高或過低的溫度下。 請勿將Grace音箱長時間放置在陽光直射下。 只可用幹布清潔Grace音箱。 請勿將Grace音箱靠近明火。 請勿將Grace音箱放置於微波爐中。 <p>跌落危險</p> <ul style="list-style-type: none"> 請勿將Grace音箱或任何附件放置於汽車氣囊附件。因為氣囊打開時可能會使該設備造成人身傷害。 	<p>注意事项</p> <ul style="list-style-type: none"> 请勿将Grace音箱投入火中，电池可能会爆炸，引发伤亡。 只可按Grace音箱所附的用户使用说明给电池充电。 请勿在液体和潮湿的环境中或过高/过低的温度条件下给Grace音箱充电，可能会导致火灾或触电。 请勿拆解Grace音箱内置电池，可能会导致火灾或触电。 请勿在充电时清洁Grace音箱，请务必在拔掉充电器插头后清洁Grace音箱。 <p>交通事故危险</p> <ul style="list-style-type: none"> 请勿将Grace音箱长时间放置在阳光直射下。 只可用干布清洁Grace音箱。 请勿将Grace音箱靠近明火。 请勿将Grace音箱放置于微波炉中。 <p>汽车事故危险</p> <ul style="list-style-type: none"> 请勿将Grace音箱或任何附件放置于汽车气囊附件，因为气囊打开时可能会使该设备造成人身伤害。 	<p>Grace音箱提供十二个月保修服务，若在保修期内由本产品正常使用下因設計、材料或工藝缺陷而出現的操作問題需要保修時給予免費保修。請與經銷商聯繫。保修只針對音箱本身，所附其他附件不屬於保修範圍。</p> <p>因如下問題，我們未能給予免費保修服務：</p> <ul style="list-style-type: none"> 由於擅自進行拆卸维修 非正常因素導致的產品損壞，如跌落、進水等因素 由挤压、刺穿、刮傷導致喇叭振膜損壞 插入非用戶指南說明許可的導物導致的損壞 	

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.