


WIRELESS KARAOKE SPEAKER INSTRUCTION MANUAL

THIS ARTWORK IS SOLELY TO BE USED FOR THE SUPPLY OF GOODS TO THE COTTON ON GROUP AND MUST NOT BE USED FOR ANY OTHER PURPOSE

*ARTWORK IS SHOWN AT ACTUAL SIZE PLEASE USE ACTUAL ARTWORK AS SHOWN BELOW.

DESIGNER: RM

PRODUCT

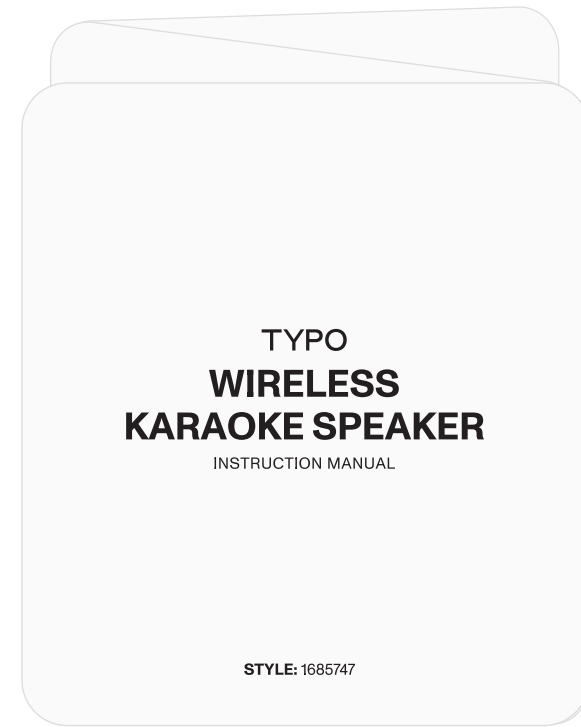

DIMENSIONS

75MM W x 85MM H

MATERIAL

UNCOATED
WHITE 80GSM

COLOURS



BLACK

KEY



DO NOT PRINT

FRONT

**TYPO
WIRELESS
KARAOKE SPEAKER**
INSTRUCTION MANUAL

STYLE: 1685747

PACKAGING CONTENTS

- 1x Wireless Karaoke Speaker
- 1x Wireless Microphone
- 1x Instruction Manual
- 1x USB Charging Cable

PRODUCT OVERVIEW - SPEAKER

- Volume down button
- Power On/Off/Play/ Pause button.
- Volume up button
- Mode function button
- Headphone jack
- TF Card Slot
- DC 5V USB-C charging port.
- LED indicator

PRODUCT OVERVIEW - MICROPHONE

- Power On/Off (long press)
- Play/ Pause button (double click)
- Reverb/ accompaniment/ mic volume adjustment.
- Volume up button (short press) / next song (long press)
- Volume down button (short press) / previous song (long press)
- Microphone sound on/off (long press)
- LED indicator
- DC 5V USB-C charging port.

PRODUCT SPECIFICATIONS

- Mic: Capacitive
- Speaker: 40 2W
- Charging Voltage: DC 5V/ 500mA
- Range: 100Hz - 10KHz
- Maximum Sound Pressure Level: >115dB 1kHz THD <1%
- Sound Mode: Reverb Mode
- Rechargeable battery: Speaker: 18650 battery/ 1200mAh
- Microphone: 602030 battery / 300mAh

CHARGING YOUR SPEAKER & MICROPHONE

- Both wireless devices are powered by an integrated rechargeable lithium battery.
- Insert the thin end of the supplied charging cable into the charging input (B) on the diagram of the wireless speaker.
- Plug the USB end of the charging cable into a USB power source.
- The LED indicator will turn red when the battery is charging.
- When the battery is fully charged, the LED indicator will switch off.
- Charge the device fully before use.

PAIRING YOUR WIRELESS SPEAKER

- Activate wireless pairing mode on the wireless speaker by long pressing the on/off button until the LED light flashes blue.
- Open the wireless settings on the device you want to connect the wireless speaker to.
- Turn on your wireless function and search for the wireless speaker name 'TYPOKARAOKE/SPEAKER' on your device and tap to connect.
- The device is successfully paired; it is then ready for use.
- Microphone Operating Instructions

WARNING & SAFETY INSTRUCTIONS

- Read the manual carefully before putting the appliance into operation and keep the manual for future reference.
- Keep the device away from heat, direct sunlight, and sharp edges.
- Keep the device away from naked flames.
- Do not insert any metal objects into the device - risk of short circuit.
- To avoid static charge, do not use the device in an extremely dry climate.
- Do not repair the unit yourself but contact an authorized specialist.
- Keep the device away from water.

Federal Communications Commission (FCC) Statement.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable Protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by Cotton On USA Inc. may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device is installed and operated without restriction.

TYPO
Designed in Australia. Made in China
www.typo.com

RECYCLE ME

	English	Thai	Chinese (S)	Arabic	Vietnamese	Indonesia	French	Italian	Spanish	Polish	Dutch	Finnish	Swedish	Danish	Norwegian	Russian	Portuguese	German
	Aus, NZ, South Africa, Singapore, HK, Lebanon, Malaysia, Philippines, Singapore, UAE, USA, Europe	Thailand	Hong Kong	Qatar, Saudi Arabia, Namshi	Vietnam	Indonesia, Zalora	Zalando, NEXT, Citadium	Zalando	Zalando, NEXT	Zalando	Zalando	Zalando	Zalando	Zalando	Zalando	Lamoda	Zalando, Brazil	Zalando, NEXT
Compliant (29/01/2020)	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○

Highlighted = Wholesaler