**ENGLISH** 

# User Manual



363144

### Contents

- 1. Photograph
- 2. Box Contents 3. Instructions
- 4. FAQs
- 5. How To Charge
- 6. Specifications

Made In China

Æ C€ X

- \* 1 X 3.5mm Audio Cable
- \* 1 X User Manual

# 1. Photograph



#### 2. Box Contents

- \* 1 X Microphone Speaker
- \*1X Charging Cable

# 3. Instructions

- 1. Switch On/Off: Press the power button and the blue light will turn on/off.
- 2. Wireless Connetion: Turn on the connection on your mobile phone. search the name MIC-123. Select and a sound will prompt when connected.
- 3. Playing Music: Open music app on your device and select song.
- 4. Adjusting Sound: Adjust bass/ echo/volume/treble on speaker control panel. Volume can also be adjusted on your device.
- 5. Start singing and have fun!

### 4. FAOs

Status	Cause	Solution
ED does not ight	Low power or charging cable not plugged in	Charge or check the charging cable
Microphone not working	Not turned on /voice volume not adjusted	Switch on or adjust the voice volume
Presence of noise	Noise and mobile signal interference	Adjust distance between mic and mobile
Sound is weak, or there is no sound at all	Phone volume too low/music file is bad quality	Increase phone volume/ music quality
Sound is distorted when playing music	Volume is too high, or battery power is too low	Lower phone volume or charge device
No reverberation	ECH key not adjsted	Adjust ECH to a suitable place

## 5. How To Charge

- 1. When the battery voltage is too low, the microphone will automatically shutdown.
- 2. Use USB cable to connect with microphone standard jack. The red light will appear.
- 3. Normal charge time is 3 hours. Once charging is complete, the red light will automatically extinguish.
- 4. Once fully charged, microphone will operate between 3-5 hours.

# 6. Specifications

Input Power /

**Output Power** 

Output Power

Maximum Sound

Pressure Level

Reverb Mode

Power Supply

**Battery Capacity** 

Charging Voltage DC5V

Microphone Capacitance

Frequency Range 100Hz - 10KHz

DC5V/500MA /

3Wx2 (Speaker

Output)

>115db 1KHz

**Echo Sound** 

Reverberation

**Built-in Li-ion** 

battery

1200-mAh

THD<1%

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

7. FCC Statement

Note: This equipment has been tested and found to comply with the limits for a Class. I B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not in stalled and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television recention, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Regrient or relocate the receiving antenna. -Increase the separation between the equipment and receiver.

receiver is connected -Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

-Connect the equipment into an outlet on a circuit different from that to which the

uncontrolled environment. This transmitter must not be co-located or operating in

FCC Radiation Exposure Statement

This device complies with FCC RF radiation exposure limits set forth for an conjunction with any other antenna or transmitter

