


Typo

Mini Speaker

Instruction Manual.

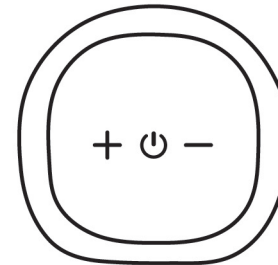


Warnings & Safety Instructions

- Read manual carefully before using this product.
 - Keep manual for future use of product.
 - Keep device away from heat, direct sunlight and sharp edges.
 - Keep the device away from naked flames.
- Do not insert any metal objects into the device – risk of short circuit.
- To avoid a static charge, do not use the device in an extremely dry climate.
- Professionals must complete any repairs.

Technical Specifications

Wireless Support: 3.0+EDR (2.4Ghz Frequency)
Transfer Distance: 10m
Transmitting Frequency: 2.4GHz
Power: DC 5V 1000mA
Output: 3W
Battery: 3.7V 300mAh
Charging Time: 3 hour
Operating Time: 2–5hours
(will vary depending on the volume level)
Rating: IPX4 Grade Waterproof

Product Overview

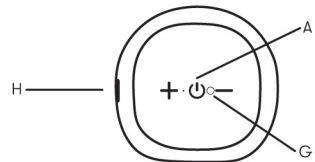

Button description

- Long press for turn on/off
- When playing music, short press for pause/play
- During the call, short press for pause/play
 - Double click will call back the nearest call
- +**
- Short press for next song
 - Long press for volume up
-
- Short press for previous song
 - Long press for volume down

Charging your Speaker

- This wireless speaker is powered by integrated rechargeable lithium battery.
- To charge, insert the charging cable provided into the charging port on the speaker (See 'H' on diagram).
- Connect the USB end of the charging cable into a PC or AC/DC adaptor.
- The LED indicator (See 'G' on diagram) will turn red when the battery is charging.
- When the battery is fully charged, the LED indicator will switch off.

Preparing your speaker to pair with your device

- Activate your speakers wireless function by turning the device on. Press and hold the ON/OFF button (See 'A' on diagram) for about 6 seconds.
- When the device is successfully switched on, the LED indicator (See 'G' on diagram) will flash red and blue alternatively. This means that the wireless function has been activated.
- Your speaker is now ready to be paired with your device.

Pairing to your Device

- Switch on your chosen device.
- Go to your devices wireless function and select **TYPONOVELTYSPEAKER** from device list.
 - If password is needed, type in '0000'.
- Your speaker should now be connected to your device.

Tips:

- Once this speaker is paired and connected to your chosen device, it will automatically connect to same device next time you switch the speaker on, as long as the wireless function on your device is switched on.

Button Descriptions

- On/Off: Long press to switch your speaker on or off
- Short press for the previous song, long press to decrease volume
- Short press for the next song, long press for increasing volume
- When receiving a call, quick press to answer the phone call. Quick press again to hang up the phone call.
 - Play/Pause music.

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference
- 2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Product Disposal

Where you see either symbol on any of our electrical products, batteries or packaging, it indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and batteries, please dispose of them in accordance with any applicable local laws or requirements for disposal of electrical equipment/batteries. By disposing of batteries and electrical waste correctly, you will help to conserve natural resources and improve standards of environmental protection.

