 








**FULLY CONTROLLED FIGHTING ROBOTS  
 TWO-PLAYER SET**

**BATTERY INSTALLATION**

**The Robot**  
 Operates on 3 x "AAA"/  
 LR03 batteries for  
 each Robot  
 (Not included).  
 DC --- 1.5V x 3  
 ("AAA" / LR03)



**Operating Control**  
 Operates on 1 x 6LR61/  
 6F22 "9V" batteries for  
 each Robot  
 (Not included).  
  
 DC --- 1.5V x 2  
 (6LR61/ 6F22 "9V")

**HOW TO PLAY**

Turn to "ON" position  
  
  
  
  
 There are sensors located beneath each robot's chest plate. The object of the game is to knock the opposing boxer's head off by making contact with the chest (thus ejecting the robot's head). To replace the head, place it face forward onto the neck and gently press down until it clicks into place.

**Caution:** changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
 - Reorient or relocate the receiving antenna.  
 - Increase the separation between the equipment and receiver.  
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
 - Consult the dealer or an experienced radio/TV technician for help.

- 1 X 27MHz Robot & Controller With Pop-up Head
- 1 X 49MHz Robot & Controller With Pop-up Head
- Full Function Radio Control

Push right lever to turn left and jab.

Push left lever up and right lever down to spin clockwise.

Push both levers up to move forward. Push both levers down to move backward.

Push left lever to turn right and hook.

Push left lever down and right lever up to spin counter-clockwise.

Robot's head ejects when chest plate is hit by opponent.

Product & colors may vary from those pictured. Assembly required, adult supervision is recommended. Keep packaging for reference as it contains important information. Keep the insert as it forms the battle platform for the two Boxer Bots.  
 Remove all fastening materials and dispose in a safe place away from small children. **WARNING:** Do not use close to ear. Misuse may cause damage to hearing.  
**WARNING. CHOKING HAZARD** - Small Parts. Not For Children Under 3 Years. **IMPORTANT:** Use alkaline batteries for best performance. Always make sure batteries are fresh. When batteries are low, the unit may not function properly. Use on a hard, flat surface for best performance.  
 Note: Before use, adjust the robots to make sure both feet have good contact with the ground before use. To reset the product, flip the switch to the OFF position and then back to the ON position. Maximum operated distance is approx. 10 feet (appx. 3 meters) with new alkaline batteries. Under the environment with fast transient / electrostatic discharge, the product may malfunction. It requires user to reset the product by removing and re-inserting the batteries.

MADE IN CHINA, SHANTOU - GUANGDONG, QTY: 1 SET

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**BATTERY SAFETY INFORMATION**

- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted in position according to polarity.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Do not attempt to burn batteries.
- Dispose of batteries safely and correctly.
- Remove batteries if the toy will not be used for a long period of time.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short circuited.
- Non-rechargeable batteries are not to be recharged.
- Batteries should be replaced under adult supervision.
- Do not dispose of in fire.
- Different types of batteries are not to be mixed.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.

تحذير: يمكن أن يسبب الاحتراق غير مناسب للاطفال تحت سن الثالثة قطع صغيرة



Environmental Protection  
 Discarded electric appliances are recyclable and should not be discarded in the domestic waste! Please actively support us in conserving resources and protecting the environment by returning this appliance to the collection centres (if available).

**Dragon-i**<sup>®</sup>  
 TOYS  
 Dragon-i Toys Ltd.  
 371 W. Tullock Street,  
 Rialto, CA 92376, U.S.A.



**D.J.K. Europe**  
**G2 Frodsham Business Centre**  
**Bridge Lane Frodsham**  
**Cheshire WA6 7FZ**  
**Please retain for future reference**  
**contact@dragon-itoy.com**