 


# alcatel

 
## PIXI 4

### QUICK START GUIDE

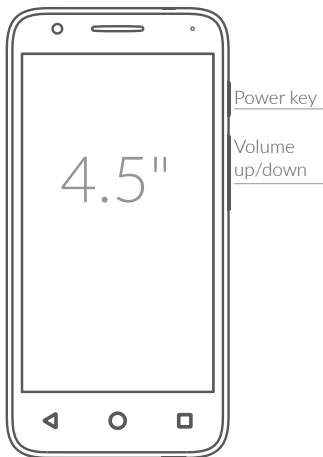 


4060S

English - CJB1H30B6AAA

 
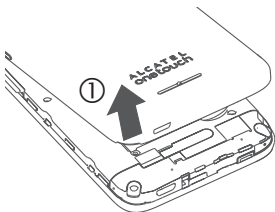 


① Removing or installing the back cover.

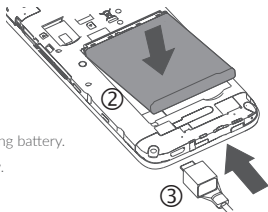

② Removing or installing battery.

③ Charging the battery.

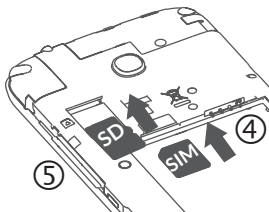

 
④ Installing or removing the SIM card.

⑤ Inserting or removing the microSD card.

⑤

# 1 Home screen .....

You can move all of the items (applications, shortcuts, folders and widgets) you use most frequently to your Home screen for quick access. Touch the **Home** key to switch to the Home screen.

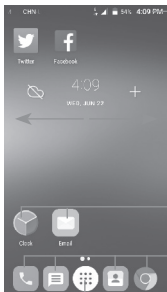

## Status bar

- Status/Notification indicators
- Touch and drag down to open the notification panel.

Touch an icon to open an application, folder, etc.

## Favourite tray applications






























- Touch to enter the application.
  - Long press to move or change applications.
- Touch to enter application list.

The Home screen is provided in an extended format to allow more space for adding applications, shortcuts etc. Slide the Home screen horizontally left and right to get a complete view.













## 1.1 Status bar

From the status bar, you can see both phone status (to the right side) and notification information (to the left side).

### Status icons

	GPRS connected		Alarm is set
	GPRS in use		Bluetooth is on
	EDGE connected		Connected to a Bluetooth device
	EDGE in use		Speakerphone is on
	4G connected		Phone microphone is mute
	4G in use		Roaming
	3G+) connected) HSPA		No SIM card installed
	3G+) in use) HSPA		Vibrate mode
	LTE connected		Battery is very low
	LTE in use		Battery is low
	Wi-Fi is on		Battery is partially drained
	Connected to a Wi-Fi network		Battery is full
	Airplane mode		Battery is charging
	Signal strength		GPS is on
	No signal		

 
## Notification icons

	New Gmail message		Missed call
	New Email message		Call forwarding is on
	New text or multimedia message		Song is playing
	Problem with SMS or MMS delivery		Connected to VPN
	New Google Hangouts message		Select input method
	Upcoming event		Radio is on
	Screenshot error		Uploading data
	Screenshot captured		Downloading data
	An open Wi-Fi network is available		Download finished
	GPS is on		System update available
	Receiving location data from GPS		Phone is connected via USB cable

Touch and drag the Status bar down to open the Quick settings panel or Notification panel. Touch and drag up to close it. When there are notifications, you can touch them to access notifications directly.

**Notification panel**


When there are notifications, touch and drag the Status bar down to open the Notification panel and read more detailed information.

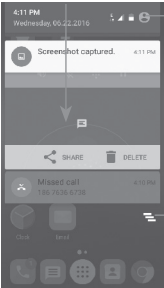 


Touch to switch to the Quick settings panel.

Touch to clear all event-based notifications (other ongoing notifications will remain).

**Quick settings panel**

Touch and drag the Notification panel down or touch  to open the Quick settings panel. You can enable or disable functions or change modes by touching the icons.

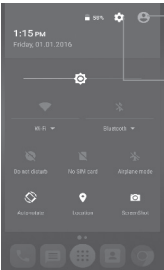

 
Touch to enter user screen.




Touch to access **Settings**.


# 2 Phone call.....

## 2.1 Placing a call

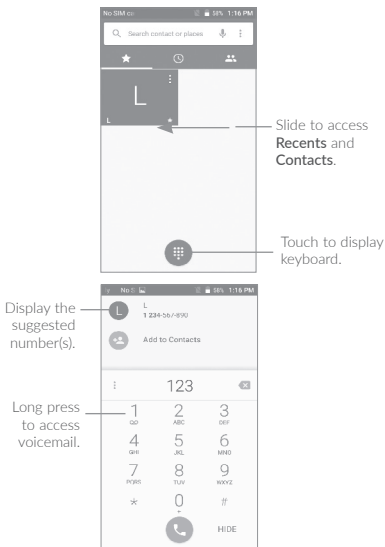To make a call when the phone is active, go to the Home screen and touch the Phone icon in the Favourites tray.



 
Enter the desired number from the keyboard directly and touch  to place the call or select a contact from  or  by sliding or touching tabs, then choose your target SIM card to make the call.

The number you entered can be saved to **Contacts** by touching  and then touching **Create new contact**.




If you make a mistake, you can delete the incorrect digits by touching .

To hang up a call, touch .
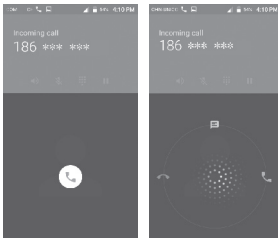
## 2.2 Answering or rejecting a call




When you receive a call:

- Slide the  icon to the right to answer;
- Slide the  icon to the left to reject;
- Slide the  icon upwards to reject the call by sending a preset message.

To mute the ringtone volume of an incoming call, press the **Volume up/down** key.

## 2.3 Consulting your call history



You can access your call memory by touching  from the **Phone** screen to see missed calls, outgoing calls and incoming calls.



## 3 Contacts.....

You can see and create contacts on your phone and synchronise these with your Gmail contacts or other applications on the web or on your phone.

### 3.1 Adding a contact

Touch  from applications list, then touch the  icon in the contacts list to create a new contact.

### 3.2 Synchronising contacts in multiple accounts

Contacts, data or other information can be synchronised from multiple accounts, depending on the applications installed on your phone.

## 4 Messaging .....

You can create, edit and receive SMS and MMS with this phone.

 
To open your Messaging, go to the Home screen and touch the Messaging icon in the Favourites tray.



To check messages stored on your SIM card, touch the  icon from the Messaging screen, then touch **Settings\ADVANCE\Manage SIM messages**.

## 4.1 Write message

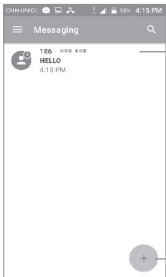


On the message list screen, touch the new message icon  to write text/multimedia messages.



- Touch to see the whole message thread.
- Long press the message to activate delete mode.

Touch to create a new message.

### Sending a text message

Enter the mobile phone number of the recipient in the **To** bar or touch  to add recipients. Touch the **Type message** bar to enter the text of the message. Touch the  icon to insert emotions or icons. When finished, touch  to send the text message.



An SMS of more than 160 characters will be charged as several SMS. Specific letters (accent) will also increase the size of the SMS. This may cause multiple SMS to be sent to your recipient.

### Sending a multimedia message

MMS enables you to send video clips, images, photos, and sounds to other compatible phones and email addresses.



An SMS will be converted to MMS automatically when media files (image, video, audio, etc.) are attached.

# 5 Gmail .....






As Google's web-based email service, Gmail is configured when you first set up your phone. Gmail on your phone can be automatically synchronised with your Gmail account on the web. With this application, you can receive and send emails, manage emails by labels, and archive emails, etc.

## To open Gmail

From the Home screen, touch the **Gmail** icon  in the Favourites tray.

Gmail displays messages and conversations from one single Gmail account at a time. If you own more than one account, you can add an account by touching the icon  and then  after your account name from the Inbox screen, then touch **Add account**. When finished, you can switch to another account by touching the name of the account you want to view.

## To create and send emails

- 1 Touch  from the Inbox screen.
- 2 Enter the recipient(s)'s email address in **To** field.
- 3 If necessary, touch the **Add Cc/Bcc** menu icon  to add a copy or a blind copy to the message.
- 4 Enter the subject and the content of the message.
- 5 Touch  icon and select **Attach file** to add an attachment.
- 6 Finally, touch the icon  to send.
- 7 If you do not want to send the mail out right away, you can touch the  icon and then **Save draft** or touch the **Back** key to save a copy. To view the draft, touch your account name to display all labels, then select **Drafts**.

# 6 Getting connected .....

To connect to the Internet with this phone, you can use GPRS/EDGE/3G/4G networks or Wi-Fi, whichever is most convenient.

## 6.1 Connecting to the Internet

### 6.1.1 GPRS/EDGE/3G/4G


The first time you turn on your phone with your SIM card inserted, it will automatically configure your network service: GPRS, EDGE, 3G, 4G.

To check the network connection you are using, touch **Settings\More\Cellular networks**, and touch **Access Point Names** or **Network carriers**.

### 6.1.2 Wi-Fi

Using Wi-Fi, you can connect to the Internet when your phone is within range of a wireless network. Wi-Fi can be used on your phone even without a SIM card inserted.

#### To turn Wi-Fi on and connect to a wireless network

- Touch **Settings\Wi-Fi**.
- Touch the switch  to turn on/off Wi-Fi.
- The detailed information of detected Wi-Fi networks is displayed in the Wi-Fi networks section.
- Touch a Wi-Fi network to connect. If the network you selected is secured, you will need to enter a password or other credentials (you can contact the network operator for details). When finished, touch **CONNECT**.