

TCL 30XL

T701DL

Quick Start Guide

Thank you for choosing TCL. This booklet helps you get started with your new device. For more information about your phone or to download the complete user manual version, please visit tcl.com/us



English - CJB2J1601AAA
Printed in China

Messages

You can create, edit, and receive SMS and MMS with this phone.

To access this feature, touch **Messages**  from the Home screen.




Touch to take a photo/video or attach a photo/video.

Touch to give access to your location, send a voice message or attach files.

Touch and hold to record audio

Touch to switch to "abc/Abc" mode;
Touch twice to switch to "ABC" mode.

Sending a message

Enter the mobile phone number of the recipient in the **To** bar or select a contact, then touch the **Text message** bar to type the text of the message. When finished, touch  to send the text message.



An SMS of more than 160 characters will be split and sent as multiple SMS. A counter will be displayed on the right of the text box to remind you of how many characters can be entered in one message. Specific letters (accent) will also increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

Sending a multimedia message

MMS enables you to send video clips, images, photos, animations, slides and sounds to other compatible phones and e-mail addresses.

An SMS will be converted to MMS automatically when media files (image, video, audio, slides, etc.) are attached or subject or email addresses are added.

Phone Setup

 
Installing or removing the SIM card and microSD™ card


Your phone already has a SIM card installed. If you need to change or remove your SIM card, follow the steps below.

- ① Use the provided SIM pin to open the SIM tray.
- ② To install SIM/microSD™ card, place the SIM/microSD™ card with the chip facing down into the SIM card tray and then slide it into its slot.
- ③ To remove SIM/microSD™ card, push up on the chip side of the cards inside the SIM tray.



Charging the battery

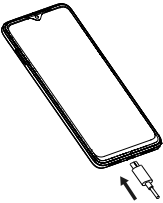

It is advised that you fully charge your battery before first use (). Connect the charger to your phone and an outlet. Charging status is indicated by the percentage on screen while the phone is powered off. The percentage increases as the phone is charged.

Power on your phone

Hold down the **Power** key until the phone powers on, unlock your phone (screen lock, fingerprint, face unlock) if necessary and confirm. The Home screen is displayed.

If you do not know your PIN/password or pattern, or if you have forgotten it, contact your service provider. Do not leave your PIN/password or pattern, with your phone. Store this information in a safe place when not in use.

Set up your phone for the first time

The first time you power on the phone, you'll be able to select your language, select a network, log in to your Google Account and Google Services, and select a screen lock option.

Power off your phone

Hold down the **Power** key from any screen until the phone options appear, select **Power off**.

Personalize your Home screen

Add

You can touch and hold a folder, an application or a widget to activate the Move mode and drag the item to any Home screen as you prefer.

Reposition

Touch and hold the item to be repositioned to activate the Move mode, drag the item to the desired position and then release. You can move items both on the Home screen and the favorite tray. Hold the icon on the left or right edge of the screen to drag the item to another Home screen.

Remove

Touch and hold the item to be removed to activate the Move mode, drag the item up to the top of the Remove icon, and release after the item turns grey.

Create folders

To improve the organization of items (shortcuts or applications) on the Home screen and the favorite tray, you can add them to a folder by stacking one item on top of another. To rename a folder, open it and touch the folder's title bar to input the new name.

Wallpaper customization

Touch and hold the Home screen then touch **Wallpapers**  to customize wallpaper.

Phone




Placing a call

Touch **Phone**  from the Home screen.



Show the dial pad

Enter the desired number from the keyboard directly, or select one of the following:

- Access frequently called or favorite contacts in **Favorites** .
- View recently called numbers and contacts in **Recents** .
- Choose a saved contact in **Contacts** .


Touch  to place the call.

To hang up a call, touch .

Answering or rejecting a call

When you receive a call:

- Swipe up to answer.
- Swipe down to reject.

- Touch  **Reply** to reject the call by sending a preset message.

 
To mute the ringtone volume of an incoming call, press the **Volume up/down key**.

Contacts

Contacts enables quick and easy access to the people you want to reach. You can view and create contacts on your phone.

To access this feature, swipe up on the Home screen, then select **Contacts** .

Adding a contact

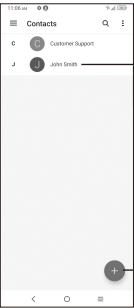

- Touch to view contact details
- Touch and hold to share or delete the selected contact

Touch to add a new contact

 
Editing a contact

To edit contact information, touch  in the contact details screen. When finished, touch **SAVE**.

Importing, exporting, and sharing contacts

From the Contacts screen, touch  to open the options menu, touch **Settings > Import/Export**, then select to import/export contacts from/to your SIM card, phone, micro SD card, etc.

Share a single contact or multiple contacts with others by sending the contact's vCard to them via Bluetooth, Gmail, etc.

Touch and hold the contact (s) you want to share, touch .

Security

Swipe up on the Home screen, then touch **Settings**  > **Security & biometrics**.

Enable your lock/unlock method: Swipe, Pattern, PIN, Password, Fingerprint, or Face Unlock.

Face Unlock will unlock your phone using the front camera to register your face.

Note: facial recognition methods may not be as secure as Pattern, Pin, or Password locks.

Data backup

This phone enables you to back up your phone's settings and other application data to the Google Server, with your Google Account.

If you replace your phone, the settings and data you've backed up are restored onto the new phone the first time you sign in with your Google Account.

To activate this function:

- Swipe up on **Home screen** > **Settings** > **System** > **Backup**.

Factory data reset

To activate factory data reset:

- Swipe up on **Home screen** > **Settings** > **System** > **Reset** > **Erase all data (Factory reset)**.
- Touch **Erase all data**.

Resetting the phone will erase all of your personal data from internal phone storage, including information about your Google Account, any other accounts on your phone, your system and application settings, and any downloaded applications. If you reset the phone in this way, you're prompted to re-enter the same kind of information as when you first set up your device.

If you are unable to power on your phone, there is another method to perform a factory data reset by pressing the Power key and the Volume up key at the same time until the screen lights up.

Getting connected

Your phone can connect to the Internet using mobile networks or Wi-Fi, whichever is convenient and available.



Network

The first time you turn on your phone, it will automatically configure your mobile network service.

Wi-Fi

Using Wi-Fi, you can connect to the Internet when your phone is within the range of a wireless network. Wi-Fi can be used on your phone even without a SIM card inserted.

To turn Wi-Fi on and connect to a wireless network

- Swipe up on the Home screen, then touch **Settings**  > **Wi-Fi**.
- Touch the switch  next to Wi-Fi to turn Wi-Fi on or off.
- Touch Wi-Fi, the detailed information of detected Wi-Fi networks is displayed in the Wi-Fi networks section.
- Touch a Wi-Fi network to connect. If the network you selected is secured, you are required to enter a password or other credentials (you may contact the network carrier for details). When finished, touch **CONNECT**.

Connecting to Bluetooth devices

Bluetooth is a short-range wireless communication technology that you can use to exchange data or connect to other Bluetooth devices for various uses.

To turn on Bluetooth

- Swipe up on the Home screen, then touch **Settings**  > **Bluetooth**.

- Touch  to activate/deactivate this function.

To pair/connect your phone with a Bluetooth device

- Touch **Settings** > **Bluetooth** > **+ Pair new device**.
- Touch a Bluetooth device you want to pair your phone with from the list.
- In the dialog that pops up, touch **PAIR** to confirm.
- If the pairing is successful, your phone will be connected to the device.



 



 




 

 




To disconnect/unpair from a Bluetooth device

- Touch  next to the device name.
- Touch  and **FORGET DEVICE** to confirm.









Status bar

From the status bar, you can view both phone status and notification information.

Status icons

	GSM		Vibrate mode
	WCDMA		Alarm is set
	LTE		Connected to a Wi-Fi network
	Signal strength		Speakerphone is on
	No signal		No SIM card inserted
	Airplane mode		Battery is charging
	Bluetooth connected		Battery is low
	Headset connected		Battery is partially drained
	GPS is on		Battery is full

Notification icons

	New Gmail message		Missed call
	New text or multimedia message		Connect to open Wi-Fi network
	Upcoming event		Uploading data
	Downloading data		System update available

Regulatory Agency Information	
FCC ID	2ACCJN055
Max. SAR (W/kg) - Head	1.42 W/kg
Max. SAR (W/kg) - Body	1.29 W/kg
HAC (Hearing Aid Compatible) & Rating	M4/T3

TCL 30XL

T701DL

Instructivo de uso

Gracias por elegir TCL. Este folleto le ayudará a familiarizarse con su nuevo dispositivo. Para más información sobre su teléfono o para descargarse el manual completo del usuario, visite tcl.com/us

 


Español - CJB2J1601AAA
Impreso en China

Mensajes

Con este teléfono podrá crear, modificar y recibir SMS y MMS.

Para tener acceso a esta función, toque **Mensajes** en la pantalla de inicio.

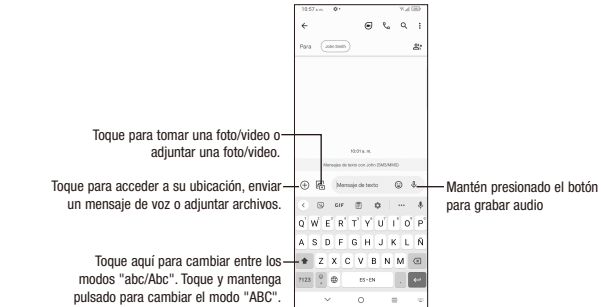

Envío de un mensaje

Ingrese el número de teléfono del destinatario en la barra **Para** o seleccione un contacto y toque la barra **Mensaje de texto** para digitar el texto del mensaje. Cuando termine, toque **Enviar** para enviar el mensaje de texto.

Los SMS con más de 160 caracteres se enviarán como varios SMS. Aparecerá un contador a la derecha del cuadro de texto para recordarle cuántos caracteres se permite ingresar en un mensaje. Los caracteres especiales (acentos) aumentarán el tamaño del SMS. Esto puede provocar que se envíen varios SMS al destinatario.

Envío de un mensaje multimedia

Los mensajes multimedia son mensajes que permiten el envío de videos, imágenes, fotos, animaciones, diapositivas y sonidos a otros celulares compatibles y a direcciones de correo electrónico.

Un SMS se convertirá automáticamente a MMS cuando se adjunten archivos multimedia (imagen, video, audio, diapositivas, etc.), un asunto o direcciones de correo electrónico.

Configuración del teléfono

 
Instalar o extraer la tarjeta SIM y la tarjeta microSD™

Su teléfono ya tiene una tarjeta SIM instalada. Si necesita cambiar o quitar su tarjeta SIM, siga los pasos a continuación.

① Utilice el pin de la SIM suministrado para abrir la bandeja de la SIM.

② Para instalar la tarjeta SIM/microSD™, insértela con el chip hacia abajo en el orificio de la tarjeta SIM y deslicela hasta insertarla en la ranura.

③ Para retirar la tarjeta SIM/microSD™, empuje la tarjeta hacia arriba por la parte del chip en la bandeja de la tarjeta SIM.

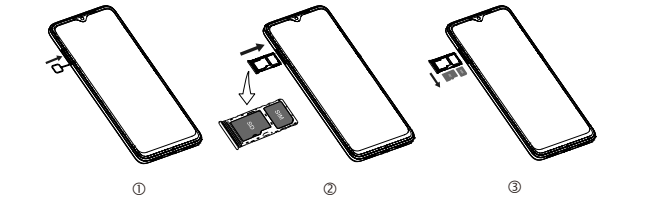

Carga de la batería



Se recomienda que cargue la batería completamente antes del primer uso (100%). Conecte el cargador al teléfono y a una toma de corriente. El estado de carga se indica con un porcentaje en la pantalla cuando el teléfono está apagado. El porcentaje aumenta a medida que se carga el teléfono.

Encender el teléfono

Mantenga presionado el botón de **Encendido** hasta que el teléfono se encienda, desbloquéelo (bloqueo de pantalla, Huella digital, desbloqueo facial) si es necesario y confirme. Se visualizará la pantalla de inicio.

Si desconoce el código PIN, la contraseña o el patrón o lo ha olvidado, entre en contacto con su proveedor de servicio. No deje el código PIN, la contraseña ni el patrón cerca de su teléfono. Guarde su tarjeta SIM en un lugar seguro cuando no la utilice.

Primera puesta en servicio del teléfono

La primera vez que enciende el teléfono, podrá seleccionar el idioma y la red, podrá iniciar sesión en Google Account y en Google Services, y podrá seleccionar una opción de bloqueo de pantalla.

Apagar el teléfono

Mantenga presionado el botón de **Encendido** en cualquier pantalla hasta que se muestren las opciones del teléfono y seleccione **Apagar**.

Personalizar la pantalla de Inicio

Añadir

Toque y mantenga pulsada una carpeta, una aplicación o un widget para moverlo y arrastrar el elemento a la pantalla de inicio.

Colocar en otro lugar

Toque y mantenga pulsado el elemento que desea colocar en otro lugar para moverlo, arrastre el elemento a la posición deseada y a continuación, suéltelo. Puede mover elementos tanto en la pantalla de Inicio como en la bandeja Favoritos. Mantenga pulsado el icono de la izquierda o de la derecha de la pantalla para arrastrar el elemento a otra página de la pantalla de Inicio.

Eliminar

Toque y mantenga pulsado el elemento que desea eliminar para activar el modo Mover, arrastre el elemento a la parte superior del icono Eliminar y suéltelo cuando cambie a gris.

Crear carpetas

Para mejorar la organización de los elementos (atajos o aplicaciones) en la pantalla de Inicio y la bandeja de Favoritos, puede añadirlos a una carpeta colocando un elemento encima de otro. Para renombrar una carpeta, ábrala y toque la barra del nombre de la carpeta para ingresar el nuevo nombre.

Personalizar el fondo de pantalla

Toque y mantenga presionada la pantalla de inicio y luego toque **Fondos de pantalla** para personalizar el fondo de pantalla.

Teléfono

Cómo realizar una llamada

Toque **Teléfono** desde la pantalla de inicio.



Ingrese el número deseado directamente desde el teclado o seleccione uno de los siguientes:

- Acceda los contactos a los que llama con frecuencia o los favoritos en **Favoritos**.
- Consulte los números y contactos a los que ha llamado recientemente en **Reciente**.
- Elija un contacto guardado en **Contactos**.

Toque **Llamar** para realizar la llamada.

Para colgar una llamada, toque **Colgar**.

Contestar o rechazar una llamada

Cuando reciba una llamada:

- Deslice hacia arriba para contestar.
- Deslice hacia abajo para rechazarla.
- Toque **Responder** para rechazar la llamada y enviar un mensaje preestablecido.

Para silenciar el volumen del tono de una llamada entrante, pulse la **tecla Subir/Bajar volumen**.

Cómo conectarse

Su teléfono puede conectarse a Internet con Red móvil o Wi-Fi, según qué opción sea más conveniente o esté disponible.

Red

La primera vez que enciende el teléfono, se configurará automáticamente el servicio de red.

Wi-Fi

Mediante Wi-Fi, puede conectarse a Internet cuando su teléfono se encuentre dentro del alcance de una red inalámbrica. Es posible utilizar Wi-Fi en el teléfono aunque no tenga una tarjeta SIM insertada.

Para activar la función Wi-Fi y conectarse a una red inalámbrica

- Deslice el dedo hacia arriba en la pantalla de inicio y toque **Ajustes** > **Wi-Fi**.
- Toque el interruptor junto a Wi-Fi para activar o desactivar la función Wi-Fi.
- Toque Wi-Fi, la información detallada de las redes Wi-Fi detectadas se mostrará en la sección redes Wi-Fi.

- Toque una red Wi-Fi para conectarse. Si la red que ha seleccionado es segura, se le pedirá que ingrese una contraseña u otras credenciales (puede entrar en contacto con el operador de red para obtener información detallada). Cuando termine, toque **CONECTAR**.

Conexión a dispositivos Bluetooth

Bluetooth es una tecnología de comunicación inalámbrica de corto alcance que le permite intercambiar datos o conectarse con otros dispositivos Bluetooth para varios usos.

Cómo activar el Bluetooth

- Deslice el dedo hacia arriba en la pantalla de inicio y toque **Ajustes** > **Bluetooth**.

- Toque **Bluetooth** para activar o desactivar esta función.

Para sincronizar o conectar el teléfono con un dispositivo Bluetooth

- Toque **Ajustes** > **Bluetooth** > **+** **Vincular nuevo dispositivo**.
- Toque un dispositivo Bluetooth de la lista con el que desee vincular su teléfono.
- En el cuadro de diálogo que aparece, toque **VINCULAR** para confirmar.
- Si se realiza correctamente la sincronización, su teléfono se conectará al dispositivo.

Para desconectar o desincronizar el teléfono de un dispositivo Bluetooth

 
- Toque **Desconectar** junto al nombre del dispositivo.
- Toque **OLVIDAR DISPOSITIVO** para confirmar.

Contactos

Contactos permite acceder de forma rápida y fácil a las personas con las que desee ponerse en contacto. Puede ver y crear contactos en su teléfono.

Para acceder a esta función, deslice el dedo hacia arriba en la pantalla de inicio y seleccione **Contactos**.

Añadir un contacto

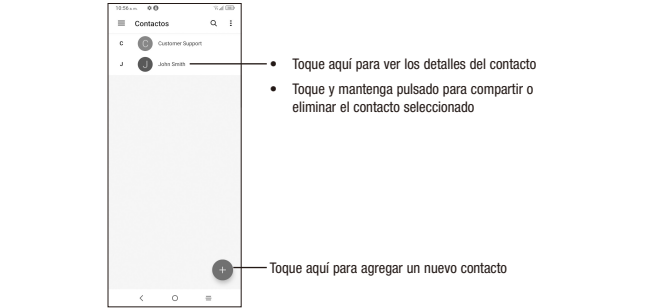

Editar un contacto

Para editar la información de un contacto, toque **Editar** en la pantalla de detalles del contacto. Cuando haya terminado, toque **GUARDAR**.

Importación, exportación y uso compartido de contactos

En la pantalla Contactos, toque **Importar/Exportar** para abrir el menú de opciones, toque **Ajustes** > **Importar/Exportar**, y luego seleccione si desea importar o exportar contactos de/a sus cuentas, tarjeta SIM, teléfono, tarjeta microSD, etc.

Comparta uno o varios contactos con otras personas enviando la información del contacto a través de Bluetooth, Gmail, etc.

Toque y mantenga pulsados los contactos que desea compartir, toque **Compartir**.

Barra de estado

En la barra de estado puede ver tanto el estado del teléfono como la información de las notificaciones.

Iconos de estado

2G	Modo vibración
3G	Alarma configurada
4G	Conectado a una red Wi-Fi
Intensidad de la señal	Altavoz activado
Sin señal	No hay ninguna tarjeta SIM insertada
Modo vuelo	Batería en carga
Bluetooth conectado	Nivel de batería bajo
Auriculares conectados	Batería parcialmente vacía
GPS activado	Batería llena

Iconos de notificación

Nuevo mensaje de Gmail	Llamada perdida
Nuevo mensaje de texto o multimedia	Conectado a una red Wi-Fi abierta
Evento próximo	Subida de datos
Descarga de datos	Actualización del sistema disponible

Identificaciones de las Agencias Reguladoras	
ID de FCC	2ACCJN055
Max. SAR (W/kg) - Cabeza	1,42 W/kg
Max. SAR (W/kg) - Cuerpo	1,29 W/kg
Compatibilidad con audífonos (HAC)	M4/T3