

**NOTE:** Supported music files include MP3, WAV, FLAC, APE, OGG formats. If you cannot play any music file ensure that it is saved in one of these formats.

#### VIDEO MODE

1. Navigate to the Video menu and press the Menu Select button to open the menu.
2. Select the video file and press the Play/Pause button to begin playback or to pause the current video being played.

**NOTE:** This MP3 player only supports AVI formatted videos. Support video resolution: 160x128, orientation: 90°.

#### RECORDINGS MODE

1. Navigate to the Recordings menu and press the Menu Select button to open the menu.
2. Navigate and select one of recording options: Start voice recordings/Recordings Library/High Quality/Normal Record. Press the Menu Select/Play/Pause button to select a recording option.  
**Start Voice Recording:** to begin recording press the Play/Pause to start recording. Once done press Voice Control button to save.  
**Recordings Library:** press the left/right navigation buttons to select a saved recording. Press the Play/Pause button to play the recording.

#### FOLDER MODE

1. Navigate to the Folder menu and press the Menu Select button to open the menu.
2. This mode allows you to view all the media files stored on your TF card.

#### RADIO MODE

1. Navigate to the Radio menu and press the Menu Select button to open the menu. To use this mode plug in a pair of aux headphones, this works as an antenna for your MP3 player.
2. Navigate and select one of radio options: Radio Bands/Preset FM Stations/Auto Search FM/Clear All Preset FM. Press the Menu Select/Play/Pause button to select a radio option.  
**Radio Bands:** Normal/Japan/Europe.  
\* USA Bands: FM: 88-108MHz, AM: 530-171KHz.  
**Preset FM Stations:** Select pre-tuned stations.  
**Auto Search FM:** Automatically search available stations.  
**Clean All Presets FM:** Yes/No.

#### ALARM MODE

1. Navigate to the APP Mode and press Play/Pause Button to open the Alarm.
2. Navigate and select one of alarm options: Alarm on/off/Add Alarm/Alarm Cycle. Press the Menu Select/Play/Pause button to select an alarm option.  
**Alarm On/Off:** turn alarm on and off  
**Add Alarm:** use the navigation buttons to set an alarm.  
**Cycle Alarm:** press to set your alarm cycle from Once/Daily/Working Day.

#### SETTINGS MODE

1. Navigate to the Settings menu and press the Menu Select button to open the menu.
2. Navigate and select one of setting options: Language/Date & time/Brightness/Backlight Timer/Idle Shutdown/Timed Shutdown/Information/Storage status/Factory Settings/Update Playlist/Formatting an SD Card.  
**Language:** select one of seven languages.  
**Date & time:** Set the date and set the time.  
**Brightness:** Adjust the brightness from 10-100.  
**Backlight Timer:** Always on/Backlight Timer/Screen Saver/Screen Saver Time.  
**Idle Shutdown:** Idle Shutdown on/off, Set the idle shutdown time.  
**Timed Shutdown:** Timed shutdown on/off, Set timed shutdown time.  
**Information:** Device information.  
**Storage status:** TF card total capacity and remaining capacity.  
**Factory Settings:** set device to factory settings.  
**Update Playlist:** Yes/No.  
**Formatting an SD Card:** Yes/No

#### SAFETY INFORMATION

Do not attempt to disassemble the device. Doing so, may result in an electric shock. Do not use this device on an aircraft or in a hospital. Do not expose this device to direct sunlight, heat or open flame. Device may become warm while charging.

#### CAUTION

Any changes or modifications to this device, not expressly approved by the party responsible for compliance, could void the user's authority to operate this device. This device and its antennal(s) must not be co-located or operated in conjunction with any other antenna or transmitter.

**This device complies with part 15 of the FCC Rules.**

**Operation is subject to the following two conditions:**

1. This device may not cause harmful interference
2. This device must accept any interference received, including interference that may cause undesired operation.

UP-TECH



INSTRUCTION MANUAL

#### INSTRUCTION MANUAL

Thank you for purchasing the UPTECH MP3 Music Player. Please take the time to read this manual carefully, even if you are already familiar with a similar product. In addition, please store this guide for future reference.


#### PRODUCT SPECIFICATIONS

Battery: 200mAh  
Screen: 1.8-inch TFT  
Earphone Jack: 3.5mm  
Memory Card: 16GB  
Playing Time: 3-4 hours (60% Volume)  
Music Format: MP3, WAV, FLAC, APE, OGG  
Video Format: AVI (Support Resolution: 160x128, Orientation: 90°)

#### INCLUDES:

1 (one) MP3 Player  
1 (one) Micro USB cable  
1 (one) 16gb Micro SD Card  
1 (one) User manual  
(Earbuds sold separately)

#### PRODUCT DIAGRAM

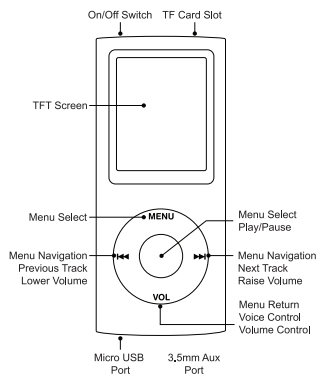

#### BASIC OPERATION

1. Before using the MP3 player it is recommended that you charge the battery for 2 hours. Note: this device is fully functional while charging.
2. To power the device on move the switch, located on the top of the device, from right to the left.
3. Once On use the left and right navigation buttons to scroll through the menu options: Music, Video, FM Radio, Pictures, Ebook, Recorder, Folder, Settings, APP, Bluetooth.
4. Press the Menu Select button to access that menu's options.
5. Use the left and right menu navigation button to scroll through the menu options.
6. To exit the menu and enter the main screen press the Menu Return Button.

#### BLUETOOTH CONNECTION

1. Navigate to the Bluetooth menu and press the Menu Select button to open the menu.
2. Navigate and select one of setting options: Bluetooth/ Paired Device / Available Device.
  - Bluetooth: turns the Bluetooth function on and off.
  - Paired Device: while Bluetooth is on the paired devices name will be displayed.
  - Available Device: while Bluetooth is on this menu will display the nearest pairable devices.

#### NOTE:

1. Before connecting a Bluetooth device to this MP3 player, ensure it is disconnected from any other paired device.
2. If you are having difficulties searching and connecting to a Bluetooth device, restart this device and turn Bluetooth back on.
3. This device is a Bluetooth transmitter, it can connect to Bluetooth enabled speakers, headphones and earbuds, but cannot connect to other MP3 players or cellular phones.

#### MEDIA TF CARD TRANSFER

There are two methods to transfer media onto the MP3 player's TF Card. Follow the steps below.

1. Connect the MP3 player to your computer via the provided Micro USB cable.
2. Locate the MP3 player in your computer's directory and transfer your files onto the TF card.
3. Once fully transferred you may disconnect the MP3 player from your computer.

4. If you have any problems transferring files to the TF card, turn the MP3 player off and remove the TF card and reinsert then restart the device.
5. You may also transfer files directly to the TF card if you have a card reader.
6. To do so simply insert the provided card into your reader, locate the drive on your computer and transfer your files.
7. Once transferred, eject the card and install into the MP3 player.

#### EBOOK MODE

1. Navigate to the Ebook menu and press the Menu Select button to open the menu.
2. To open and begin reading your text file press the Play/Pause button once you have selected a text file.

**NOTE:** If you encounter garbled characters in your text file, open and resave the file on your computer as a "txt" file.

#### MUSIC MODE

1. Navigate to the Music menu and press the Menu Select button to open the menu.
2. You may play your media via one of several options: All songs, Last played/Playing Now, Artists, Albums, Favorites, Updated Playlist. Press the Menu Select/Play/Pause button to select a playback option.
3. To play and pause your music press the Play/Pause button once you have selected a playback option.
4. To adjust the volume, press and hold the volume control button, then press the left lower volume or the right raise volume buttons to raise or lower the volume.
5. Switch between songs by pressing Previous Track or Next Track buttons. Fast forward or rewind songs by pressing and holding the Previous Track or Next Track buttons.
6. While a song is playing press MENU button to access playback settings.

**Back to the Main Page:** Back to the Main Menu page directly.

**Variable Speed Playback:** -9 to 9 speeds.

**Play Mode:** Loop All/Shuffle/Loop Single/Sequential Play.

**AB Explain:** While playing audio hold down the MENU key. Long press the first time to set the point A. Long press the second time to select the point B.

Then start the repetition loop. Long press the MENU key again.

**Bookmark:** Add bookmark/Go to bookmark/Delete bookmark.

**Add to Playlist:** Yes/No

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC radiation exposure requirement set forth for an uncontrolled environment.