

SPECIFICATIONS:

Input sourceLine
Line / MIC IN 1/4" TRS or XLR
Control ButtonsPower, Bluetooth pairing, Volume knob, EQ Controls,
AUX / MP3 Level, Line Level, 6pcs

LED indicatorPeak indicator / Power indicator
BatteryNo
Power InputAC120V, 60Hz
Auto StandbyNo

Auto Power offNo
Speaker Output wattage800W
Speaker Driver size 18" (woofer) + 4.5" (Tweeter)
Speaker Grill FinishingMetal

Full RangeYes
MAX SPL..... 120dB/128dB(peak)
THD+Noise..... < 10%
S/N > 75dB
Cabinet MaterialPlastic
Dimension24.2"x21.6"x34.3"
Weight(KG)63lbs

Operating Temperature
Operating Temperature Range 32F to 104F
Operating Humidity Range40~90%
Storage Temperature Range-13F to 158F

Key

power On/Off key.....Power on:Switch "Power"Key to "I"
Power off: Switch "Power"Key to "O"

Bluetooth

Bluetooth Profile.....A2DP,AVRCP
Bluetooth Frequency Branc.....2.402GHz~2.480GHz
Bluetooth Range.....15m

Connections

XLR or 1/4" Jack Mic / Line In..... Yes
AC OutNo

EDISON™ PROFESSIONAL

ST-5000MKII User Manual



FOR QUESTIONS OR TECHNICAL SUPPORT

Please call:

(888)604-8881

Please do not return this product to the store.

TABLE OF CONTENTS

LIMITED WARRANTY	2
IMPORTANT SAFETY INSTRUCTIONS	3
UNPACKING	4
PARTS	5
CONNECTING A MICROPHONE OR OTHER DEVICE	6
CONNECTION USING MIC INPUT.....	6
TROUBLESHOOTING	7
SPECIFICATIONS	8

Limited Warranty

This Limited Product Warranty is provided by BriteLite Enterprises. BriteLite warrants to Customer that the product is free from defects in materials and workmanship under normal use during the Warranty Period of 90 days for parts and 1-year labor. If the product fails to conform to the warranty then BriteLite or its authorized service will either repair or replace any nonconforming product, provided that Customer gives notice of noncompliance within the Warranty Period to BriteLite by emailing service@britelite.net or calling 310-363-7110 (Mexico customers can call 0155 4624 0251). Please retain the original dated receipt as evidence of proof of purchase.

Please do not return the product to the dealer or place of purchase.

Contact BriteLite directly for warranty support.

Telephone: (888)604-8881

Troubleshooting

No Power

- First check to make sure the speaker is plugged in to a live AC outlet.
- Make sure the POWER switch is on.

No Sound

- Make sure input LEVEL control turned up.
- Make sure signal source is working and the connecting cables are in good shape and securely connected at both ends. Make sure the output volume control on the mixing console is turned up.
- Make sure the preamp or mixer does not have a Mute button engaged.

Bad Sound – Noise - Humming

- If the sound is loud and distorted, verify that the levels are set properly on the speaker and mixing console.
- Make sure all connectors are secure and they are plugged in to the proper connector (i.e., Mic cable plugged in to MIC input, Line level source plugged in to Line Level Input.
- It is a good idea to periodically clean all electrical connections with a non-lubricating electrical contact cleaner.
- Make sure none of the signal cables are routed near AC cables, power transformers or other electrical power cords.
- If humming occurs, turn the LEVEL control of the speaker all the way down. If the noise disappears, its coming from the signal source. If not, try disconnecting the cable connected to the INPUT jack. If the noise disappears, it could be a ground loop, the following ideas:
 - o Use balanced connections throughout your system for best noise rejection. (XLR cables, balanced jacks; RCA cables are not balanced)
 - o Whenever possible, plug all the audio equipments power cords into the same outlet.
 - o The hum may appear when using an unbalanced source (CD player, iPod, etc.). You can use an RCA to XLR adapter to turn an unbalanced cable to a balanced cable.
 - o If the hum persists, try removing components one at a time from the back of the mixer and check each for hum. Reducing the Bass or Treble levels may reduce humming.

Care and Maintenance

Your active speakers will provide many years of reliable service if you follow these guidelines:

- Avoid exposing the loudspeaker to moisture. If they are set up outdoors, be sure they are under cover if you expect rain.
- Avoid exposure to extreme cold. If you must operate loudspeakers in a cold environment, warm up the voice coils slowly by sending a low-level signal through them for about 15 minutes prior to high-power operation.
- Use a dry cloth to clean the cabinets. Only do this when the power is turned off.
- Avoid getting moisture into any of the openings of the cabinet, particularly where the drivers are located.

- If you don't search the Bluetooth, press and hold **■** button for 3 seconds to make a new pair.
- If the computer needs to be connected to the device, it is necessary to install the bluetooth management software. If not, it only can connect and can not transmit the audio. Also, if fail to find the "Bluetooth", pls press the button for two or three seconds, then you can find it.

USB Charging / Folder function

A.USB Charging mobile device

The ST-5000MKII Has a built in USB battery bank. In order to use this feature you must use your mobile device's USB cable (iphone or Android) and connect it to the USB port on the ST-5000MKII.

B. Folder function

In USB / SD mode, long press the **▶/||** button to enter the folder selection page, press the **◀◀** & **▶▶** button to toggle the folder selection

CONNECTION USING MIC INPUT

- These balanced inputs accepts a standard XLR and a 1/4" Jack phone plug.
- A board range of signals from microphones, audio(CH1) mixing consoles and electronic musical instruments may be connected here.
- The sensitivity of these inputs are controlled by the MIC/LINE switch.drivers are located.

EQ

 
Boost: setting low frequency and high frequency equalization is applied.

Flat: the neutral setting with no extra EQ applied and should be utilized in most typical PA applications.

Cut:it cuts away low frequency from the systems response.



CONNECTING A MICROPHONE OR OTHER DEVICE

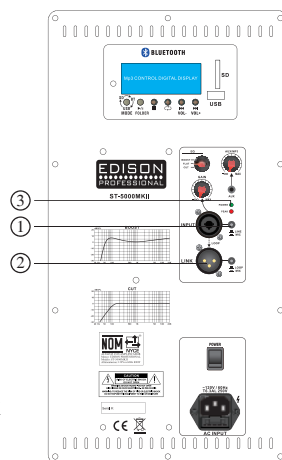- For this unit you can connect a mixer or microphone directly into your speaker. To connect a microphone use an XLR or 1/4" jack connector to connect to the MIC (1) input.
- To connect a CD player, turntable or mixer use an XLR or 1/4" Jack connector to connect to the LINE IN (1) input. If connecting a powered mixer use the mixers line level signals only.
- You can LINK additional speakers using the LOOP/MIX OUT(2) connection. The amplifier on your speaker will only power this speaker. If you LINK to additional speakers those speakers must be self amplified.
- Turn on your mixer/microphones or other signal source, then turn on your unit, the Power Indicator (3) will be lit. Now you can adjust your volume controls to a reasonable level



IMPORTANT SAFETY INSTRUCTIONS:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, PRCEPTACLE OR OTHER OUTLET UNLESS THE BLADE SCAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OF SHOCK HAZARD, NO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOIST.

 <p>The Lightning flash with arrow-head symbol, within an equilateral triangle is intended to alert the user to the presence of insulated " dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p>CAUTION</p> <p>RISK OF ELCCTRIC SHOCK DO NOT OPEN</p> <p>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.</p>
---	--	--

Important Safety Instructions:

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the tripod sold with the apparatus.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.

16. Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.

17 The apparatus shall not be exposed to dripping or splashing and that no objects filed with liquids, such as vases, shall be placed on the apparatus.

18. Protective earthing terminal. The apparatus should be connected to a mains socket outlet with a protective earthing connection.

19. Minimum distances 10mm around the apparatus for sufficient ventilation.

20. The ventilation should not be impeded by covering the ventilation openings with items, newspapers, table-cloths, curtains, etc.

21. No naked flame sources, such as lighted candles, should be placed in the apparatus

22. The use of apparatus in moderate climates.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture

Unpacking

 
Check that you have all of the following items.

If any item is missing, please contact the customer service hotline for assistance. The hotline number is printed on the cover page of this user manual.

- ST-5000MKII
- AC Power Cable
- User Manual(with Warranty Statement)
- Quick Start Guide
- Speaker Stand

Stand Instruction

1. Tube Height
2. Locking Pin
3. Securing bolt height tube
4. Retaining bolt tripod foot
5. Stand Height: 63" (1.6M)
6. Three detachable legs

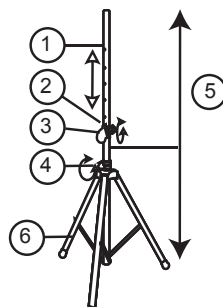

Stand Mounting: the speakers are compatible with standard 1-1/2" (38mm) stands.

- Speaker stands must only be used on smooth level surfaces.
- Be certain you select a stand rated for at least 40lb. Contact your dealer for recommendations.
- Never mount more than one speaker on a stand.
- Add weight (i.e. sandbags) to the base of the stand for added stability. In a windy outdoor location this is vitally important!
- Do not attempt to mount the speaker on a stand without an assistant.

1. Mount the speaker on its stand prior to making any electrical connections.

2. Check that the set screw in the speaker base is backed out enough to clear the stand post.

3. After placement, verify that the stand post is fully seated in the speaker base.

4. Tighten the set screw (by hand) to lock the speaker in place. Failure to do so may result in injury or equipment damage.

WARNING! BE CAREFUL OF THE UNFOLDER STAND TO PREVENT THE SERIOUS INJURY IN CASE OF TIP OVER.

Part Description:



GETTING STARTED

 
Power On/Off Switch

- Power on the mechanical
- Turn Power switch on
- The power LED will turn on

Power connection

- Connect the supplied A/C cord to the speaker
- Plug the A/C cord into the wall outlet

- The unit will enter into Bluetooth mode, Bluetooth LED will flash blue.

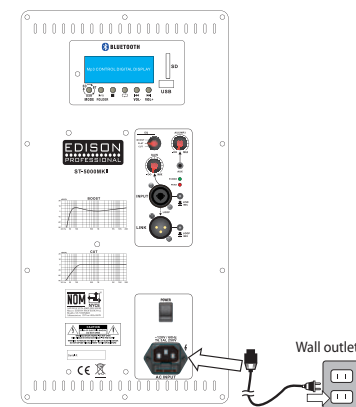

Bluetooth Connection / Pairing / NFC

A. Bluetooth Connection

- Make sure device (iPod, MP3 player, etc.) Bluetooth function is enabled.
- On the speaker, press the M button to select Bluetooth function, then your device and speaker should be connected.
- Make sure to choose BLUETOOTH from your device to complete the connection.
- Only one Bluetooth device can be connected to the ST-5000MKII speaker at a time.

B. Bluetooth Pairing

- Please search Bluetooth device on your mobile device, which name is "BLUETOOTH", after searching with it, you can click the "connection" and enter into "0000" if required.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.