

The normal control method of aircraft:

	 rising falling	When the throttle lever is pushed upward, the aircraft rising; When the throttle lever is pushed downward, the aircraft falling.
	 turn left turn right	When the throttle lever is to the left, the aircraft turn left; When the throttle lever is to the right, the aircraft turn right.
	 forward back off	When the throttle lever is pushed upward, the aircraft forward; When the throttle lever is pushed downward, the aircraft back off.
	 fly to the left fly to the right	When the throttle lever is to the left, the aircraft fly to the left; When the throttle lever is to the right, the aircraft fly to the right.


Tip: press the "speed switch" can realize fast, medium speed, slow switching .

The control method of aircraft rollover:

	 forward somersault backward roll	Flip button press once, a direction rod to push up the moment release, aircraft forward somersault; Flip button press once, a direction rod to push down the moment release, aircraft backward roll.
	 roll left roll right	Flip button press once, a direction rod to push left the moment release, aircraft roll left; Flip button press once, a direction rod to push right the moment release, aircraft roll right.

Tip: please send aircraft to fly to 1.5 meters or more height, then the rolling manipulation.

Aircraft parts diagram:

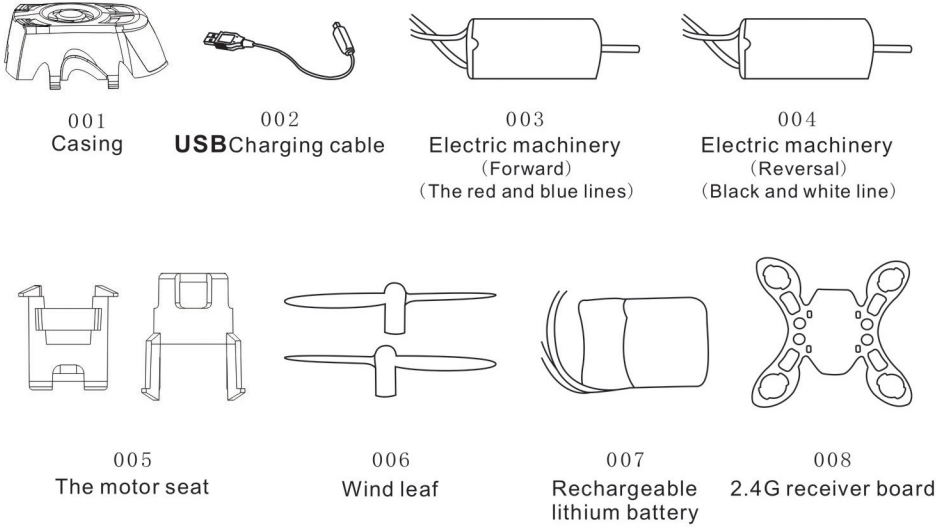

WARNING:

\* Please follow the instructions for correct installation and use, some parts are assembled by an adult.

\* The product contains small parts, eating or possible choking hazard.

\* Please put away the packaging material, so as not to cause harm to children.

\* Need to periodically check the charger, wires, plugs, shell and other components, there are damaged, should stop using, complete until the repair.

\* Charger, battery box charging device needs to be inserted into the specified power and labeling of the same.

\* Use only original configuration charger, charger is not a toy.

\* In the clean toys shall be disconnected from the battery charger.

\* Non rechargeable batteries are not rechargeable.

\* To charge the rechargeable battery, need adult care.

\* Do not mix old and new batteries or batteries of different types, the exhausti on of battery should be removed timely.

\* Do not put the battery short circuit, decomposition, Falling from high altitude Or thrown into the fire.

\* Do not use the product for a long time, remove the battery.

\* Do not touch the rotating parts, avoid harm to human body.

\* Please don't impact or dropping aircraft and remote control.

\* Please use a clean soft cloth to clean the product.

\* The user has the responsibility to ensure that the product will not cause harm to th emselves or others, caused by improper operation of injuries and property on the ir own or others' safety caused by the los s, manufacturers and dealers do not bear any responsibility.

\* The packaging and instructions contain important information of products, please be retained.