

# User Manual

FCC ID: 2ACJAPLT9606G

Shenzhen Harmony Technology Co.,Ltd.

Block 2, Jiayuan Industrial Zone, Heping Communit

high-tech park, No 2 Fuyuan Road, Fuyong, Bao'an, Shenzhen, China

**Please read these instructions for use and have a good look at the illustration before using.**



Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Dear customer,

At the first beginning, thank you for choosing our products.

Read all the information provided before usage. For your convenience, designed to introduce you the functions of the product, the manual will help you acquire more on the introduction and usage for a better use.

For loss and damage of personal data caused by misoperation of software/ hardware, maintenance or other unexpected conditions, we take no responsibilities, nor are responsible for other indirect consequent loss.

Meanwhile, misunderstanding to the manual is possible and uncontrollable by us. Herein, for unexpected loss in using the manual, we take no charge, nor take the charge of third-party claim.

Information in the manual is specially designed for current products without prior notice to updating of new functions.

Copyright reserved. No photocopy or copy is permitted prior to written authorization by us.

We hold the final power of interpretation to the manual, guarantees and related data.

(Note: We ask your allowance for faults and omission which may exist in making the manual and welcome your criticism and correction. For the problems in usage, please contact our service line (please add your own service line). Thanks for your support and cooperation. )

Again we show our thanks for choosing our products. Please keep attention to other products of our company.

**Notices:**

1. Keep the product away from high magnetic fields, which may cause damage to it. The equipment is not waterproof. Please keep it dry.
2. Care the machine not to fall down or hit against hard things, otherwise surface damage, data loss or other hardware damage is likely to be resulted in.
3. Not expose the machine in wet condition or rain. Water or damp in the machine may cause equipment failure, so far as to unrepairable
4. Neither the chemical reagent nor the cleaning reagent is permitted to clean the machine. Surface may be damaged and paint may be corroded.
5. Not to use the machine continuously with earphones under high volume. Adjust it to a suitable securable volume. For your hearing, control your usage time. Usage under over-high volume may cause permanent injure to hearing.
6. Not turn off the machine during software updating or uploading & downloading. Data loss or program errors may be resulted.
7. Overload power, bending forcefully or extrusion of the lines against weight are not allowed. Heat may cause fire.
8. Some films, music or pictures may be preserved with copyright. Unpermitted broadcasting of those is against the copyright law.
9. Not use the machine at gas station. Nor use the machine near fuel or chemicals.
10. Only qualified maintainers is allowed to fit or repair the machine
11. Use original accessories. Not use unmatched products
12. Save a copy of the important information of the machine or keep a manuscript in case of losing.
13. Read the user manual for detailed instruction of securable usage when link with other devices. Not link with unmatched products.

# Table of Contents

Table of Contents .....	3
Features .....	3
Unit at a Glance .....	4
Getting Started .....	5
About Applications .....	7
Preinstalled Applications .....	7
Connecting to the Internet .....	8
Email .....	10
Transferring Files .....	11
Troubleshooting .....	12
Specifications .....	13

## Features

Browse the Web. Visit your favorite websites

Check your e-mail Keep in touch with friends and family

Watch YouTube™ videos Browse the world's most popular video-sharing community

Read your favorite books Download thousands of books with the included E-book reader \*

Discover thousands of apps for Android™ Games, applications, and more with marketplace  
(need for customer installed)

Connect to the Internet wirelessly High-speed Wi-Fi 802.11 b/g/n networking

Enjoy your media library anywhere

 
Portable powerhouse plays popular music, video, and photo formats microSD memory card reader  
Increase your storage capacity (up to 32 GB supported)

Built-in camera Convenient front-facing camera

Automatic orientation detection Read any way you want; the display adjusts automatically!

Reading books in the ePub format requires the included E-book reader application.

# Unit at a Glance

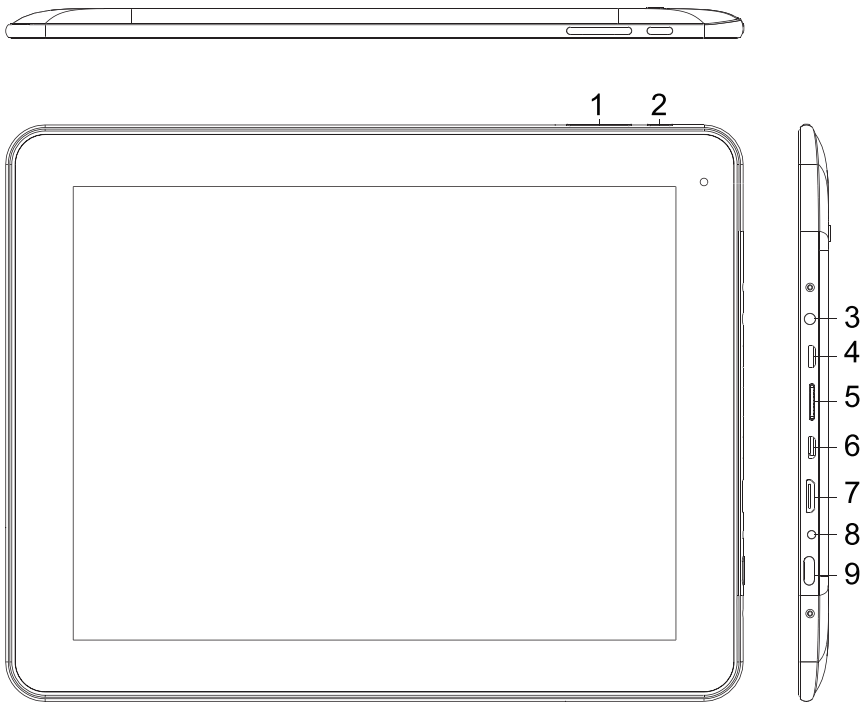

## 1. V-/V+

Press this button to adjust the volume

## 2. ESC

Press this button to return to a previous screen.

## 3. Headphone

Audio output connection for headphones.

## 4. USB

Connect to a computer to transfer data (e.g. music, videos, photos, files).

## 5. microSD

Load external microSD memory cards here.

## 6. USB HOST

Connect to a USB device

## 7. HDMI

## 8. DC IN 5V

Change and power the tablet with the included power adapter.

## 9. POWER

Press to turn the unit on, or to turn the screen on or off. Press and hold to access the Power Off menu.

# Getting Started

 
## Turning the Tablet on or off

To turn the tablet on:

Press and hold the Power key until the LCD screen turns on. Wait until the Home screen appears; the tablet is now ready for use.

To turn the tablet off:

1. Press and hold the Power key until the power off menu appears.

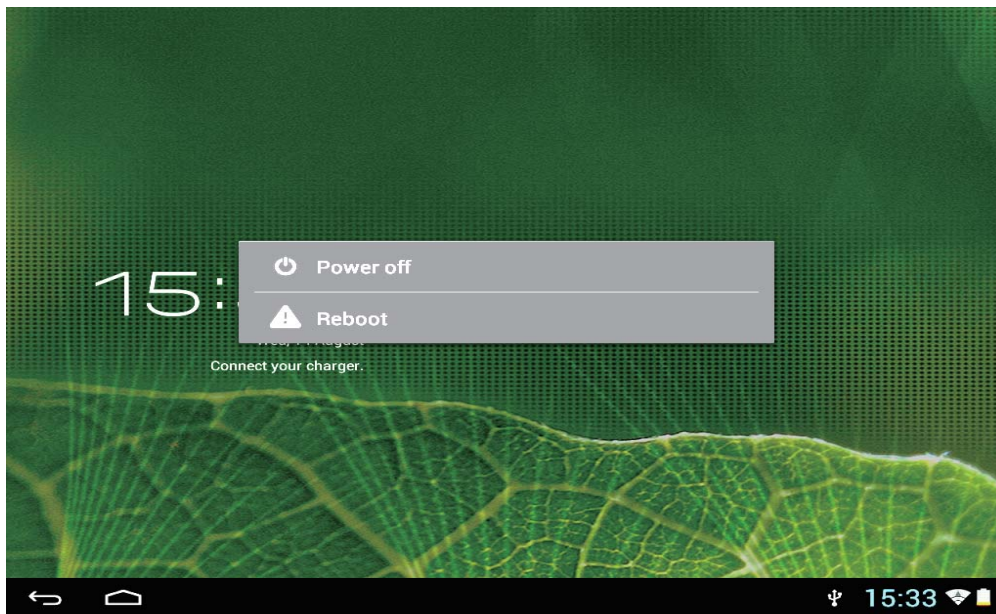

2. Touch ok the screen to turn off the tablet.

## Turning the Screen On or off (Standby)

When the tablet is on, you can turn off the screen to conserve battery power. Simply press the Power key once to turn the screen off. Press the Power key again to turn the screen back on.

 


To conserve battery power, the screen can be set to turn off automatically when the tablet is not in use (between 15 seconds and 30 minutes). This Screen timeout option can be found in the Display menu.

# Getting Started

## Unlocking the Screen

When the screen turns off, you will have to unlock the screen when you turn it back on. To unlock the screen, drag the lock icon across the screen towards the slide lock icon towards right side of the screen where there is an unlock icon shown. This will unlock tablet.

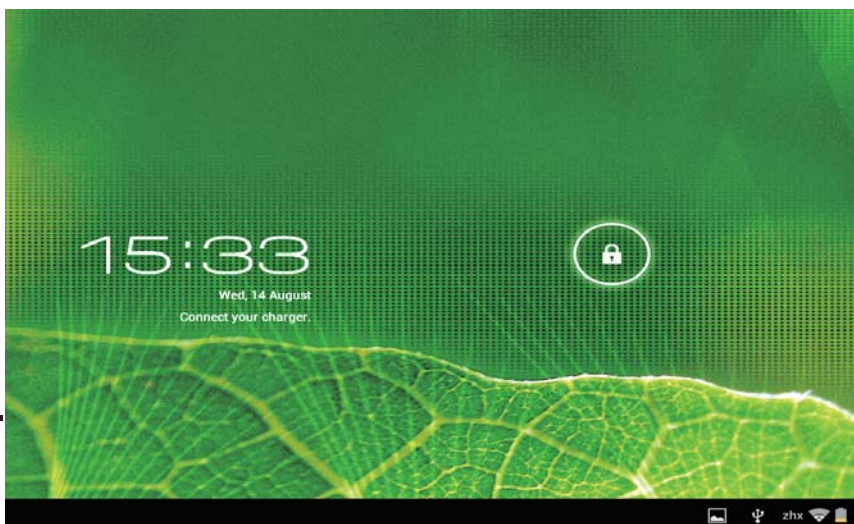

## About Applications

To open an application, touch the application icon on the home screen or in the Launcher where you can tap the icon right up on the home screen to get in..

Launcher screen:



The screen shown above is for illustrative purposes only. Reserves the right to modify and improve the final list of applications available on the tablet.

# About Applications

## Preinstalled Applications

Some applications have been installed on your tablet for your convenience. These applications include:



Browse the web.



 
Perform simple mathematical operations.




Take pictures or videos with the frontfacing camera.



Check your e-mail.

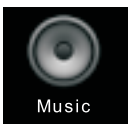

Play music.

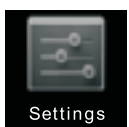 

Access the Settings menu to adjust the tablet's options.

## Preinstalled Applications

### Installing Applications

 

You can also download and install additional applications from the device's applications marketplace, the web browser, or other sources.


The tablet must be set to allow installation of applications from non-Market sources. The Unknown sources option can be set in the Application settings menu.





# Connecting to the Internet

## Connecting to Wireless Internet

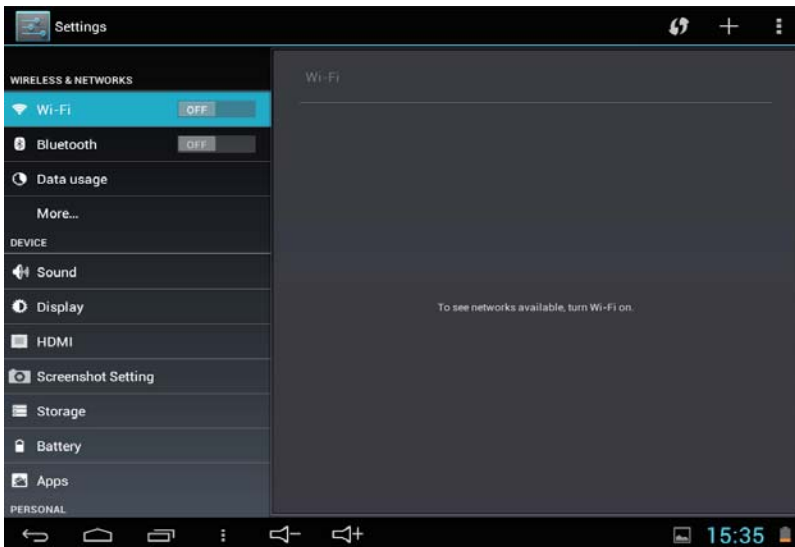 
1. Press the Settings  icon.
2. Locate the Wi-Fi  setting and slide it to the On position.




3. Select a network from the list of available networks. To refresh the list of available networks, press the Scan  button.
- To manually add a network, select the Add Network  button.
4. Select Connect from the pop up menu.



 5.If the network is secured with a password, enterthe password to continue.

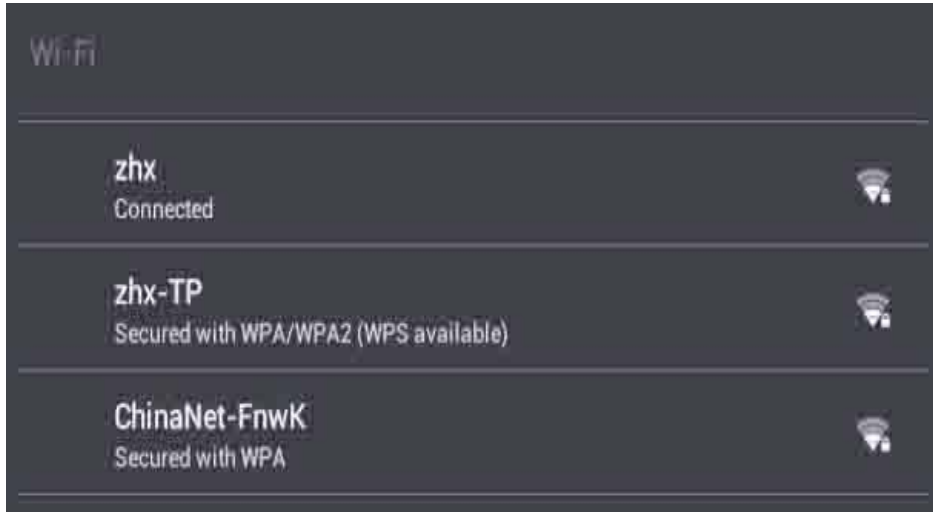

 6.Once finished connecting, the display will showConnected under the name of the network.

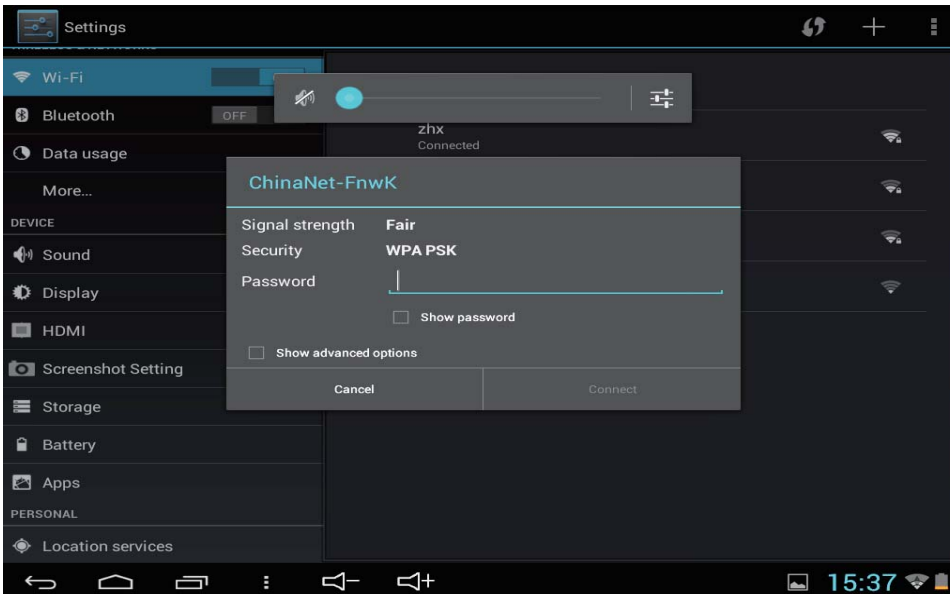

To conserve battery life, turn off Wi-Fi when not in use.


# Email
 
## Setting Up an Email account

1. Press Email icon under App menu.

2. Enter your email address and password, then press Next.

If this does not work, you will need to manually configure your account. Before attempting to configure manually, re-enter your email and password to make sure they are correct.

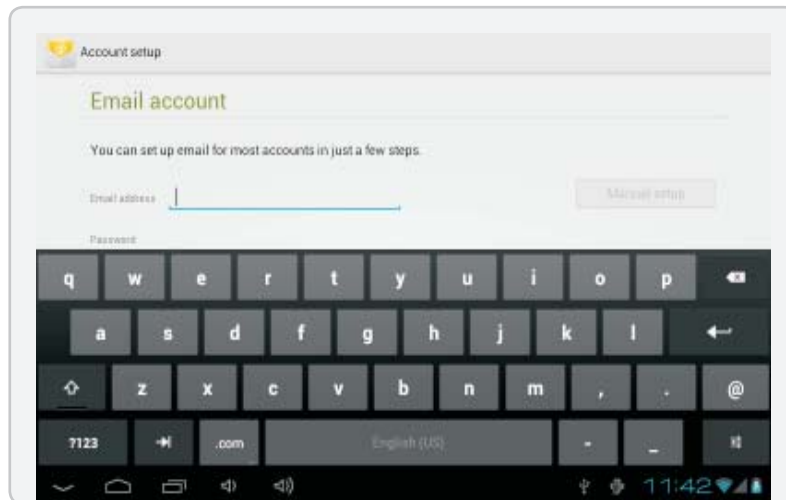

## Manually Configuring an Email account

It is recommended to consult an IT professional before attempting to manually configure your email address.

1. To set up your email manually, detailed information is required. Check your provider's website or phone support for individual provider information.

2. The first thing you will need to determine is the server type. While most servers are POP3, IMAP and Exchange are also supported services.

 
3. Enter your email address and password then press Next.

4. Fill in all information for the Incoming server portion of the manual setup.

5. Press Next and the app will test your settings. Wi-Fi is required to be active for this step.

6. Fill in all information for the Outgoing server settings.

7. Press Next and the app will test your settings. Wi-Fi is required to be active for this step.

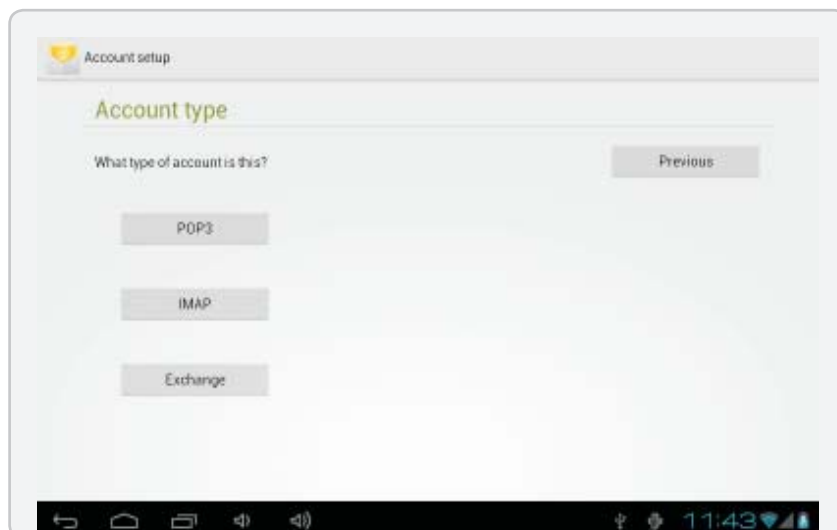


# Transferring Files

## Transferring Files with a Computer


1. To begin transferring files to your computer, plug one end of the included Mini-USB to USB cord into the unit, and the other into the USB port on a computer.



 2. Press the USB icon in the lower right hand corner.
3. Select USB Connected.
4. Press the Turn On USB Storage button.

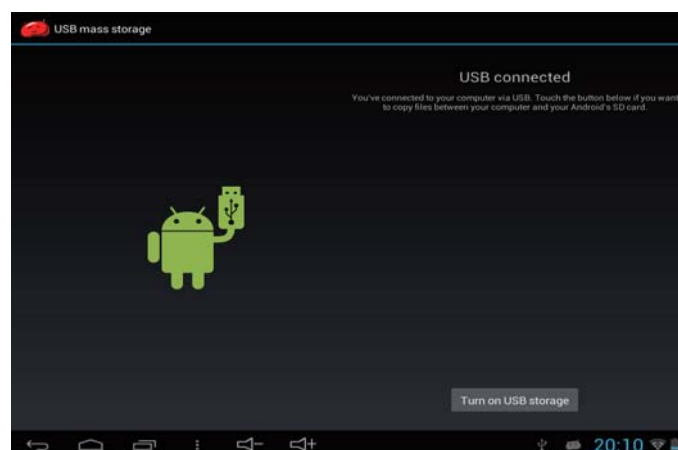

 - Using the native controls, accept any prompts on the connected computer.
5. You will now be able to transfer files to and from your computer.
  6. To end the sessions, press the Turn Off USB Storage button.

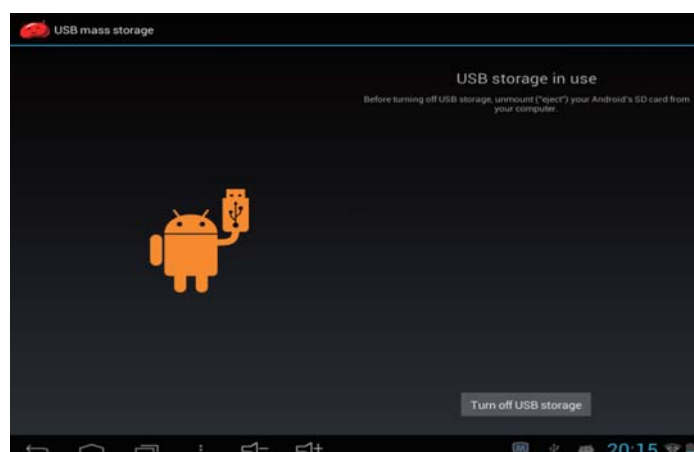

# Troubleshooting

## 1.1 Device can not connect to Wi-Fi

- Ensure the wireless network is working by testing it using another wireless device.
- Ensure the device and the wireless router is within the range of the wireless network to be connected to. Walls or other obstructions will reduce the possible distances between wireless devices.
- Ensure the security password being used is correct.

## 1.2 Device doesn't turn on

- You can not turn on the device when the battery charge is below the critical level, please charge the battery.
- Press the RESET button on the top of the device and check if it is restarting normally or not.
- Check if the charger is connected correctly.

## 1.3 Heat Issues

- When running multiple applications, using the screen on its brightest setting, or when being charged, this device can get quite hot. This is normal and should not cause any inconvenience when in use.

## 1.4 System has anomalies and doesn't work correctly

- Installing some third-party applications may cause the system not to operate correctly. Press the RESET button and perform a system reset to resolve this issue.

## 1.5 Cannot set E-mail Account or registration application

- Ensure that the MID is connected to a Wi-Fi network and can connect to the Internet.
- Ensure your E-mail settings have been entered correctly for the account being accessed.
- Make sure your system time and local time are correct.

## 1.6 Can not record

- Press the RESET button on the top of the device, then check if the record function works correctly.

## 1.7 The stand-by time of the device is too short

- The duration of the lithium battery varies with environmental temperature changes and the service conditions. If the environment temperature is too low or too high, the duration of the battery will be affected. It is recommended to use this device at normal temperature.
- Battery life is dependent on usage. High volume, WIFI, and the frequent use may cause the battery to be drained at a higher rate.

## 1.8 No sound via earphone

- Please check if the volume setting is 0.
- Please check if audio file is broken, and try to play another audio file to confirm. If the audio file is broken, it may cause severe noise or static.

## 1.9 The color distortion of video or picture display

- Press the RESET button on the top of the device to resolve this issue.

## 1.10 Can not copy files

- Please check if the device is connected to the computer correctly.
- Please check if the memory space is full.
- Please check if the USB cable is broken.

## 1.11 Other troubles Please follow up the steps as below to fix the other troubles before you return the MID/Tablet PC to us:

- Step 1: Press the RESET button on the top of the device, then check if the function works correctly;
- Step 2: Upgrade the firmware from the PC and restart the device and then check if the function works correctly.

# Specifications

Please visit [www.denver-electronics.com](http://www.denver-electronics.com). for the latest product information. Design, specifications, and manual are subject to change without notice.



## **Environment friendly disposal**

You can help protect the environment!

Please remember to respect the local regulations:

Hand-in the non-working electrical equipments to an appropriate waste disposal.