


尺寸：105x148mm 展开尺寸：420\*148mm

材质：100g书纸

工艺：双面黑白印刷，4折风琴页

## User Manual

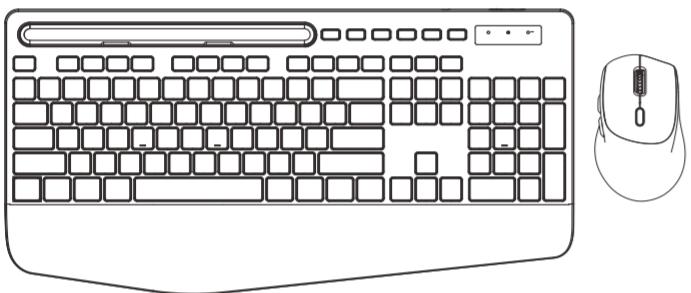

Email: truequeservice@outlook.com

正面


### Product Specification

#### Keyboard parameters:

|                              |                                                                             |
|------------------------------|-----------------------------------------------------------------------------|
| Product Size                 | 430x216x36mm                                                                |
| Product Weight               | 688g±20g                                                                    |
| Connectivity                 | 2.4G Wireless Connection                                                    |
| Battery                      | 1500mAh                                                                     |
| Operating Voltage            | 3.7V                                                                        |
| Working Time(with backlight) | 15Hours                                                                     |
| Charging Time                | 6Hours                                                                      |
| Connection Distance          | 8-10M                                                                       |
| Power Saving                 | The backlight will turn off after 90 seconds of inactivity on the keyboard. |
| Working Distance             | Within 10 meters                                                            |
| Key Life                     | 10 Millions Strokes                                                         |
| Mouse DPI                    | 800-1200-1600                                                               |
| Power saving                 | Enter sleep mode after 8 min without action                                 |
| Working Current              | 30 mA                                                                       |
| Working Hours                | 30Hours                                                                     |
| Connection distance          | 10M                                                                         |

Compatible Systems: Windows XP, Windows 7/8/10/11, Mac OS, iPad OS, iOS, Android

#### You will receive

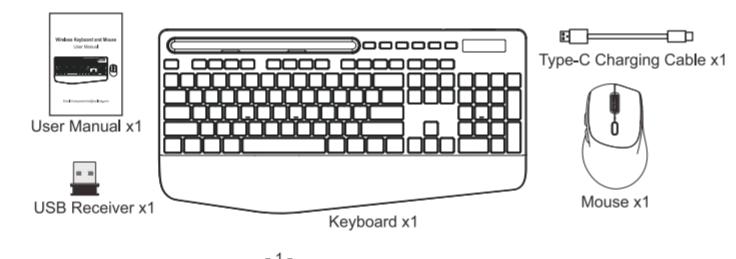

- 1 -

背面

### Multimedia button description

|  |                          |  |             |
|--|--------------------------|--|-------------|
|  | Media                    |  | Play/Pause  |
|  | Volume-                  |  | CD stop     |
|  | Volume+                  |  | Homepage    |
|  | Mute                     |  | Mail        |
|  | Previous Track           |  | My Computer |
|  | Next Track               |  | Favorites   |
|  | Toggle Backlight         |  | Refresh     |
|  | Brightness+              |  | Search      |
|  | Brightness-              |  | Stop        |
|  | Previous page of website |  | Calculator  |
|  | Next page of website     |  |             |

- 4 -

### FAQ

Q1: Keyboard can not be connected.

A1:

Please switch on the keyboard, + the light flashes quickly. Plug the 2.4GHz USB receiver into the computer.

Within 10 seconds, put the keyboard at 10 cm from the receiver for pairing.

When the light turns off, the keyboard pairing is successful.

Q2: What should I do if the keyboard gets delayed or stuck?

A2:

Please check there is no 2.4GHz device (e.g. router) nearby to interfere with the connection.

Please check there is no full metal case that may block the signal.

Q3: Where is my USB receiver?

A3:

The USB receiver is placed on top of the keyboard inside the package, please look for it carefully.


Please contact us to get the free replacement if you have lost the USB receiver.

- 5 -

### How to set up


1

Step 1: Please put the USB receiver into your computer.

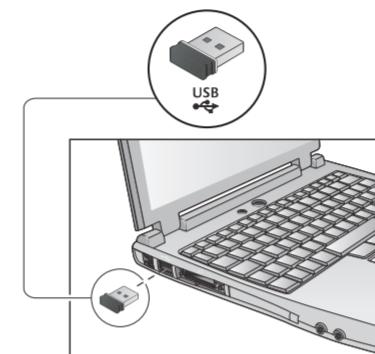

2

Step 2: Turn on the keyboard and mouse.

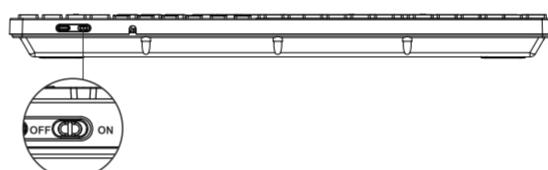


3

Step 3: The keyboard and mouse will automatically connect to the computer, no driver needed.

- 2 -

### Indicator Light

#### LED Indicator of the Keyboard

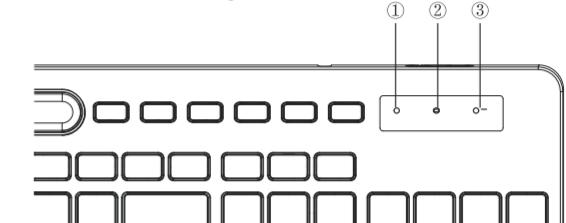

##### ① Num Lock

The Num Lock indicator will turn red when Num Lock is activated.


##### ② Caps Lock

The Caps Lock indicator will turn red when Caps Lock is activated.

##### ③ Scroll

The battery will run out soon when the light flashes slowly.

### Instruction for charging

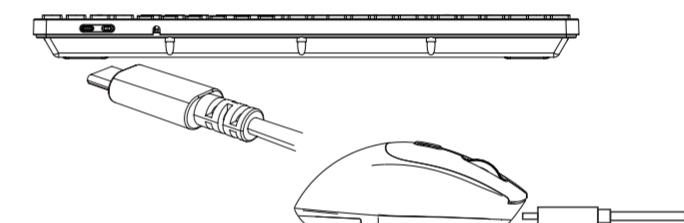

- 3 -

### Note

The multimedia keys are for Win 8 and Win 10, for other systems, there may be no function for some combined keys.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference

(2) This device must accept any interference received, including interference that may cause undesired operation.

### Cautions

1) Please fully charge the keyboard when you first receive the product as this helps to maintain the battery life.

2) Please remove the power supply when charging is complete.

3) If the keyboard is not used for a long time, it is recommended to turn off the power switch of the keyboard.

4) Please do not expose this product to water because it may cause short-circuit and damage the product.

5) Please do not drop or hit this product because shocks may damage the components inside.

6) Please do not place this product near the extreme heat or sources of fire.

- 6 -

- 7 -